

# ANALOG Poly Phase Multifunction Energy Metering IC with Total and Fundamental Powers with Total and Fundamental Powers

**Preliminary Technical Data** 

**ADE7878** 

#### **FEATURES**

Highly accurate; supports EN 50470-1, EN 50470-3, IEC 62053-21, IEC 62053-22 and IEC 62053-23

Compatible with 3-phase, 3 or 4 wire (delta or wye) and other 3-phase services

Supplies total (fundamental and harmonic) active/reactive/ apparent energy and fundamental active/reactive energy on each phase and on the overall system

Less than 0.1% error in active and reactive energy over a dynamic range of 1000 to 1 at 25°C

Less than 0.2% error in active and reactive energy over a dynamic range of 3000 to 1 at 25°C

Supports current transformer and di/dt current sensors **Dedicated ADC channel for the neutral current input** Less than 0.1% error in voltage and current rms over a dynamic range of 1000 to 1 at 25°C

Supplies sampled waveform data on all 3 phases and neutral

Selectable No-load threshold level for total and fundamental active and reactive powers and for apparent powers

Low power battery mode monitors phase currents for antitampering detection

Phase angle measurements in both current and voltage channels with max 0.3° error

Wide supply voltage operation 2.4 to 3.7V Battery supply input for missing neutral operation Reference 1.2 V (drift 10 ppm/°C typ) with external overdrive capability

Single 3.3 V supply 40-Lead Frame Chip Scale (LFCSP) Lead Free Package Operating temperature -40° to 85°C Flexible I2C, SPI®, HSDC serial interfaces

#### **GENERAL DESCRIPTION**

The ADE78781 is a high accuracy, 3-phase electrical energy measurement IC with serial interfaces and three flexible pulse outputs. The ADE7878 incorporates second-order  $\Sigma$ - $\Delta$  ADCs, a digital integrator, reference circuitry, and all the signal processing required to perform total (fundamental and harmonic) active, reactive and apparent energy measurement, fundamental only active and reactive energy measurement and rms calculations. A fixed function digital signal processor (DSP) executes this signal processing.

The ADE 7878 is suitable to measure active, reactive, and apparent energy in various 3-phase configurations, such as WYE or DELTA services, with both three and four wires. The ADE7878 provides system calibration features for each phase, that is, rms offset correction, phase calibration, and gain calibration. The CF1, CF2 and CF3 logic outputs provide a wide choice of power information: total/fundamental active/reactive power, total apparent power or sum of current rms values.

The ADE7878 has waveform sample registers that allow access to all ADC outputs. The device also incorporates power quality measurements such as short duration low or high voltage detections, short duration high current variations, line voltage period measurement and angles between phase voltages and currents. Two serial interfaces can be used to communicate with the ADE7878: SPI or I<sup>2</sup>C while a dedicated high speed interface, HSDC (High Speed Data Capture) port, can be used in conjunction with I2C to provide access to the ADC outputs and real time power information. The ADE7878 has also two interrupt request pins,  $\overline{IRQ0}$  and  $\overline{IRQ1}$ , to indicate that an enabled interrupt event has occurred.

Three specially designed low power modes ensure the continuity of the energy accumulation when the ADE7878 is in tampering situation.

The ADE7878 is available in 40-lead LFCSP lead free package.

<sup>1</sup> U.S. patents pending.

## **ADE7878**

## **TABLE OF CONTENTS**

Features	Phase Voltage Sag Detection
General Description	Peak Detection
Functional Block Diagram4	Overvoltage and Overcurrent Detection
Specifications5	Neutral Current Mismatch
Timing Characteristics	Phase Compensation
Absolute Maximum Ratings11	Reference Circuit
ESD Caution	Digital Signal Processor
Pin Configuration and Function Descriptions12	Root Mean Square Measurement
Terminology14	Current RMS Calculation
Typical Performance Characteristics	Current Mean Absolute Value calculation
Test Circuits	Voltage Channel RMS Calculation
Power Management17	Voltage RMS Offset Compensation36
PSM0 - Normal Power Mode17	Active Power Calculation
PSM1 – Reduced Power Mode17	Total Active Power Calculation
PSM2 – Low Power Mode17	Fundamental Active power calculation
PSM3 – Sleep Mode	Active Power Gain Calibration38
Power Up Procedure	Active Power Offset Calibration
Hardware Reset19	Sign of Active Power Calculation39
Software Reset Functionality	Active Energy Calculation39
Theory of Operation21	Integration Time Under Steady Load
Analog Inputs21	Energy Accumulation Modes
Analog to Digital Conversion21	Line Cycle Active Energy Accumulation Mode 41
Antialiasing Filter	Reactive Power Calculation
ADC Transfer Function	Reactive Power Gain Calibration
Current Channel ADC	Reactive Power Offset Calibration
Current Waveform Gain Registers23	Sign of Reactive Power Calculation43
Current Channel HPF23	Reactive Energy Calculation
Current Channel Sampling23	Integration Time Under Steady Load45
di/dt Curent Sensor And Digital Integrator24	Energy Accumulation Modes
Voltage Channel ADC25	Line Cycle Reactive Energy Accumulation Mode 45
Voltage Waveform Gain Registers25	Apparent Power Calculation
Voltage Channel HPF25	Apparent Power Gain Calibration46
Voltage Channel Sampling25	Apparent Power Offset Calibration 47
Changing Phase Voltage Data Path26	Apparent Power Calculation using VNOM47
Power Quality Measurements	Apparent Energy Calculation
Zero Crossing Detection	Integration Time Under Steady Load
Zero-Crossing Timeout	Energy Accumulation Mode
Phase Sequence Detection27	Line Cycle Apparent Energy Accumulation Mode 48
Time Interval Between Phases	Waveform Sampling Mode
Period Measurement29	Energy to Frequency Conversion

# **Preliminary Technical Data**

## **ADE7878**

Synchronizing energy registers with CFx outputs	50
CF outputs for various accumulation modes	5
Sign of sum of phase powers in CFx data path	52
No-Load Condition	53
No-load detection based on total active and reactive powers	53
No-load detection based on fundamental active and reactive powers	53
No-load detection based on apparent power	5
Checksum Register	5
Interrunts	51

Using the Interrupts with an MCU	55
Serial Interfaces	56
Serial interface choice	56
I <sup>2</sup> C Compatible Interface	56
SPI Compatible Interface	58
HSDC Interface	59
Registers List	63
Outline Dimensions	80
Ordering Guide	80

### **FUNCTIONAL BLOCK DIAGRAM**

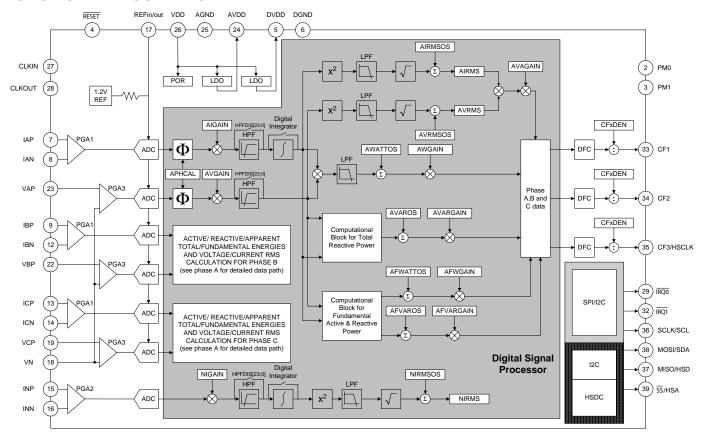


Figure 1. ADE7878 Functional Block Diagram

## **SPECIFICATIONS**

 $VDD = 3.3~V \pm 10\%, AGND = DGND = 0~V, on-chip~reference, CLKIN = 16.384~MHz, T_{MIN}~to~T_{MAX} = -40^{\circ}C~to~+85^{\circ}C.$ 

Table 1.

Parameter <sup>1, 2</sup>	Specification	Unit	Test Conditions/Comments
ACCURACY			
ACTIVE ENERGY MEASUREMENT			
Total Active Energy Measurement Error	0.1	% typ	Over a dynamic range of 1000 to 1, PGA=1
(per Phase)	0.2	% typ	Over a dynamic range of 3000 to 1, PGA=1
Fundamental Active Energy	0.1	% typ	Over a dynamic range of 1000 to 1, PGA=1
Measurement Error (per Phase)	0.2	% typ	Over a dynamic range of 3000 to 1, PGA=1
Phase Error Between Channels			Line frequency = 45 Hz to 65 Hz, HPF on
PF = 0.8 Capacitive	±0.05	°max	Phase lead 37°
PF = 0.5 Inductive	±0.05	°max	Phase lag 60°
AC Power Supply Rejection			TBD Conditions
Output Frequency Variation	0.01	% typ	
DC Power Supply Rejection			TBD Conditions
Output Frequency Variation	0.01	% typ	
Total Active Energy Measurement Bandwidth	4	kHz typ	
REACTIVE ENERGY MEASUREMENT			
Total Reactive Energy Measurement	0.1	% typ	Over a dynamic range of 1000 to 1, PGA=1
Error (per Phase)	0.1	% typ % typ	Over a dynamic range of 1000 to 1, PGA=1  Over a dynamic range of 3000 to 1, PGA=1
Fundamental Reactive Energy	0.2	% typ % typ	Over a dynamic range of 1000 to 1, PGA=1
Measurement Error (per Phase)	0.1		Over a dynamic range of 3000 to 1, PGA=1
Phase Error Between Channels	0.2	% typ	Line frequency = 45 Hz to 65 Hz, HPF on
PF = 0.8 Capacitive	±0.05	°max	Phase lead 37°
PF = 0.5 Inductive	±0.05	°max	Phase lag 60°
FF = 0.5 inductive	±0.03	IIIdX	Fridse lag 00
AC Power Supply Rejection			TBD Conditions
Output Frequency Variation	0.01	% typ	
DC Power Supply Rejection			TBD Conditions
Output Frequency Variation	0.01	% typ	
Total Reactive Energy Measurement Bandwidth	4	kHz typ	
RMS MEASUREMENTS			
IRMS and VRMS Measurement Bandwidth	4	kHz typ	
IRMS and VRMS Measurement Error (PSM0 mode <sup>3</sup> )	0.1	% typ	Over a dynamic range of 1000:1, PGA=1
MEAN ABSOLUTE VALUE (MAV)			
MEASUREMENT	260	11=407	
IMAV Measurement Bandwidth (PSM1 mode <sup>3</sup> )	260	Hz typ	
IMAV Measurement Error (PSM1 mode <sup>3</sup> )	0.5	% typ	Over a dynamic range of 200:1, PGA=1
ANALOG INPUTS			
Maximum Signal Levels	±500	mV peak, Max	Differential inputs: IAP-IAN, IBP-IBN, ICP-ICN, INP-INN Single ended inputs: VAP-VN, VBP-VN, VCP-VN
Input Impedance (DC)	400	kΩ min	
ADC Offset Error	±25	mV max	Uncalibrated error, see the Terminology section
Gain Error	±23	% typ	External 1.2 V reference
WAVEFORM SAMPLING	<u> </u>	/0 typ	Sampling CLKIN/2048, 16.384 MHz/2048 = 8 kSPS
			1
Current and Voltage Channels			See Waveform Sampling Mode chapter

Rev. PrG | Page 5 of 83

## **ADE7878**

Parameter <sup>1, 2</sup>	Specification	Unit	Test Conditions/Comments
Signal-to-Noise Ratio	55	dB typ	
Signal-to-Noise Plus Distortion	62	dB typ	
Bandwidth (-3 dB)	4	kHz	
TIME INTERVAL BETWEEN PHASES			
Measurement error	0.3	deg typ	Line frequency = 45 Hz to 65 Hz, HPF on
CF1, CF2, CF3 PULSE OUTPUTS			
Maximum Output Frequency	8	KHz	
Duty Cycle	50	%	If CF1, CF2 or CF3 frequency >6.25Hz
Active Low Pulse Width	80	Msec	If CF1, CF2 or CF3 frequency <6.25Hz
Jitter	0.04	% typ	For CF1, CF2 or CF3 frequency of 1Hz
REFERENCE INPUT			
REF <sub>IN/OUT</sub> Input Voltage Range	1.3	V max	1.2 V + 8%
	1.1	V min	1.2 V – 8%
Input Capacitance	10	pF max	
ON-CHIP REFERENCE (PSM0 and PSM1 modes <sup>3</sup> )			Nominal 1.2 V at REF <sub>IN/OUT</sub> pin
Reference Error	±0.9	mV max	
Output Impedance	4	kΩ min	
Temperature Coefficient	10	ppm/°C	
		typ	
	50	ppm/°C	
		max	
ON-CHIP REFERENCE (PSM2 mode <sup>3</sup> )			Nominal 1.2V
Reference Error	±0.1	V max	
COMPARATOR OFFSET (PSM2 mode <sup>3</sup> )	±2.5	mV typ	
CLKIN			All specifications CLKIN of 16.384 MHz
Input Clock Frequency	16.384	MHz max	
Crystal equivalent series resistance	30	KΩ min	
	50	KΩ max	
CLKIN input capacitance	12	pF typ	
CLKOUT output capacitance	12	pF typ	
LOGIC INPUTS—MOSI/SDA, SCLK/SCL,			
CLKIN and $\overline{\text{SS}}$			
Input High Voltage, V <sub>INH</sub>	2.4	V min	$VDD = 3.3 V \pm 10\%$
Input Low Voltage, V <sub>INL</sub>	0.8	V max	$VDD = 3.3 V \pm 10\%$
Input Current, I <sub>IN</sub>	±3	μA max	Typical 10 nA, $V_{IN} = 0 V$ to VDD
Input Capacitance, C <sub>IN</sub>	10	pF max	
LOGIC OUTPUTS— IRQ0 , IRQ1 ,			DVDD = 3.3 V ± 10%
MISO/HSDATA, HSCLK and CLKOUT			
Output High Voltage, VoH	3.0	V min	I <sub>SOURCE</sub> = 800 μA
Output Low Voltage, Vol	0.4	V max	$I_{SINK} = 2 \text{ mA}$
CF1, CF2, CF3			
Output High Voltage, V <sub>OH</sub>	2.4	V min	$I_{SOURCE} = 500 \mu\text{A}$
Output Low Voltage, V <sub>OL</sub>	0.4	V max	I <sub>SINK</sub> = 2 mA
POWER SUPPLY in PSM0 mode			For specified performance
VDD	3.0	V min	3.3 V – 10%
	3.6	V max	3.3 V + 10%
$I_{DD}$	TBD	mA typ.	
POWER SUPPLY in PSM1, PSM2, PSM3 modes <sup>3</sup>			For specified performance
VDD	2.4	V min	
	- 1	1	
	3.7	V max	
I <sub>DD</sub> in PSM1mode	3.7 TBD	V max mA typ.	

Rev. PrG| Page 6 of 83

**Preliminary Technical Data** 

**ADE7878** 

Parameter <sup>1, 2</sup>	Specification	Unit	Test Conditions/Comments
I <sub>DD</sub> in PSM3 mode <sup>3</sup>	TBD	μA typ.	

See the Typical Performance Characteristics.
 See the Terminology section for a definition of the parameters.
 See Power Management chapter for details on various power modes of the ADE7878

#### **TIMING CHARACTERISTICS**

 $VDD = 3.3~V \pm 10\%, AGND = DGND = 0~V, on-chip~reference, CLKIN = 16.384~MHz~, T_{MIN}~to~T_{MAX} = -40 ^{\circ}C~to~+85 ^{\circ}C.$ 

Table 2. I<sup>2</sup>C Compatible Interface Timing Parameter

		Stan	dard mode	Fast	t Mode	
Parameter	Symbol	Min	Max	Min	Max	Unit
SCL clock frequency	f <sub>SCL</sub>	0	100	0	400	kHz
Hold time (repeated) START condition.	t <sub>HD;STA</sub>	4.0		0.6		μs
LOW period of SCL clock	t <sub>LOW</sub>	4.7		1.3		μs
HIGH period of SCL clock	t <sub>HIGH</sub>	4.0		0.6		μs
Set-up time for a repeated START condition	t <sub>SU;STA</sub>	4.7		0.6		μs
Data hold time	t <sub>HD;DAT</sub>	0	3.45	0	0.9	μs
Data setup time	t <sub>SU;DAT</sub>	250		100		ns
Rise time of both SDA and SCL signals	t <sub>r</sub>		1000	20	300	ns
Fall time of both SDA and SCL signals	t <sub>f</sub>		300	20	300	ns
Setup time for STOP condition	t <sub>su;sto</sub>	4.0		0.6		μs
Bus free time between a STOP and START condition	t <sub>BUF</sub>	4.7		1.3		μs
Pulse width of suppressed spikes	t <sub>SP</sub>	na			50	ns

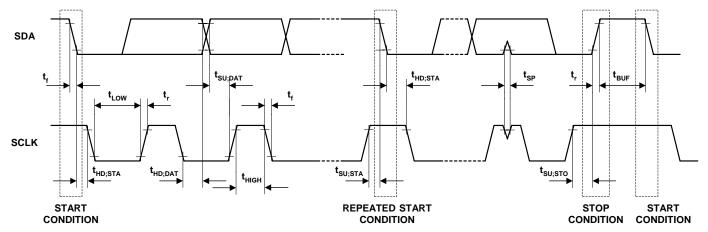


Figure 2. I<sup>2</sup>C Compatible Interface Timing

Table 3. SPI INTERFACE TIMING Parameter

Parameter	Symbol	Min	Max	Unit
SS to SCLK edge	t <sub>SS</sub>	50		ns
SCLK period		400		ns
SCLK low pulse width	t <sub>SL</sub>	175		ns
SCLK high pulse width	<b>t</b> sH	175		ns
Data output valid after SCLK edge	t <sub>DAV</sub>	5	40	ns
Data input setup time before SCLK edge	t <sub>DSU</sub>	20		ns
Data input hold time after SCLK edge	t <sub>DHD</sub>	5		ns
Data output fall time	t <sub>DF</sub>		20	ns
Data output rise time	t <sub>DR</sub>		20	ns
SCLK rise time	t <sub>sr</sub>		20	ns
SCLK fall time	t <sub>SF</sub>		20	ns
MISO disable after $\overline{\rm SS}$ rising edge	t <sub>DIS</sub>	5	40	ns
SS high after SCLK edge	tsfs	0		ns

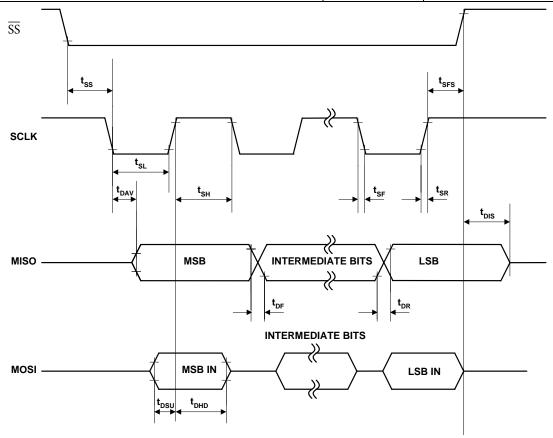


Figure 3. SPI Interface Timing

**Table 4. HSDC INTERFACE TIMING Parameter** 

Parameter	Symbol	Min	Max	Unit
HSA to SCLK edge	t <sub>ss</sub>	0		ns
HSCLK period		125		
HSCLK low pulse width	t <sub>SL</sub>	50		ns
HSCLK high pulse width	tsн	50		ns
Data output valid after HSCLK edge	t <sub>DAV</sub>	5	40	ns
Data output fall time	t <sub>DF</sub>		20	ns
Data output rise time	t <sub>DR</sub>		20	ns
HSCLK rise time	t <sub>sr</sub>		10	ns
HSCLK fall time	t <sub>SF</sub>		10	ns
HSD disable after HAS rising edge	t <sub>DIS</sub>	40		ns
HSA high after HSCLK edge	t <sub>SFS</sub>	0		ns

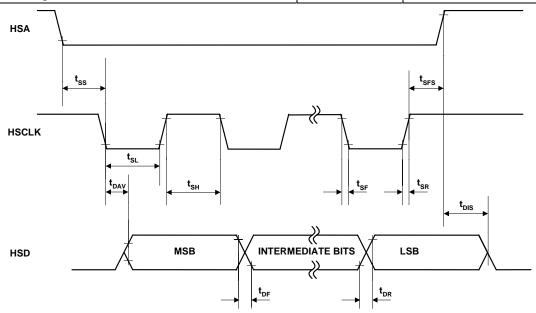


Figure 4. HSDC Interface Timing

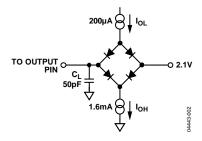


Figure 5. Load Circuit for Timing Specifications

### **ABSOLUTE MAXIMUM RATINGS**

 $T_A = 25$ °C, unless otherwise noted.

**Table 5. Absolute Maximum Ratings** 

Table 5. Absolute Maximum Ratings				
Parameter	Rating			
VDD to AGND	–0.3 V to +3.7 V			
VDD to DGND	–0.3 V to +3.7 V			
Analog Input Voltage to AGND, IAP, IAN, IBP, IBN, ICP, ICN, INP, INN, VAP, VBP, VCP, VN	–2 V to +2 V			
Reference Input Voltage to AGND	-0.3  V to VDD + 0.3  V			
Digital Input Voltage to DGND	-0.3 V to VDD $+ 0.3 V$			
Digital Output Voltage to DGND	-0.3 V to VDD $+ 0.3 V$			
Operating Temperature				
Industrial Range	-40°C to +85°C			
Storage Temperature Range	−65°C to +150°C			
Junction Temperature	TBD°C			
32-Lead LQFP, Power Dissipation	TBD mW			
$\theta_{JA}$ Thermal Impedance	TBD°C/W			
Lead Temperature, Soldering				
Vapor Phase (TBD sec)	TBD°C			
Infrared (TBD sec)	TBD°C			
32-Lead LFCSP, Power Dissipation	TBD mW			
$\theta_{JA}$ Thermal Impedance	TBD°C/W			
Lead Temperature, Soldering				
Vapor Phase (TBD sec)	TBD°C			
Infrared (TBD sec)	TBD°C			

Stresses above those listed under Absolute Maximum Ratings may cause permanent damage to the device. This is a stress rating only; functional operation of the device at these or any other conditions above those listed in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

#### **ESD CAUTION**



**ESD** (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

### PIN CONFIGURATION AND FUNCTION DESCRIPTIONS

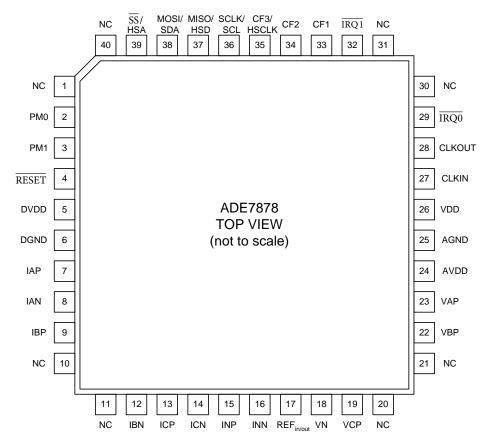


Figure 6. ADE7878 Pin Configuration

**Table 6. Pin Function Descriptions** 

Pin No.	Mnemonic	Description
1,10,11,20,21,30,31,40	NC	These pins are not connected internally.
2	PM0	Power Mode pin 0. This pin combined with PM1 defines the power mode of the ADE7878 as described in Table 7.
3	PM1	Power Mode pin 1. This pin combined with PM0 defines the power mode of the ADE7878 as described in Table 7.
4	RESET	Reset Input, active low.
5	DVDD	This pin provides access to the on-chip 2.5V digital LDO. No external active circuitry should be connected to this pin. This pin should be decoupled with a 4.7 $\mu$ F capacitor in parallel with a ceramic 100 nF capacitor.
6	DGND	This provides the ground reference for the digital circuitry in the ADE7878.
7,8, 9,12, 13,14, 15,16	IAP, IAN, IBP, IBN, ICP, ICN, INP, INN	Analog Inputs for Current Channel. This channel is used with the current transducers and is referenced in this document as the current channel. These inputs are fully differential voltage inputs with a maximum differential level of $\pm 0.5$ V. This channel has also two different internal PGAs, one for IA, IB and IC and one for IN.
17	REF <sub>IN/OUT</sub>	This pin provides access to the on-chip voltage reference. The on-chip reference has a nominal value of 1.2 V $\pm$ 0.075% and a maximum temperature coefficient of 50 ppm/°C. An external reference source with 1.2V $\pm$ 8% can also be connected at this pin. In either case, this pin should be decoupled to AGND with a 10 $\mu$ F ceramic capacitor. After reset, the on-chip reference is enabled.
18, 19, 22, 23	VN, VCP, VBP, VAP	Analog Inputs for the Voltage Channel. This channel is used with the voltage transducer and is referenced as the voltage channel in this document. These inputs are single-ended voltage inputs with the maximum signal level of $\pm 0.5$ V with respect to VN for specified operation. This channel has also an internal PGA.

24	AVDD	This pin provides access to the on-chip 2.5V analog LDO. No external active circuitry should be connected to this pin. This pin should be decoupled with a 4.7 $\mu$ F capacitor in parallel with a ceramic 100 nF capacitor.
25	AGND	This pin provides the ground reference for the analog circuitry in the ADE7878. This pin should be tied to the analog ground plane or the quietest ground reference in the system. This quiet ground reference should be used for all analog circuitry, for example, antialiasing filters, current, and voltage transducers.
26	VDD	This pin provides the supply voltage for the ADE7878. In PSM0 (normal power mode) the supply voltage should be maintained at $3.3\text{V}\pm10\%$ for specified operation. In PSM1 (reduced power mode), PSM2 (low power mode) and PSM3 (sleep mode), when the ADE7878 is supplied from a battery, the supply voltage should be maintained between 2.4 and 3.7V. This pin should be decoupled to DGND with a 10 $\mu\text{F}$ capacitor in parallel with a ceramic 100 nF capacitor.
27	CLKIN	Master Clock for ADE7878. An external clock can be provided at this logic input.  Alternatively, a parallel resonant AT crystal can be connected across CLKIN and CLKOUT to provide a clock source for the ADE7878. The clock frequency for specified operation is 16.384 MHz. Ceramic load capacitors of a few tens of picofarad should be used with the gate oscillator circuit. Refer to the crystal manufacturer's data sheet for the load capacitance requirements.
28	CLKOUT	A crystal can be connected across this pin and CLKIN as previously described to provide a clock source for the ADE7878. The CLKOUT pin can drive one CMOS load when either an external clock is supplied at CLKIN or a crystal is being used.
29,	IRQ0 , IRQ1	Interrupt Request Outputs. These are active low logic outputs. See the
32	11120 / 11121	Interrupts section for a detailed presentation of the events that may trigger interrupts.
33,34,35	CF1,CF2,CF3/HSCLK	Calibration Frequency (CF) Logic Outputs. Provide power information based on CF1SEL, CF2SEL, CF3SEL bits in CFMODE register. These outputs are used for operational and calibration purposes. The full-scale output frequency can be scaled by writing to the respectively CF1DEN, CF2DEN, CF3DEN registers (see the Energy to Frequency Conversion section).CF3 is multiplexed with the serial clock output of HSDC port.
36	SCLK/SCL	Serial Clock Input for SPI port / Serial Clock Input for I <sup>2</sup> C port. All serial data transfers are synchronized to this clock (see the Serial Interfaces section). This pin has a Schmidt-trigger input for use with a clock source that has a slow edge transition time, for example, optoisolator outputs.
37	MISO/HSD	Data Out for SPI port / Data Out for HSDC port
38	MOSI/SDA	Data In for SPI port / Data Out for I <sup>2</sup> C port
39	SS /HSA	Slave Select for SPI port / HSDC port active

### **TERMINOLOGY**

#### **Measurement Error**

The error associated with the energy measurement made by the ADE7878 is defined by

Measurement Error =

$$\frac{Energy \ Registered \ by \ ADE7878 - True \ Energy}{True \ Energy} \times 100\%$$
 (1)

#### **Phase Error Between Channels**

The high-pass filter (HPF) and digital integrator introduce a slight phase mismatch between the current and the voltage channel. The all-digital design ensures that the phase matching between the current channels and voltage channels in all three phases is within  $\pm 0.1^{\circ}$  over a range of 45 Hz to 65 Hz and  $\pm 0.2^{\circ}$  over a range of 40 Hz to 1 kHz. This internal phase mismatch can be combined with the external phase error (from current sensor or component tolerance) and calibrated with the phase calibration registers.

#### Power Supply Rejection (PSR)

This quantifies the ADE7878 measurement error as a percentage of reading when the power supplies are varied. For the ac PSR measurement, a reading at nominal supplies (3.3 V) is taken. A second reading is obtained with the same input signal levels when an ac signal (TBD mV rms/TBD Hz) is introduced onto the supplies. Any error introduced by this ac signal is expressed as a percentage of reading—see the Measurement Error definition.

For the dc PSR measurement, a reading at nominal supplies (3.3 V) is taken. A second reading is obtained with the same input signal levels when the power supplies are varied  $\pm 10\%$ . Any error introduced is again expressed as a percentage of the reading.

#### **ADC Offset Error**

This refers to the dc offset associated with the analog inputs to the ADCs. It means that with the analog inputs connected to AGND that the ADCs still see a dc analog input signal. The magnitude of the offset depends on the gain and input range selection (see the Typical Performance Characteristics section). However, the offset is removed from the current and voltage channels by a HPF and the power calculation is not affected by this offset.

#### **Gain Error**

The gain error in the ADCs of the ADE7878 is defined as the difference between the measured ADC output code (minus the offset) and the ideal output code (see the Current Channel ADC section and the Voltage Channel ADC section). The difference is expressed as a percentage of the ideal code.

#### **Gain Error Match**

The gain error match is defined as the gain error (minus the offset) obtained when switching between a gain of 1, 2, 4, 8 or 16. It is expressed as a percentage of the output ADC code obtained under a gain of 1.

#### **CF Jitter**

The period of pulses at one of CF1, CF2 or CF3 pins is continuously measured. The maximum, minimum and average values of 4 consecutive pulses are computed:

$$MAX = \max(Period_1, Period_2, Period_3)$$

$$MIN = min(Period_0, Period_1, Period_2, Period_3)$$

$$AVG = \frac{Period_0 + Period_1 + Period_2 + Period_3}{4}$$

The CF jitter is then computed as

$$CF_{jitter} = \frac{MAX - MIN}{AVG} \cdot 100[\%]$$
 (2)

## TYPICAL PERFORMANCE CHARACTERISTICS

ТВГ

## **ADE7878**

## **TEST CIRCUITS**

TBD

Figure 7. Test Circuit for Integrator Off

TBD

Figure 8. Test Circuit for Integrator On

### **POWER MANAGEMENT**

The ADE7878 has four modes of operation, determined by the state of PM0 and PM1 pins (see Table 7). These pins provide a complete control of ADE7878 operation and could easily be connected to an external microprocessor I/O. PM0 and PM1 pins have internal pull up resistors. Table 9 presents all characteristics of the power modes.

Table 10 presents actions that are recommended before and after setting a new power mode.

Table 7. ADE7878 Power Supply Modes

Power Supply Modes	PM1	PM0
PSM0 – normal power mode	0	1
PSM1 – reduced power mode	0	0
PSM2 – low power mode	1	0
PSM3 – sleep mode	1	1

#### PSM0 - Normal Power Mode

In this mode, the ADE7878 is fully functional. The PM0 and PM1 pins are set to high and respectively low for the ADE7878 to enter this mode.

If the ADE7878 is in one of PSM1, PSM2 or PSM3 modes and is switched into PSM0 mode, then all control registers take the default values with the exception of the threshold register LPOILVL[7:0] used in PSM2 mode and CONFIG2[7:0] register that maintain their value.

The ADE7878 signals the end of the transition period by triggering  $\overline{IRQ1}$  interrupt pin low and setting bit 15 (RSTDONE) in STATUS1[31:0] register to 1. This bit is 0 during the transition period and becomes 1 when the transition is finished. The status bit is cleared and  $\overline{IRQ1}$  pin is set back high by writing STATUS1[31:0] register with the corresponding bit set to 1. The bit 15 (RSTDONE) in interrupt mask register does not have any functionality attached even if  $\overline{IRQ1}$  pin goes low when bit 15 (RSTDONE) in STATUS1[31:0] is set to 1. This makes RSTDONE interrupt unmaskable.

#### PSM1 - Reduced Power Mode

In this mode, the ADE7878 only measures the Mean Absolute Values (MAV) of the three phase currents and stores the results in AIMAV[19:0], BIMAV[19:0], CIMAV[19:0] 20-bit registers. This mode is useful in missing neutral cases in which the voltage supply of the ADE7878 is provided by an external battery. The serial ports I²C or SPI are enabled in this mode and the active port can be used to read AIMAV, BIMAV, CIMAV registers. It is not recommended to read any of the other registers because their value is not guaranteed in this mode.

Similarly, a write operation is not taken into account by the ADE7878 in this mode. In summary, in this mode, it is not recommended to access any other register besides AIMAV, BIMAV and CIMAV. The circuit that measures these estimates of RMS values is also active during PSM0, so its calibration can be done in PSM0 mode, as well as in PSM1. Note the ADE7878

does not provide any register to store or process the corrections resulting from the calibration process. The external microprocessor should store the gain values in connection with these measurements and use them during PSM1. See Current Mean Absolute Value calculation section for more details on xIMAV, x=A,B,C registers.

The 20-bit Mean Absolute Value measurements done in PSM1, although available also in PSM0, are different from the rms measurements of phase currents and voltages executed only in PSM0 and stored in xIRMS and yVRMS 24-bit registers (x=A,B,C,N, y=A,B,C). See Current Mean Absolute Value calculation section for details.

If the ADE7878 is set in PSM1 mode while in PSM0, the ADE7878 begins the mean absolute value calculations right away, without any delay. xIMAV, x=A,B,C registers can be accessed at any time. But if the ADE7878 is set in PSM1 mode while in PSM2 or PSM3 modes, then the ADE7878 signals the start of the mean absolute value computations by triggering  $\overline{IRQ1}$  pin low. xIMAV, x=A,B,C registers can be accessed only after this moment.

#### PSM2 - Low Power Mode

In this mode, the ADE7878 compares all phase currents against a threshold for a period of 0.02 x (LPLINE+1) seconds, independent of the line frequency. LPLINE are bits 7-3 of LPOILVL[7:0] register (Table 8). The threshold is derived from bits 2-0 (LPOIL) of LPOILVL[7:0] register as LPOIL/8 of full scale. Every time one phase current becomes greater than the threshold, a counter is incremented. If every phase counter remains below LPLINE+1 at the end of the measurement period, then  $\overline{IRQ0}$  pin is triggered low. If a single phase counter becomes greater or equal to LPLINE+1 at the end of the measurement period,  $\overline{IRQ1}$  pin is triggered low. Figure 9 illustrates how the ADE7878 behaves in PSM2 mode when LPLINE=2 and LPOIL=3. The test period is three 50Hz cycles (60ms) and the phase A current goes above LPOIL threshold three times. At the end of the test period,  $\overline{IRQ1}$  pin is triggered low.

Table 8. LPOILVL register

Bit	Mnemonic	Default	Description
2,1,0	LPOIL	111	Threshold is put at a value corresponding to full scale multiplied by LPOIL/8
7-3	LPLINE	00000	The measurement period is (LPLINE+1)/50 seconds

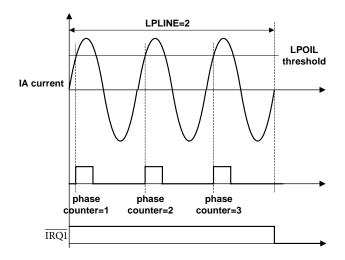


Figure 9: PSM2 mode triggering  $\overline{IRQ1}$  pin for LPLINE=2, 50Hz systems

The I²C or SPI ports are not functional during this mode. PSM2 mode reduces the power consumption required to monitor the currents when there is no voltage input and the voltage supply of the ADE7878 is provided by an external battery. If  $\overline{IRQ0}$  pin is triggered low at the end of measurement period, this signifies all phase currents stayed below threshold and therefore there is no current flowing through the system. The external microprocessor should at this point set the ADE7878 in sleep mode PSM3. If  $\overline{IRQ1}$  pin is triggered low at the end of the measurement period, this signifies that at least one current input is above the defined threshold and that current is flowing through the system although no voltage is present at the ADE7878 pins. This situation is often called missing neutral and is considered a tampering situation. The external microprocessor should at this point set the ADE7878

in PSM1 mode, measure mean absolute values of phase currents and integrate the energy based on their values and the nominal voltage.

It is recommended to use the ADE7878 in PSM2 mode when bits 2-0 (PGA1) of GAIN[15:0] register are equal to 1 or 2. These bits represent the gain in the current channel data path. It is not recommended to use the ADE7878 in PSM2 mode when PGA1 bits are equal to 4, 8 or 16.

#### PSM3 - Sleep Mode

In this mode, ADE7878 has most of its internal circuits turned off. The current consumption is the lowest. The I²C, HSDC or SPI ports are not functional during this mode. The pins  $\overline{\rm RESET}$ , SCLK/SCL, MOSI/SDA and  $\overline{\it SS}$ /HSA should be set high.

#### **Power Up Procedure**

The ADE7878 contains an on-chip power supply monitor that supervises the power supply VDD. At power up, until VDD reaches 2V ± 10%, the chip is in an inactive state. As VDD crosses this threshold, the power supply monitor keeps the chip in this inactive state for 26msec more, allowing VDD to achieve 3.3V-10%, the minimum recommended supply voltage. As PM0 and PM1 pins have internal pull up resistors and the external microprocessor keeps them high, the ADE7878 always powers up in sleep mode PSM3. Then, an external circuit (i.e. microprocessor) sets PM1 pin to low level, allowing the ADE7878 to enter normal mode PSM0. The passage from PSM3 mode in which most of the internal circuitry is turned off to PSM0 mode in which all functionality is enabled is done in less than 40msec. See Figure 10 for details.

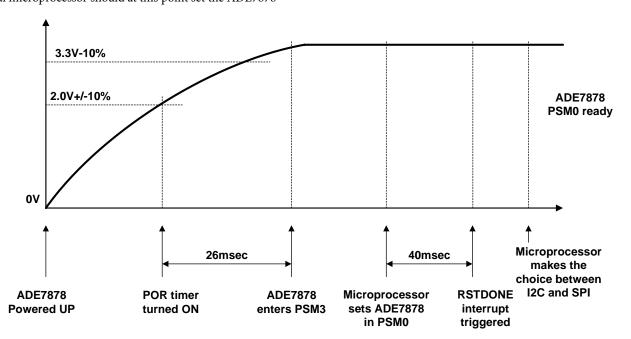


Figure 10. ADE7878 power up procedure

Rev. PrG| Page 18 of 83

As the ADE7878 enters PSM0 mode, the I²C port is the active serial port. If the SPI port is used, then the  $\overline{SS}$  pin must be toggled three times high to low. This action selects the ADE7878 into using the SPI port for further use. If I²C is the active serial port, bit 1 (I2C\_LOCK) of CONFIG2[7:0] must be set to 1 to lock it in. From this moment on, the ADE7878 ignores spurious togglings of the  $\overline{SS}$  pin and an eventual switch into using SPI port is no longer possible. If SPI is the active serial port, any write to CONFIG2[7:0] registers locks the port. From this moment on, a switch into using I²C port is no longer possible. Only a power down or setting  $\overline{RESET}$  pin low resets back the ADE7878 to use the I²C port. Once locked, the serial port choice is maintained when the ADE7878 changes PSMx, x=0, 1, 2, 3 power modes.

Immediately after entering PSM0, the ADE7878 sets all registers to their default values, including LPOILVL[7:0] and CONFIG2[7:0]. The ADE7878 signals the end of the transition period by triggering IRQ1 interrupt pin low and setting bit 15 (RSTDONE) in STATUS1[31:0] register to 1. This bit is 0 during the transition period and becomes 1 when the transition ends. The status bit is cleared and IRQ1 pin is set back high by writing STATUS1[31:0] register with the corresponding bit set to 1. As the RSTDONE is an unmaskable interrupt, bit 15 (RSTDONE) in STATUS1[31:0] register has to be cancelled in order for the IRQ1 pin to turn back high. It is recommended to wait until IRQ1 pin goes low before accessing STATUS1[31:0] register to test the state of RSTDONE bit. At this point, as a good programming practice, it is also recommended to cancel all other status flags in STATUS1[31:0] and STATUS0[31:0] registers by writing the corresponding bits with 1.

Initially, the DSP is in idle mode, which means it does not execute any instruction. This is the moment to initialize all ADE7878 registers and then write 0x0001 into the RUN[15:0] register to start the DSP (see Digital Signal Processor chapter for details on the RUN[15:0] register).

If the supply voltage VDD becomes lower than 2V  $\pm$  10%, the ADE7878 goes into inactive state, which means no measurements and computations are executed.

#### **Hardware Reset**

The ADE7878 has a RESET pin. If the ADE7878 is in PSM0 mode and RESET pin is set low, then the ADE7878 enters in hardware reset state. The ADE7878 has to be in PSM0 mode for hardware reset to be considered. Setting RESET pin low while the ADE7878 is in PSM1, PSM2 and PSM3 modes does not have any effect.

If the ADE7878 is in PSM0 mode and RESET pin is toggled from high to low and then back high, all the registers are set to their default values, including LPOILVL[7:0] and CONFIG2[7:0]. The ADE7878 signals the end of the transition period by triggering  $\overline{IRQ1}$  interrupt pin low and setting bit 15 (RSTDONE) in STATUS1[31:0] register to 1. This bit is 0 during the transition period and becomes 1 when the transition ends. The status bit is cleared and  $\overline{IRQ1}$  pin is set back high by writing STATUS1[31:0] register with the corresponding bit set to 1.

After a hardware reset, the DSP is in idle mode, which means it does not execute any instruction. As the  $I^2C$  port is the default serial port of the ADE7878, it becomes active after a reset state. If SPI is the port used by the external microprocessor, the procedure to enable it has to be repeated immediately after  $\overline{\text{RESET}}$  pin is toggled back high. See Serial Interfaces chapter for details.

At this point, it is recommended to initialize all ADE7878 registers and then write 0x0001 into the RUN[15:0] register to start the DSP (see Digital Signal Processor chapter for details on RUN[15:0] register).

#### **Software Reset Functionality**

Bit 7 (SWRST) in CONFIG[15:0] register manages the software reset functionality in PSM0 mode. The default value of this bit is 0. If this bit is set to 1, then the ADE7878 enters a software reset state. In this state, almost all internal registers are set to their default value. In addition, the choice of what serial port  $\rm I^2C$  or SPI is in use remains unchanged if the lock in procedure has been previously executed (See Serial Interfaces chapter for details). The registers that maintain their values despite SWRST bit being set to 1 are LPOILVL[7:0] and CONFIG2[7:0]. When the software reset ends, bit 7 (SWRST) in CONFIG[15:0] is cleared to 0, the  $\overline{\rm IRQ1}$  interrupt pin is set low and bit 15 (RSTDONE) in STATUS1[31:0] register is set to 1. This bit is 0 during the transition period and becomes 1 when the transition ends. The status bit is cleared and  $\overline{\rm IRQ1}$  pin is set back high by writing STATUS1[31:0] register with the corresponding bit set to 1.

After a software reset ended, the DSP is in idle mode, which means it does not execute any instruction. It is recommended to initialize all the ADE7878 registers and then write 0x0001 into the RUN[15:0] register to start the DSP (see Digital Signal Processor chapter for details on the RUN[15:0] register).

Software reset functionality is not available in PSM1, PSM2 and PSM3 modes.

Table 9: ADE7878 Power modes and related characteristics

Power Mode		Registers	LPOILVL, CONFIG2	I <sup>2</sup> C/SPI	Functionality
PSM0	State after hardware reset	Set to default	Set to default	I <sup>2</sup> C enabled	-All circuits are active. DSP is in idle mode.

## **ADE7878**

Power Mode		Registers	LPOILVL, CONFIG2	I <sup>2</sup> C/SPI	Functionality
	State after software reset	Set to default	Unchanged	Active serial port unchanged if lock in procedure has been previously executed	-All circuits are active. DSP is in idle mode.
PSM1		not available	Values set during PSM0 unchanged	Enabled	-Current mean absolute values are computed. Results are stored in AIMAV, BIMAV, CIMAV. -Serial ports I <sup>2</sup> C or SPI enabled with limited functionality.
PSM2		Not available	Values set during PSM0 unchanged	Disabled	-Compares phase currents against threshold set in LPOILVLTriggers IRQ0 or IRQ1 pins accordinglySerial ports not available.
PSM3		Not available	Values set during PSM0 unchanged	Disabled	-Internal circuits shut downSerial ports not available.

Table 10. Recommended actions when changing power modes

Initial	Recommended actions	Next Power Mode				
Power Mode	before setting next power mode	PSM0	PSM1	PSM2	PSM3	
PSMO	-Stop DSP by setting RUN[15:0]=0x0000Disable HSDC by clearing bit 6 (HSDEN) to 0 in CONFIG[15:0] registerMask interrupts by setting MASK0[31:0]=0x0 and MASK1[31:0]=0x0Erase interrupt status flags in STATUS0[31:0] and STATUS1[31:0] registers.		- Current Mean Absolute Values computed right away -xIMAV[19:0], x=A,B,C registers may be accessed right away	-Wait until $\overline{IRQ0}$ or $\overline{IRQ1}$ pins are triggered accordingly	-No action necessary	
PSM1	-No action necessary.	-Wait until IRQ1 pin triggered low -Poll STATUS1[31:0] register until bit 15 (RSTDONE) set to 1		-Wait until $\overline{IRQ0}$ or $\overline{IRQ1}$ pins are triggered accordingly	-No action necessary	
PSM2	-No action necessary	-Wait until TRQ1 pin triggered low -Poll STATUS1[31:0] register until bit 15 (RSTDONE) set to 1	-Wait until IRQI pin triggered lowCurrent Mean Absolute Values are computed beginning this momentxIMAV[19:0], x=A,B,C registers may be accessed from this moment		-No action necessary	
PSM3	-No action necessary	-Wait until IRQ1 pin triggered low -Poll STATUS1[31:0] register until bit 15 (RSTDONE) set to 1	-Wait until IRQ1 pin triggered lowCurrent rms circuit begins computations at this momentxIMAV[19:0], x=A,B,C registers may be accessed from this moment	-Wait until $\overline{IRQ0}$ or $\overline{IRQ1}$ pins are triggered accordingly		

### THEORY OF OPERATION

#### **ANALOG INPUTS**

The ADE7878 has seven analog inputs forming current and voltage channels. The current channels consist of four pairs of fully differential voltage inputs: IAP and IAN, IBP and IBN, ICP and ICN and INP and INN. These voltage input pairs have a maximum differential signal of  $\pm 0.5$  V. In addition, the maximum signal level on analog inputs for IxP/IxN is  $\pm 0.5$  V with respect to AGND. The maximum common mode signal allowed on the inputs is  $\pm 25$  mV. Figure 11 presents a schematic of the current channels inputs and their relation to the maximum common mode voltage.

All inputs have a programmable gain amplifier (PGA) with possible gain selection of 1, 2, 4, 8 or 16. The gain of IA, IB and IC inputs is set in bits 2-0 (PGA1) of GAIN[15:0] register. The gain of IN input is set in bits 5-3 (PGA2) of GAIN[15:0] register, so a different gain from IA, IB or IC inputs is possible. See Table 38 for details on GAIN[15:0] register.

The voltage channel has three single-ended voltage inputs: VAP, VBP and VCP. These single-ended voltage inputs have a maximum input voltage of  $\pm 0.5$  V with respect to VN. In addition, the maximum signal level on analog inputs for VxP and VN is  $\pm 0.5$  V with respect to AGND. The maximum common mode signal allowed on the inputs is  $\pm 25$  mV. Figure 13 presents a schematic of the voltage channels inputs and their relation to the maximum common mode voltage.

All inputs have a programmable gain with possible gain selection of 1, 2, 4, 8, or 16. The setting is done using bits 8-6 (PGA3) in GAIN[15:0] register – see Table 38.

Figure 12 shows how the gain selection from GAIN[15:0] register works in both current and voltage channels.

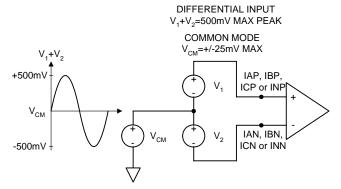


Figure 11. Maximum input level, current channels, Gain=1

#### **ANALOG TO DIGITAL CONVERSION**

The ADE7878 has seven sigma-delta Analog to Digital Converters (ADC). In PSM0 mode, all ADCs are active. In PSM1 mode, only the ADCs that measure the phase A, B, C currents are active. The ADCs that measure the neutral current and phase A, B, C voltages are turned off. In PSM2 and PSM3

modes, the ADCs are powered down to minimize power consumption.

For simplicity, the block diagram in Figure 14 shows a first-order  $\Sigma$ - $\Delta$  ADC. The converter is made up of the  $\Sigma$ - $\Delta$  modulator and the digital low-pass filter.

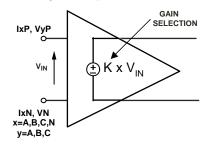


Figure 12. PGA in current and voltage channels

DIFFERENTIAL INPUT  $V_1+V_2=500$ mV MAX PEAK

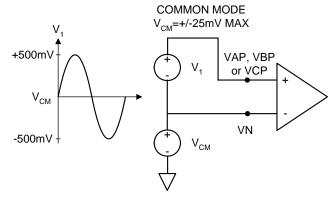


Figure 13. Maximum input level, voltage channels, Gain=1

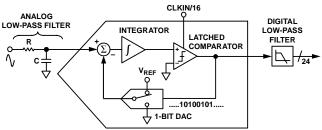
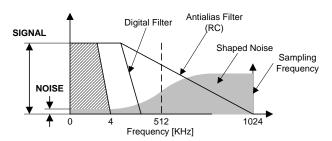


Figure 14. First-Order Σ-Δ ADC

A  $\Sigma$ - $\Delta$  modulator converts the input signal into a continuous serial stream of 1s and 0s at a rate determined by the sampling clock. In the ADE7878, the sampling clock is equal to 1.024MHz (CLKIN/16). The 1-bit DAC in the feedback loop is driven by the serial data stream. The DAC output is subtracted from the input signal. If the loop gain is high enough, the average value of the DAC output (and therefore the bit stream) can approach that of the input signal level. For any given input value in a single sampling interval, the data from the 1-bit ADC is virtually meaningless. Only when a large number of samples are averaged is a meaningful result obtained. This averaging is carried out in the second part of the ADC, the digital low-pass filter. By averaging a large number of bits from the modulator,

the low-pass filter can produce 24-bit data-words that are proportional to the input signal level.

The  $\Sigma$ - $\Delta$  converter uses two techniques to achieve high resolution from what is essentially a 1-bit conversion technique. The first is oversampling. Oversampling means that the signal is sampled at a rate (frequency), which is many times higher than the bandwidth of interest. For example, the sampling rate in the ADE7878 is 1.024MHz and the band of interest is 40 Hz to 4 kHz. Oversampling has the effect of spreading the quantization noise (noise due to sampling) over a wider bandwidth. With the noise spread more thinly over a wider bandwidth, the quantization noise in the band of interest is lowered — see Figure 15. However, oversampling alone is not efficient enough to improve the signal-to-noise ratio (SNR) in the band of interest. For example, an oversampling ratio of 4 is required just to increase the SNR by only 6 dB (1 bit). To keep the oversampling ratio at a reasonable level, it is possible to shape the quantization noise so that the majority of the noise lies at the higher frequencies. In the  $\Sigma$ - $\Delta$  modulator, the noise is shaped by the integrator, which has a high-pass-type response for the quantization noise. This is the second technique used to achieve high resolution. The result is that most of the noise is at the higher frequencies where it can be removed by the digital low-pass filter. This noise shaping is shown in Figure 15.



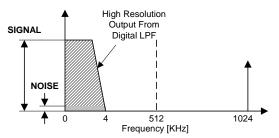


Figure 15. Noise Reduction Due to Oversampling and Noise Shaping in the Analog Modulator

#### **Antialiasing Filter**

Figure 14 also shows an analog low-pass filter (RC) on the input to the ADC. This filter is placed outside the ADE7878 and its role is to prevent aliasing. Aliasing is an artifact of all sampled systems and is illustrated in Figure 16. Aliasing means that frequency components in the input signal to the ADC, which are higher than half the sampling rate of the ADC, appear in the sampled signal at a frequency below half the sampling rate. Frequency components (arrows shown in black) above half the sampling frequency (also know as the Nyquist frequency, i.e.,

512 kHz) are imaged or folded back down below 512 kHz. This happens with all ADCs regardless of the architecture. In the example shown, only frequencies near the sampling frequency, i.e., 1.024MHz, move into the band of interest for metering, i.e., 40 Hz to 4 kHz. To attenuate the high frequency (near 1.024MHz) noise and prevent the distortion of the band of interest, a LPF (low-pass filter) has to be introduced. For conventional current sensors, it is recommended to use one RC filter with a corner frequency of 5 KHz in order for the attenuation to be sufficiently high at the sampling frequency of 1.024MHz. The 20 dB per decade attenuation of this filter is usually sufficient to eliminate the effects of aliasing for conventional current sensors. However, for a di/dt sensor such as a Rogowski coil, the sensor has a 20 dB per decade gain. This neutralizes 20 dB per decade attenuation produced by the LPF. Therefore, when using a di/dt sensor, care should be taken to offset the 20 dB per decade gain. One simple approach is to cascade one more RC filter, so a -40 dB per decade attenuation is produced.

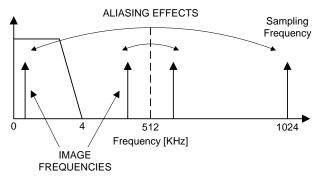


Figure 16. Aliasing effects at ADE7878

#### **ADC Transfer Function**

All ADCs in the ADE7878 are designed to produce the same 24-bit signed output code for the same input signal level. With a full-scale input signal of 0.5 V and an internal reference of 1.2 V, the ADC output code is nominally 5,928,256 (0x5A7540). The code from the ADC may vary between 0x800000 (-8,388,608) and 0x7FFFFF (+8,388,607); this is equivalent to an input signal level of  $\pm 0.707$ V. However, for specified performance, it is recommended not to exceed the nominal range of  $\pm 0.5$ V. The ADC performance is guaranteed only for input signals lower than  $\pm 0.5$ V.

#### **CURRENT CHANNEL ADC**

Figure 20 shows the ADC and signal processing path for the input IA of the current channels (same for IB and IC). The ADC outputs are signed twos complement 24-bit data-words and are available at a rate of 8 kSPS (thousand samples per second). With the specified full-scale analog input signal of  $\pm 0.5 \mathrm{V}$ , the ADC produces its maximum output code value. This diagram shows a full-scale voltage signal being applied to the differential inputs IAP and IAN. The ADC output swings between -5,928,256 (0xA58AC0 ) and+5,928,256 (0x5A7540).

The input IN corresponds to the neutral current of a 3 phase system. If no neutral line is present, then this input should be connected to AGND. The data path of the neutral current is similar with the path of the phase currents and is presented in Figure 21.

#### **Current Waveform Gain Registers**

There is a multiplier in the signal path of each phase and neutral currents. The current waveform can be changed by ±100% by writing a correspondent twos complement number to the 24-bit signed current waveform gain registers (AIGAIN[23:0], BIGAIN[23:0], CIGAIN[23:0] and NIGAIN[23:0]). For example, if 0x400000 is written to those registers, the ADC output is scaled up by 50%. To scale the input by -50%, write 0xC00000 to the registers. Equation (3) describes mathematically the function of the current waveform gain registers.

#### Current waveform =

= ADC Output x 
$$\left(1 + \frac{\text{Content of Current Gain Register}}{2^{23}}\right)$$
 (3)

Changing the content of AIGAIN[23:0], BIGAIN[23:0], CIGAIN[23:0] or INGAIN[23:0] affects all calculations based on its current; that is, it affects the corresponding phase active/reactive/apparent energy and current rms calculation. In addition, waveform samples are also scaled accordingly.

Note that the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. The 24-bit AIGAIN, BIGAIN, CIGAIN and NIGAIN registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits. See Figure 17 for details.

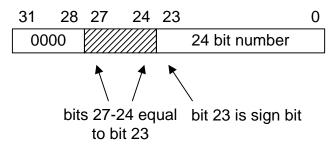


Figure 17. 24-bit xIGAIN (x=A,B,C,N) are transmitted as 32-bit words

#### **Current Channel HPF**

The ADC outputs can contain a dc offset. This offset may create errors in power and rms calculations. High Pass Filters (HPF) are placed in the signal path of the phase and neutral

currents and of the phase voltages. If enabled, the HPF eliminates any dc offset on the current channel. All filters are implemented in the DSP and by default they are all enabled: 24-bit register HPFDIS[23:0] is cleared to 0x00000000. All filters are disabled by setting HPHDIS[23:0] to any non zero value.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. The HPFDIS register is accessed as a 32-bit register with 8 most significant bits padded with 0s. See Figure 18 for details.




Figure 18. 24-bit HPFDIS register is transmitted as 32-bit word

#### **Current Channel Sampling**

The waveform samples of the current channel are taken at the output of HPF and stored into IAWV, IBWV, ICWV, INWV 24-bit signed registers at a rate of 8kSPS. All power and rms calculations remain uninterrupted during this process. Bit 17 (DREADY) in STATUS0[31:0] register is set when IAWV, IBWV, ICWV, and INWV registers are available to be read using I<sup>2</sup>C or SPI serial ports. Setting bit 17 (DREADY) in MASK0[31:0] register enables an interrupt to be set when the DREADY flag is set. See Digital Signal Processor chapter for more details on bit DREADY.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. When IAWV, IBWV, ICWV, INWV 24-bit signed registers are read from the ADE7878, they are transmitted signed extended to 32 bits. See Figure 19 for details.

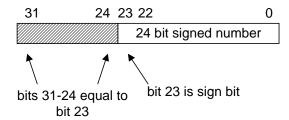


Figure 19. 24-bit IxWV (x=A, B, C, N) are transmitted as 32-bit signed words

The ADE7878 contains a High Speed Data Capture (HSDC) port that is specially designed to provide fast access to the waveform sample registers. See HSDC Interface section for more details.

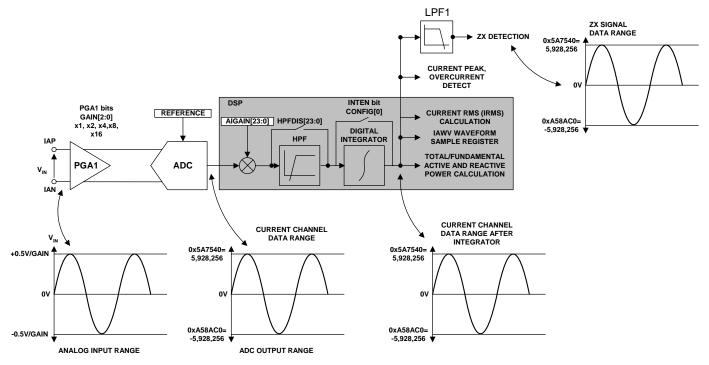


Figure 20. Current Channel Signal Path

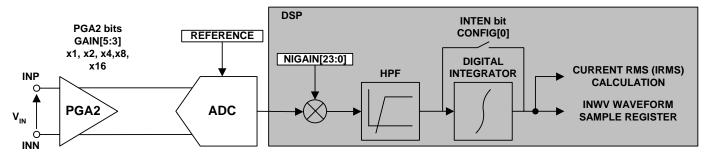


Figure 21. Neutral Current Signal Path

#### di/dt CURENT SENSOR AND DIGITAL INTEGRATOR

The di/dt sensor detects changes in the magnetic field caused by the ac current. Figure 22 shows the principle of a di/dt current sensor.

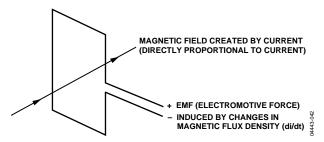


Figure 22. Principle of a di/dt Current Sensor

The flux density of a magnetic field induced by a current is directly proportional to the magnitude of the current. The changes in the magnetic flux density passing through a conductor loop generate an electromotive force (EMF) between the two ends of the loop. The EMF is a voltage signal that is propor-

tional to the di/dt of the current. The voltage output from the di/dt current sensor is determined by the mutual inductance between the current carrying conductor and the di/dt sensor.

Due to the di/dt sensor, the current signal needs to be filtered before it can be used for power measurement. On each phase and neutral currents data paths, there is a built-in digital integrator to recover the current signal from the di/dt sensor. The digital integrator is disabled by default when the ADE7878 is powered up and after reset. Setting bit 0 (INTEN) of the CONFIG[15:0] register turns on the integrator. Figure 23 to Figure 26 show the magnitude and phase response of the digital integrator.

#### TBD

Figure 23. Combined Gain Response of the Digital Integrator

TBD

Figure 24. Combined Phase Response of the Digital Integrator

TBD

Figure 25. Combined Gain Response of the

Digital Integrator (40 Hz to 70 Hz)

TBD Figure 26. Combined Phase Response of the Digital Integrator (40 Hz to 70 Hz)

Note that the integrator has a -20 dB/dec attenuation and approximately  $-90^{\circ}$  phase shift. When combined with a di/dt sensor, the resulting magnitude and phase response should be a flat gain over the frequency band of interest. However, the di/dt sensor has a 20 dB/dec gain associated with it and generates significant high frequency noise. An antialiasing filter of at least the second order is needed to avoid that the noise alias back in the band of interest when the ADC is sampling (see the Antialiasing Filter section).

DICOEFF[23:0] 24-bit signed register is used in the digital integrator algorithm. At power up or after a reset, its value is 0x000000. Before turning on the integrator, this register must be initialized with 0xFF8000. DICOEFF[23:0] is not used when the integrator is turned off and can be left at 0x0000000 in this case.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the registers presented in Figure 17, DICOEFF[23:0] 24-bit signed register is accessed as a 32-bit register with 4 most significant bits padded with 0s and sign extended to 28 bits.

When the digital integrator is switched off, the ADE7878 can be used directly with a conventional current sensor, such as a current transformer (CT).

#### **VOLTAGE CHANNEL ADC**

Figure 27 shows the ADC and signal processing chain for the input VA in the voltage channel. The VB and VC channels have similar processing chains. The ADC outputs are signed twos complement 24-bit words and are available at a rate of 8 kSPS. With the specified full-scale analog input signal of  $\pm 0.5$  V, the ADC produces its maximum output code value. This diagram shows a full-scale voltage signal being applied to the differential inputs VA and VN. The ADC output swings between -5,928,256 (0xA558AC0) and +5,928,256 (0x5A7540).

#### **Voltage Waveform Gain Registers**

There is a multiplier in the signal path of each phase voltage. The voltage waveform can be changed by  $\pm 100\%$  by writing a correspondent twos complement number to the 24-bit signed current waveform gain registers (AVGAIN[23:0]), BVGAIN[23:0] and CVGAIN[23:0]). For example, if 0x400000 is written to those registers, the ADC output is scaled up by 50%. To scale the input by -50%, write 0xC00000 to the

registers. Equation (4) describes mathematically the function of the current waveform gain registers.

Voltage waveform =

= ADC Output x 
$$\left(1 + \frac{\text{Content of Voltage Gain Register}}{2^{23}}\right)$$
 (4)

Changing the content of AVGAIN[23:0], BVGAIN[23:0] and CVGAIN[23:0] affects all calculations based on its voltage; that is, it affects the corresponding phase active/reactive/apparent energy and voltage rms calculation. In addition, waveform samples are also scaled accordingly.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. As presented in Figure 17, AVGAIN, BVGAIN and CVGAIN registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Voltage Channel HPF**

As seen in Current Channel HPF section, the ADC outputs can contain a dc offset that can create errors in power and rms calculations. High Pass Filters (HPF) are placed in the signal path of the phase voltages, similar to the ones in the current channels. HPFDIS[23:0] register may enable or disable the filters. See Current Channel HPF section for more details.

#### **Voltage Channel Sampling**

The waveform samples of the current channel are taken at the output of HPF and stored into VAWV, VBWV and VCWV 24-bit signed registers at a rate of 8kSPS. All power and rms calculations remain uninterrupted during this process. Bit 17 (DREADY) in STATUS0[31:0] register is set when VAWV, VBWV and VCWV registers are available to be read using I<sup>2</sup>C or SPI serial ports. Setting bit 17 (DREADY) in MASK0[31:0] register enables an interrupt to be set when the DREADY flag is set. See Digital Signal Processor chapter for more details on bit DREADY.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to registers presented in Figure 19, VAWV, VBWV and VCWV 24-bit signed registers are transmitted signed extended to 32 bits.

The ADE7878 contains a High Speed Data Capture (HSDC) port that is specially designed to provide fast access to the waveform sample registers. See HSDC Interface section for more details.

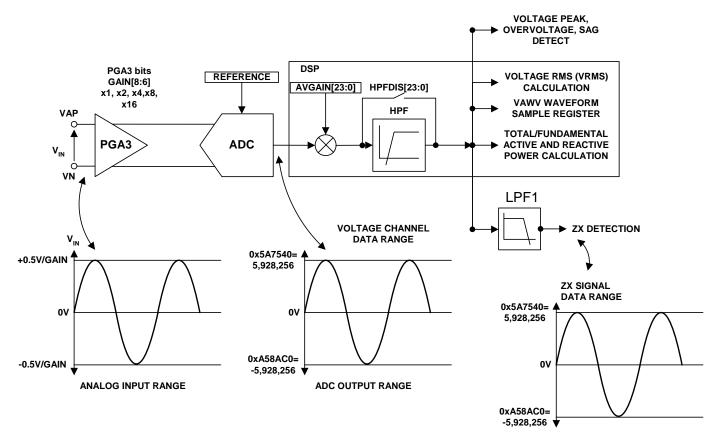


Figure 27. Voltage Channel Data Path

#### **CHANGING PHASE VOLTAGE DATA PATH**

The ADE7878 may direct one phase voltage input to the computational data path of another phase. For example, phase A voltage may be introduced in the phase B computational data path, which means all powers computed by the ADE7878 in phase B are based on phase A voltage and phase B current.

Bits 9-8 (VTOIA[1:0]) of CONFIG[15:0] register manage the phase A voltage measured at VA pin. If VTOIA[1:0]=00 (default value), the voltage is directed to phase A computational data path, if VTOIA[1:0]=01, the voltage is directed to phase B path and if VTOIA[1:0]=10, the voltage is directed to phase C path. If VTOIA[1:0]=11, the ADE7878 behaves as if VTOIA[1:0]=00.

Bits 11-10 (VTOIB[1:0]) of CONFIG[15:0] register manage the phase B voltage measured at VB pin. If VTOIB[1:0]=00 (default value), the voltage is directed to phase B computational data path, if VTOIB[1:0]=01, the voltage is directed to phase C path and if VTOIB[1:0]=10, the voltage is directed to phase A path. If VTOIB[1:0]=11, the ADE7878 behaves as if VTOIB[1:0]=00.

Bits 13-12 (VTOIC[1:0]) of CONFIG[15:0] register manage the phase C voltage measured at VC pin. If VTOIC[1:0]=00 (default value), the voltage is directed to phase C computational data path, if VTOIC[1:0]=01, the voltage is directed to phase A path and if VTOIC[1:0]=10, the voltage is directed to phase B path. If VTOIC[1:0]=11, the ADE7878 behaves as if VTOIC[1:0]=00.

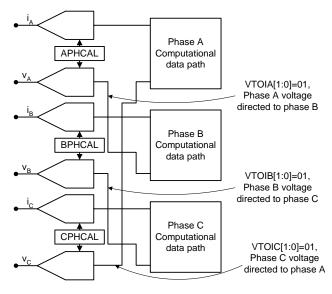


Figure 28.Phase voltages used in different data paths

Figure 28 presents the case in which phase A voltage is used in the phase B data path, phase B voltage is used in phase C data path and phase C voltage is used in phase A data path.

#### **POWER QUALITY MEASUREMENTS**

#### **Zero Crossing Detection**

The ADE7878 has a zero-crossing (ZX) detection circuit on the current and voltage channels. Zero-crossing events are used as a

time base for various power quality measurements and in the calibration process.

A zero-crossing is generated from the output of LPF1. The low pass filter is intended to eliminate all harmonics of 50Hz and 60Hz systems and help identify the zero crossing events on the fundamental components of both current and voltage channels. The digital filter has a pole at 80Hz and is clocked at 256KHz. As a result, there is a phase lag between the analog input signal (one of IA, IB, IC, IN, VA, VB and VC) and the output of LPF1. The error in ZX detection is 0.07° for 50Hz systems (0.085° for 60Hz systems). The phase lag response of LPF1 results in a time delay of approximately 31.4° or 1.74msec (@ 50 Hz) between its input and output. The overall delay between the zero crossing on the analog inputs and ZX detection obtained after LPF1 is around 39.6° or 2.2 msec (@ 50 Hz). The ADC and HPF introduce the additional delay. The LPF1 cannot be disabled to assure a good resolution of the ZX detection. Figure 29 shows how the zero-crossing signal is detected.

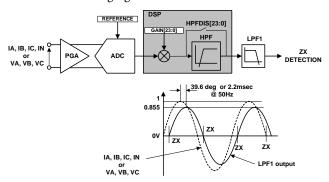


Figure 29. Zero-Crossing Detection on Voltage and Current channels

In order to provide further protection from noise, input signals to the voltage channel with amplitude lower than 10% of full scale do not generate zero crossing events at all. The current channel ZX detection circuit is active for all input signals independent of their amplitude.

The ADE7878 contains six zero crossing detection circuits, one for each phase voltage and current channel. Each circuit drives one flag in STATUS1[31:0] register. If circuit placed in phase A voltage channel detects one zero crossing event, then bit 9 (ZXVA) in STATUS1[31:0] register is set to 1. Similarly, phase B voltage circuit drives bit 10 (ZXVB), phase C voltage circuit drives bit 11 (ZXVC) and circuits placed in the current channel drive bit 12 (ZXIA), bit 13 (ZXIB) and bit 14 (ZXIC). If a ZX detection bit is set in the MASK1[31:0] register, the

IRQ1 interrupt pin is driven low and the corresponding status flag is set to 1. The status bit is cleared and  $\overline{\text{IRQ1}}$  pin is set back high by writing STATUS1 register with the status bit set to 1.

#### **Zero-Crossing Timeout**

Every zero-crossing detection circuit has an associated timeout register. This register is loaded with the value written into 16-bit ZXTOUT register and is decremented (1 LSB) every 62.5  $\mu s$  (16KHz clock). The register is reset to ZXTOUT value every

time a zero crossing is detected. The default value of this register is 0xFFFF. If the timeout register decrements to 0 before a zero crossing is detected, then one of bits 8-3 of STATUS1[31:0] register is set to 1. Bit 3 (ZXTOVA), bit 4 (ZXTOVB) and bit 5 (ZXTOVC) refer to phases A, B and C of the voltage channel, bit 6 (ZXTOIA), bit 7 (ZXTOIB), bit 8 (ZXTOIC) refer to phases A, B and C of the current channel. If a ZXTOUT bit is set in the MASK1[31:0] register, the

IRQ1 interrupt pin is driven low when the corresponding status bit is set to 1. The status bit is cleared and IRQ1 pin is set back high by writing STATUS1 register with the status bit set to 1.

The resolution of ZXOUT register is  $62.5 \,\mu s$  (16KHz clock) per LSB. Thus, the maximum time-out period for an interrupt is 4.096seconds:  $2^{16}/16KHz$ .

Figure 30 shows the mechanism of the zero-crossing timeout detection when the voltage or the current signal stays at a fixed dc level for more than 62.5 x ZXTOUT  $\mu s$ .

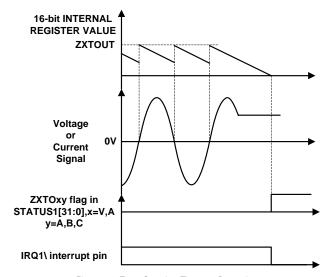


Figure 30. Zero-Crossing Timeout Detection

#### **Phase Sequence Detection**

The ADE7878 has an on-chip phase sequence error detection circuit. This detection works on phase voltages and considers only the zero crossings determined by their negative to positive transitions. The regular succession of these zero crossing events is phase A followed by phase B followed by phase C (see Figure 32). If the sequence of zero crossing events is instead phase A, followed by phase C followed by phase B, then bit 19 (SEQERR) in STATUS1[31:0] register is set. If bit 19 (SEQERR) in MASK1[31:0] register is set to 1 and a phase sequence error event is triggered, then  $\overline{\text{IRQ1}}$  interrupt pin is driven low. The status bit is cleared and  $\overline{\text{IRQ1}}$  pin is set back high by writing STATUS1 register with the status bit 19 (SEQERR) set to 1.

The phase sequence error detection circuit is functional only when the ADE7878 is connected in a 3 phase 4 wire 3 voltage sensors configuration (bits 5,4 CONSEL in ACCMODE[7:0] set to 00). In all other configurations, only two voltage sensors are

used and therefore it is not recommended to use the detection circuit. In these cases, the time intervals between phase voltages should be used to analyze the phase sequence (see Error! Reference source not found. section for details).

Figure 31 presents the case in which phase A voltage is not followed by phase B voltage, but by phase C voltage. Every time a negative to positive zero crossing occurs, bit 19 (SEQERR) in STATUS1[31:0] register is set to 1 because such zero crossings on phase C, B or A cannot come after zero crossings from phase A, C or respectively B zero crossings.

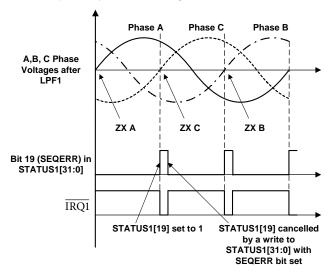


Figure 31. SEQERR bit set to 1 when phase A voltage is followed by phase C voltage

Once a phase sequence error has been detected, the time measurement between various phase voltages (see Time Interval Between Phases section) may help to identify which phase voltage should be considered with another phase current in the computational data path. The bits 9-8 (VTOIA[1:0]), 11-10 (VTOIB[1:0]) and 13-12 (VTOIC[1:0]) in CONFIG[15:0] register may be used to direct one phase voltage to the data path of another phase. See Changing Phase Voltage Data Path section for details.

#### Time Interval Between Phases

The ADE7878 has the capability to measure the time delay between phase voltages, between phase currents or between voltages and currents of the same phase. The negative to positive transitions identified by the zero-crossing detection circuit are used as start and stop measuring points. Only one set of such measurements are available at one time, based on bits 10, 9 (ANGLESEL[1:0]) in COMPMODE[15:0] register.

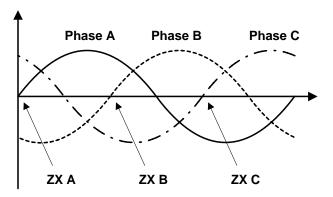


Figure 32. Phase Sequence Detection

When ANGLESEL[1:0] bits are set to 00, the default value, then the delays between voltages and currents on the same phase are measured. The delay between phase A voltage and phase A current is stored in the 16-bit unsigned ANGLE0[15:0] register (See Figure 33 for details). In a similar way, the delays between voltages and currents on phase B and C are stored in ANGLE1[15:0] and ANGLE2[15:0] registers respectively.

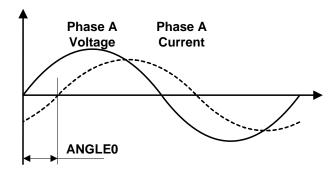


Figure 33.Delay between phase A voltage and current is stored in ANGLE0[15:0]

When ANGLESEL[1:0] bits are set to 01, the delays between phase voltages are measured. The delay between phase A voltage and phase C voltage is stored into ANGLE0[15:0]. The delay between phase B voltage and phase C voltage is stored in ANGLE1[15:0] register and the delay between phase A voltage and phase B voltage is stored into ANGLE2[15:0] register (see Figure 34 for details).

When ANGLESEL[1:0] bits are set to 10, the delays between phase currents are measured. Similar to delays between phase voltages, the delay between phase A and phase C currents is stored into ANGLE0[15:0] register, the delay between phase B and phase C currents is stored into ANGLE1[15:0] register and the delay between phase A and phase B currents is stored into ANGLE2[15:0] register (see Figure 34 for details).

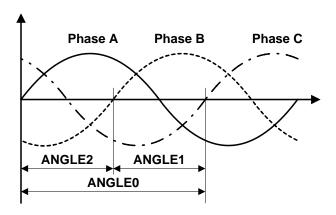


Figure 34. Delays between phase voltages(currents)

The ANGLE0, ANGLE1 and ANGLE2 registers are 16-bit unsigned registers with 1LSB corresponding to 3.9µs (256 KHz clock), which means a resolution of 0.07° (360°x 50Hz/256KHz) for 50Hz systems and 0.084° (360°x 60Hz/256KHz) for 60Hz systems. The delays between phase voltages or phase currents are used to characterize how balanced the load is. The delays between phase voltages and currents are used to compute the power factor on each phase (see expression (5) below).

$$\cos \varphi_x = \cos \left[ ANGLEx \cdot \frac{360^\circ \cdot f_{Line}}{256KHz} \right]$$
 (5)

where x=A, B or C and  $f_{Line}$  is 50Hz or 60Hz.

#### **Period Measurement**

The ADE7878 provides the period measurement of the line in the voltage channel. Bits 1, 0 (PERSEL[1:0]) in MMODE[7:0] register select the phase voltage used for this measurement. The PERIOD register is a 16-bit unsigned register and is updated every line period. Because of LPF1 filter (see Figure 29), a settling time of 30-40msec is associated with this filter before the measurement is stable.

The period measurement has a resolution of 3.9  $\mu$ s/LSB (256 KHz clock), which represents 0.0195% (50Hz/256KHz) when the line frequency is 50 Hz and 0.0234% (60Hz/256KHz) when the line frequency is 60Hz. The value of the period register for 50Hz networks is approximately 5,120 (256KHz/50Hz) and for 60Hz networks is approximately 4267 (256KHz/60Hz). The length of the register enables the measurement of line frequencies as low as 3.9 Hz (256KHz/2<sup>16</sup>). The period register is stable at  $\pm 1$  LSB when the line is established and the measurement does not change.

The following expressions may be used to compute the line period and frequency using PERIOD[15:0] register:

$$T_L = \frac{PERIOD[15:0]}{256E3} [sec] \tag{6}$$

$$f_L = \frac{256E3}{PERIOD[15:0]}[Hz] \tag{7}$$

#### **Phase Voltage Sag Detection**

The ADE7878 can be programmed to detect when the absolute value of any phase voltage drops below a certain peak value for a number of half line cycles. The phase where this event took place is identified in bits 14, 13, 12 (VSPHASE[2:0]) of PHSTATUS[15:0] register. This condition is illustrated in Figure 35.

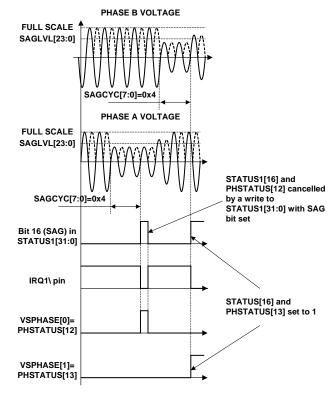


Figure 35. ADE7878 Sag Detection

Figure 35 shows phase A voltage falling below a threshold that is set in the sag level register (SAGLVL[23:0]) for four half line cycles (SAGCYC=4). When bit 16 (SAG) in STATUS1[31:0] register is set to 1 to indicate the condition, bit VSPHASE[0] in PHSTATUS[15:0] register also is set to 1 because the event happened on phase A. Bit 16 (SAG) in STATUS1[31:0] register and all bits 14,13,12 (VSPHASE[2:0]) of PHSTATUS[15:0] register (not only VSPHASE[0] bit) are erased by writing STATUS1[31:0] register with SAG bit set to 1. The SAGCYC[7:0] register represents the number of half line cycles the phase voltage must remain below the level indicated in SAGLVL register in order to trigger a sag condition. 0 is not valid a valid number for SAGCYC. For example, when the sag cycle (SAGCYC[7:0]) contains 0x07, the SAG flag in STATUS1[31:0] register is set at the end of the seventh half line cycle for which the line voltage falls below the threshold. If bit 16 (SAG) in MASK1[31:0] is set, IRQ1 interrupt pin is driven low in case of a sag event in the same moment the status bit 16 (SAG) in STATUS1[31:0] register is set to 1. The SAG status bit in STATUS1[31:0] register and all bits 14, 13, 12 (VSPHASE[2:0]) of PHSTATUS[15:0] register are cleared and

### **ADE7878**

IRQ1 pin is set back high by writing STATUS1[31:0] register with the status bit set to 1.

When the phase B voltage falls below the threshold indicated into SAGLVL[23:0] register for two line cycles, bit VSPHASE[1] in PHSTATUS[15:0] register is set to 1 and bit VSPHASE[0] is cleared to 0. In the same moment, bit 16 (SAG) in STATUS1[31:0] register is set to 1 to indicate the condition.

Note that the internal zero-crossing counter is always active. By setting SAGLVL[23:0] register, the first sag detection result is, therefore, not done across a full SAGCYC period. Writing to the SAGCYC[7:0] register when the SAGLVL[23:0] is already initialized resets the zero-crossing counter, thus ensuring that the first sag detection result is obtained across a full SAGCYC period.

The recommended procedure to manage sag events is the following:

- -enable SAG interrupts in MASK1[31:0] register by setting bit 16 (SAG) to 1.
- -when a sag event happens, the  $\overline{\text{IRQ1}}$  interrupt pin goes low and bit 16 (SAG) in STATUS1[31:0] is set to 1.
- -STATUS1[31:0] register is read with bit 16 (SAG) set to 1.
- -PHSTATUS[15:0] is read, identifying on which phase or phases a sag event happened.
- -STATUS1[31:0] register is written with bit 16 (SAG) set to 1. In this moment, bit SAG and all bits 14,13,12 (VSPHASE[2:0]) of PHSTATUS[15:0] register are erased.

#### Sag Level Set

The content of the sag level register SAGLVL[23:0] is compared to the absolute value of the output from HPF. Writing 5,928,256 (0x5A7540) to SAGLVL register, puts the sag detection level at full scale – see Voltage Channel ADC Chapter, so the sag event is triggered continuously. Writing 0x00 or 0x01 puts the sag detection level at 0, so the sag event is never triggered.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the register presented in Figure 18, SAGLVL register is accessed as 32-bit registers with 8 most significant bits padded with 0s.

#### **Peak Detection**

The ADE7878 records the maximum absolute values reached by the voltage and current channels over a certain number of half line cycles and stores them into the less significant 24 bits of VPEAK[31:0] and IPEAK[31:0] 32-bit registers.

PEAKCYC[7:0] register contains the number of half line cycles used as a time base for the measurement. The circuit uses the zero crossing points identified by the zero crossing detection circuit. Bits 4, 3, 2 (PEAKSEL[2:0]) in MMODE[7:0] register select on which phases the peak measurement is done. Bit 2 selects phase A, bit 3 selects phase B and bit 4 selects phase C. Selecting more than one phase to monitor the peak values decreases proportionally the measurement period indicated in

PEAKCYC[7:0] register because zero crossings from more phases are involved in the process. When a new peak value is determined, one of bits 26, 25, 24 (IPPHASE[2:0] or VPPHASE[2:0]) in IPEAK[31:0] and VPEAK[31:0] registers is set to 1 identifying the phase that triggered the peak detection event. For example, if a peak value has been identified on phase A current, bit 24 (IPPHASE[0]) in IPEAK[31:0] register is set to 1. If next time a new peak value is measured on phase B, then bit 24 (IPPHASE[0]) of IPEAK[31:0] is cleared to 0 and bit 25 (IPPHASE[1]) of IPEAK[31:0] is set to 1. Figure 36 presents the composition of IPEAK and VPEAK registers.

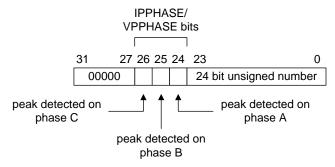


Figure 36.Composition of IPEAK[31:0] and VPEAK[31:0] registers

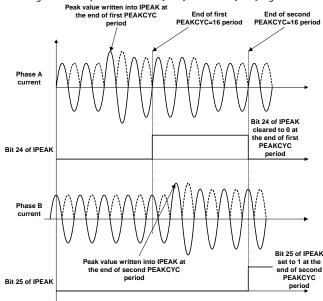


Figure 37. ADE7878 Peak Level Detection

Figure 37 shows how the ADE7878 records the peak value on the current channel when measurements on phases A and B are enabled (bits PEAKSEL[2:0] in MMODE[7:0] are 011). PEAKCYC[7:0] is set to 16, meaning that the peak measurement cycle is 4 line periods. The maximum absolute value of phase A is the greatest during the first 4 line periods (PEAKCYC=16), so the maximum absolute value is written into the less significant 24 bits of IPEAK[31:0] register and bit 24 (IPPHASE[0]) of IPEAK[31:0] register is set to 1 at the end of the period. This bit remains 1 for the duration of the second PEAKCYC period of 4 line cycles. The maximum absolute value

of phase B is the greatest during the second PEAKCYC period, so the maximum absolute value is written into the less significant 24 bits of IPEAK register and bit 25 (IPPHASE[1]) in IPEAK register is set to 1 at the end of the period.

At the end of the peak detection period in the current channel, bit 23 (PKI) in STATUS1[31:0] register is set to 1. If bit 23 (PKI) in MASK1[31:0] register is set, then  $\overline{\text{IRQ1}}$  interrupt pin is driven low at the end of PEAKCYC period and the status bit 23 (PKI) in STATUS1[31:0] is set to 1. In a similar way, at the end of the peak detection period in the voltage channel, bit 24 (PKV) in STATUS1[31:0] register is set to 1. If bit 24 (PKV) in

MASK1[31:0] register is set, then IRQ1 interrupt pin is driven low at the end of PEAKCYC period and the status bit 24 (PKV) in STATUS1[31:0] is set to 1. To find the phase that triggered the interrupt, one of IPEAK[31:0] or VPEAK[31:0] registers is read immediately after reading STATUS1[31:0]. Then the status bits are cleared and IRQ1 pin is set back high by writing STATUS1[31:0] register with the status bit set to 1.

Note that the internal zero-crossing counter is always active. By setting bits 4, 3, 2 (PEAKSEL[2:0]) in MMODE[7:0] register, the first peak detection result is, therefore, not done across a full PEAKCYC period. Writing to the PEAKCYC[7:0] register when the PEAKSEL[2:0] bits are set resets the zero-crossing counter, thus ensuring that the first peak detection result is obtained across a full PEAKCYC period.

#### **Overvoltage and Overcurrent Detection**

The ADE7878 detects when the instantaneous absolute value measured on the voltage and current channels becomes greater than thresholds set in OVLVL[23:0] and OILVL[23:0] 24-bit unsigned registers. If bit 18 (OV) in MASK1[31:0] register is set, IRQ1 interrupt pin is driven low in case of an overvoltage event. There are two status flags set when IRQ1 interrupt pin is driven low: bit 18 (OV) in STATUS1[31:0] register and one of bits 11, 10, 9 (OVPHASE[2:0]) in PHSTATUS[15:0] register identifying the phase that generated the overvoltage. The status bit 18 (OV) in STATUS1[31:0] register and all bits 11, 10, 9 (OVPHASE[2:0]) in PHSTATUS[15:0] register are cleared and IRQ1 pin is set back high by writing STATUS1[31:0] register with the status bit set to 1. Figure 38 presents overvoltage detection in phase A voltage. Whenever the absolute instantaneous value of the voltage goes above the threshold from OVLVL[23:0] register, bit 18 (OV) in STATUS1[31:0] and bit 9 (OVPHASE[0]) in PHSTATUS[15:0] registers are set to 1. The bit 18 (OV) of STATUS1[31:0] register and bit 9 (OVPHASE[0]) in PHSTATUS[15:0] register are cancelled when STATUS1 register is written with bit 18 (OV) set to 1.

The recommended procedure to manage overvoltage events is the following:

-enable OV interrupts in MASK1[31:0] register by setting bit 18 (OV) to 1.

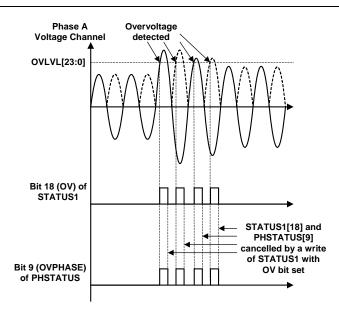


Figure 38. ADE7878 Overvoltage Detection

- -when an overvoltage event happens, the  $\overline{\text{IRQ1}}$  interrupt pin goes low.
- -STATUS1[31:0] register is read with bit 18 (OV) set to 1.
- -PHSTATUS[15:0] is read, identifying on which phase or phases an overvoltage event happened.
- -STATUS1[31:0] register is written with bit 18 (OV) set to 1. In this moment, bit OV is erased and also all bits 11, 10, 9 (OVPHASE[2:0]) of PHSTATUS[15:0] register.

In case of an overcurrent event, if bit 17 (OI) in MASK1[31:0] register is set,  $\overline{\text{IRQ1}}$  interrupt pin is driven low. In the same moment, bit 17 (OI) in STATUS1[31:0] register and one of bits 5, 4, 3 (OIPHASE[2:0]) in PHSTATUS[15:0] register identifying the phase that generated the interrupt are set. To find the phase that triggered the interrupt, PHSTATUS[15:0] register is read immediately after reading STATUS1[31:0]. Then the status bit 17 (OI) in STATUS1[31:0] register and bits 5,4,3 (OIPHASE[2:0]) in PHSTATUS[15:0] register are cleared and  $\overline{\text{IRQ1}}$  pin is set back high by writing STATUS1[31:0] register with the status bit set to 1. The process is similar with the overvoltage detection.

#### Overvoltage and Overcurrent Level Set

The content of the overvoltage OVLVL[23:0] and overcurrent OILVL[23:0] 24-bit unsigned registers is compared to the absolute value of the voltage and current channels. The maximum value of these registers is the maximum value of the HPF outputs: +5,928,256 (0x5A7540). When OVLVL or OILVL are equal to this value, the overvoltage or overcurrent conditions will never be detected. Writing 0x0 to these registers signifies the overvoltage or overcurrent conditions are continuously detected and the corresponding interrupts are triggered permanently.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the register presented in Figure 18, OILVL and OVLVL registers are accessed as 32-bit registers with 8 most significant bits padded with 0s.

#### **Neutral Current Mismatch**

In three phase systems, the neutral current is equal to the algebraic sum of the phase currents:  $I_N(t) = I_A(t) + I_B(t) + I_C(t)$ . If there is a mismatch between these two quantities, then a tamper situation may have occurred in the system.

The ADE7878 computes the sum of the phase currents adding the content of IAWV[23:0], IBWV[23:0] and ICWV[23:0] registers and storing the result into ISUM[27:0] 28-bit signed register:  $I_{\text{SUM}}(t) = I_A(t) + I_B(t) + I_C(t).$  ISUM is computed every 125µs (8KHz frequency), the rate at which the current samples are available. The bit 17 (DREADY) in STATUS0[31:0] register can be used to signal when ISUM register may be read. See Digital Signal Processor chapter for more details on bit DREADY.

To recover I<sub>SUM</sub>(t) value from ISUM[27:0] register, use the following expression (8):

$$I_{SUM}(t) = \frac{ISUM[27:0]}{ADC_{\text{max}}} \cdot I_{FS}$$
 (8)

Where:

 $ADC_{max}$ =5,928,256, the ADC output when the input is at full scale

I<sub>FS</sub>=the full scale ADC phase current.

The ADE7878 computes the difference between the absolute values of ISUM and the neutral current from INWV[23:0] register, takes its absolute value and compares it against ISUMLVL threshold. If  $||ISUM| - |INWV|| \le ISUMLVL$ , then it is assumed that the neutral current is equal to the sum of the phase currents and the system functions correctly. If ||ISUM| - |INWV|| > ISUMLVL, then a tamper situation may have occurred and bit 20 (MISMTCH) in STATUS1[31:0] register is set to 1. An interrupt attached to the flag may be enabled by setting bit 20 (MISMTCH) in MASK1[31:0] register. If enabled, the  $\overline{IRQ1}$  pin is set low when status bit MISMTCH is set to 1. The status bit is cleared and  $\overline{IRQ1}$  pin is set back high by writing STATUS1 register with bit 20 (MISMTCH) set to 1.


If  $||ISUM| - |INWV|| \le ISUMLVL$ , then MISMTCH=0

If ||ISUM| - |INWV|| > ISUMLVL, then MISMTCH=1

ISUMLVL[23:0], the positive threshold used in the process, is a 24-bit signed register. As it is used in a comparison with an absolute value, it should always be set as a positive number, somewhere between 0x00000 and 0x7FFFFF. ISUMLVL uses the same scale of the current ADCs outputs, so writing +5,928,256 (0x5A7540) to ISUMLVL register puts the mismatch

detection level at full scale – see Current Channel ADC Chapter. Writing 0x000000, the default value, or a negative value, signifies the MISMTCH event is always triggered. The right value for the application should be written into ISUMLVL[23:0] register after power up or after a hardware/software reset to avoid continuously triggering MISMTCH events.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. As presented in Figure 39, ISUM[27:0] 28-bit signed register is accessed as a 32-bit register with 4 most significant bits padded with 0s.



bit 27 is sign bit

Figure 39. ISUM[27:0] register is transmitted as a 32-bit word

Similar to the registers presented in Figure 17, ISUMLVL[23:0] register is accessed as a 32-bit register with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **PHASE COMPENSATION**

As seen in Current Channel ADC and Voltage Channel ADC chapters, the data path for both current and voltages is the same. The phase error between current and voltage signals introduced by the ADE7878 is negligible. However, the ADE7878 must work with transducers that may have inherent phase errors. For example, a current transformer (CT) with a phase error of 0.1° to 3° is not uncommon. These phase errors can vary from part to part, and they must be corrected to perform accurate power calculations.

The errors associated with phase mismatch are particularly noticeable at low power factors. The ADE7878 provides a means of digitally calibrating these small phase errors. The ADE7878 allows a small time delay or time advance to be introduced into the signal processing chain to compensate for the small phase errors.

The phase calibration registers (APHCAL[9:0], BPHCAL[9:0], and CPHCAL[9:0]) are 10-bit registers that can vary the time advance in the voltage channel signal path from +61.5  $\mu s$  to  $-374.0~\mu s$ , respectively. Negative values written to the PHCAL registers represent a time advance, and positive values represent a time delay. One LSB is equivalent to 0.976  $\mu s$  of time delay or time advance (clock rate of 1.024MHz). With a line frequency of 60 Hz, this gives a phase resolution of 0.0211° (360°  $\times$  60 Hz/1.024 MHz) at the fundamental. This corresponds to a total correction range of  $-8.079^{\circ}$  to  $+1.329^{\circ}$  at 60 Hz. At 50Hz, the correction range is  $-6.732^{\circ}$  to  $+1.107^{\circ}$  and the resolution is  $0.0176^{\circ}(360^{\circ}\times50~\text{Hz}/1.024~\text{MHz})$ .

Given a phase error of x degrees measured using the phase voltage as the reference, then the corresponding LSBs are computed dividing x by the phase resolution (0.0211°/LSB for 60Hz, 0.0176°/LSB for 50Hz). Only results between -383 and +63 are acceptable. Numbers outside this range are not accepted. If the result is negative, the absolute value is written into PHCAL registers. If the result is positive, 512 is added to it before writing the result into PHCAL.

$$yPHCAL = \begin{cases} \frac{x}{phase\_resolution}, x \le 0\\ \frac{x}{phase\_resolution} + 512, x > 0 \end{cases}$$
 (9)

Figure 41 illustrates how the phase compensation is used to remove x=-1° phase lead in IA of the current channel from the

external current transducer (equivalent of  $55.5\mu s$  for 50Hz systems). To cancel the lead (1°) in the current channel of Phase A, a phase lead must be introduced into the corresponding voltage channel. Using expression (9), APHCAL is 57, rounded up from 56.8. The phase lead is achieved by introducing a time delay of  $55.73~\mu s$  into the phase A current.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. As presented in Figure 40, APHCAL, BPHCAL and CPHCAL 10-bit registers are accessed as a 16-bit registers with 6 most significant bits padded with 0s.

15	10	9		0
0000	00		xPHCAL	

Figure 40. xPHCAL registers (x=A,B,C) are communicated as 16-bit registers

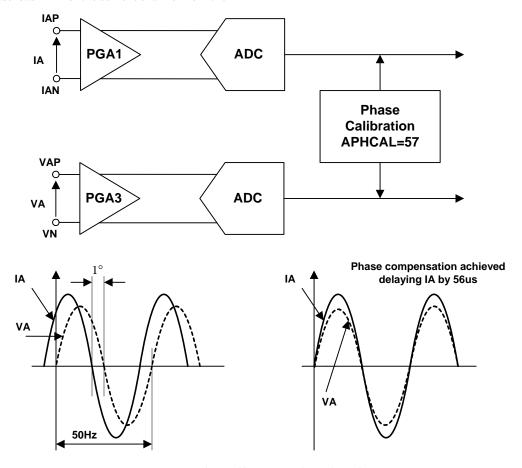


Figure 41. Phase Calibration on Voltage Channels

#### REFERENCE CIRCUIT

The nominal reference voltage at the REF<sub>IN/OUT</sub> pin is  $1.2\pm1\%$  V. This is the reference voltage used for the ADCs in the ADE7878. The REF<sub>IN/OUT</sub> pin can be overdriven by an external source, for example, an external 1.2 V reference. The voltage of the ADE7878 reference drifts slightly with temperature; see the Specifications section for the temperature coefficient

specification (in ppm/°C). The value of the temperature drift varies from part to part. Because the reference is used for all ADCs, any x% drift in the reference results in a 2x% deviation of the meter accuracy. The reference drift resulting from temperature changes is usually very small and typically much smaller than the drift of other components on a meter. Alternatively, the meter can be calibrated at multiple temperatures.

### **ADE7878**

If bit 0 (EXTREFEN) in CONFIG2[7:0] register is cleared to 0 (the default value), the ADE7878 uses the internal voltage reference. If the bit is set to 1, then the external voltage reference is used. CONFIG2 register should be set during PSM0 mode. Its value is maintained during the other power modes: PSM1, PSM2 and PSM3.

#### **DIGITAL SIGNAL PROCESSOR**

The ADE7878 contains an internal Digital Signal Processor (DSP) that computes all powers and rms values. It contains various memories: program memory ROM, program memory RAM, data memory RAM.

The program used for the power and rms computations is stored in the program memory ROM and the processor executes it every 8KHz. The end of the computations is signaled by setting bit 17 (DREADY) to 1 in STATUS0[31:0] register. An interrupt attached to this flag may be enabled by setting bit 17 (DREADY) in MASK0[31:0] register. If enabled, the  $\overline{\text{IRQ0}}$  pin is set low and status bit DREADY is set to 1 at the end of the computations. The status bit is cleared and  $\overline{\text{IRQ0}}$  pin is set back high by writing STATUS0[31:0] register with bit 17 (DREADY) set to 1.

The registers used by the DSP are located in the data memory RAM, at addresses between 0x4000 and 0x43FF. The width of this memory is 28 bits.

As seen in Power Up Procedure section, at power up or after a hardware or software reset, the DSP is in idle mode. No instruction is being executed. All the registers located in the data memory RAM are initialized at 0, their default values. The register RUN[15:0] used to start and stop the DSP is cleared to 0x0000. The RUN[15:0] register needs to be written with 0x0001 in order for the DSP to start code execution. It is recommended to first initialize all ADE7878 registers located into the data memory RAM with their desired values and then write RUN[15:0] register with 0x0001. In this way, the DSP starts the computations from a desired configuration.

There is no obvious reason to stop the DSP if the ADE7878 is maintained in PSM0 normal mode. All ADE7878 registers including ones located in the data memory RAM can be modified without stopping the DSP. However, to stop the DSP, 0x0000 has to be written into the register RUN[15:0]. To start the DSP again, one of the following procedures must be followed:

- if ADE7878 registers located in the data memory RAM have not been modified, write 0x0001 into register RUN[15:0] to start the DSP.
- -if ADE7878 registers located in the data memory RAM have to be modified, first execute a software or a hardware reset, initialize all ADE7878 registers at desired values and then write 0x0001 into register RUN[15:0] to start the DSP.

As mentioned in Power Management chapter, when the ADE7878 switches out of PSM0 power mode, it is

recommended to stop the DSP by writing 0x0000 into RUN[15:0] register (see Table 10 for recommended actions when changing power modes).

#### **ROOT MEAN SQUARE MEASUREMENT**

Root mean square (rms) is a measurement of the magnitude of an ac signal. Its definition can be both practical and mathematical. Defined practically, the rms value assigned to an ac signal is the amount of dc required to produce an equivalent amount of power in the load. Mathematically, the rms value of a continuous signal f(t) is defined as

$$FRMS = \sqrt{\frac{1}{T} \int_0^T f^2(t) dt}$$
 (10)

For time sampling signals, rms calculation involves squaring the signal, taking the average, and obtaining the square root.

$$FRMS = \sqrt{\frac{1}{N} \sum_{n=1}^{N} f^{2}[n]}$$
 (11)

The expression (11) implies that for signals containing harmonics, the rms calculation contains the contribution of all harmonics, not only the fundamental. The ADE7878 uses two different methods to calculate rms values. The first one is very accurate and is active only in PSM0 mode. The second one is less accurate, uses the estimation of the mean absolute value (may) measurement and is active in PSM0 and PSM1 modes.

The first method is to low-pass filter the square of the input signal (LPF3) and take the square root of the result (see Figure 43).

$$f(t) = \sum_{k=1}^{\infty} F_k \sqrt{2} \sin(k\omega t + \gamma_k)$$
 (12)

Then

$$f^{2}(t) = \sum_{k=1}^{\infty} F_{k}^{2} - \sum_{k=1}^{\infty} F_{k}^{2} \cos(2k\omega t + \gamma_{k}) +$$

$$+ 2 \sum_{\substack{k,m=1\\k \neq m}}^{\infty} 2 \cdot F_{k} \cdot F_{m} \sin(k\omega t + \gamma_{k}) \cdot \sin(m\omega t + \gamma_{m})$$
(13)

After the LPF3 and the execution of the square root, the rms value of f(t) is obtained:

$$F = \sqrt{\sum_{k=1}^{\infty} F_k^2} \tag{14}$$

The rms calculation based on this method is simultaneously processed on all seven analog input channels. Each result is available in 24-bit registers AIRMS, BIRMS, CIRMS, NIRMS, AVRMS, BVRMS and CVRMS.

The other method computes the absolute value of the input signal and then filters it to extract its dc component. It basically computes the absolute mean value of the input. If the input signal in equation (12) has only fundamental component, its average value is:

$$F_{DC} = \frac{1}{T} \left[ \int_{0}^{T} \sqrt{2} \times F_{1} \times \sin(\omega t) dt - \int_{T}^{T} \sqrt{2} \times F_{1} \times \sin(\omega t) dt \right]$$

$$F_{DC} = \frac{2}{\pi} \times \sqrt{2} \times F_{1}$$
(15)

The calculation based on this method is simultaneously processed only on the three phase currents. Each result is available in 20-bit registers AIMAV, BMAV, and CMAV. Note that the proportionality between mav and rms values is maintained only for the fundamental components. If harmonics are present in the current channel, then the mean absolute value is not anymore proportional to rms.

#### **Current RMS Calculation**

This chapter presents the first approach to compute the rms values of all phase and neutral currents.

Figure 43 shows the detail of the signal processing chain for the rms calculation on one of the phases of the current channel. The current channel rms value is processed from the samples used in the current channel. The current rms values are signed 24-bit values and they are stored into AIRMS[23:0], BIRMS[23:0], CIRMS[23:0] and NIRMS[23:0]. The update rate of the current rms measurement is 8KHz.

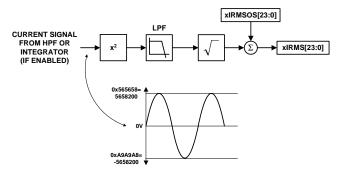


Figure 43. Current RMS Signal Processing

With the specified full-scale analog input signal of 0.5 V, the ADC produces an output code that is approximately  $\pm 5,928,256$ . The equivalent rms value of a full-scale sinusoidal signal is 4,191,910(0x3FF6A6), independent of the line frequency. If the integrator is enabled, that is when bit 0 (INTEN) in CONFIG[15:0] register is set to 1, the equivalent rms value of a full-scale sinusoidal signal at 50Hz is 4,191,910(0x3FF6A6) and at 60Hz is 3,493,258(0x354D8A).

The accuracy of the current rms is typically 0.1% error from the full-scale input down to 1/1000 of the full-scale input. Additionally, this measurement has a bandwidth of 4 kHz. It is recommended

to read the rms registers synchronous to the voltage zero crossings to ensure stability. The  $\overline{IRQ1}$  interrupt can be used to indicate when a zero crossing has occurred (see the Interrupts section).

Table 11 shows the settling time for the IRMS measurement, which is the time it takes for the rms register to reflect the value at the input to the current channel.

Table 11. Settling Time for IRMS Measurement

	50Hz Input signals	60Hz Input signals
Integrator Off	530msec	530msec
Integrator On	550msec	500msec

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the register presented in Figure 18, AIRMS, BIRMS, CIRMS and NIRMS 24-bit signed registers are accessed as 32-bit registers with 8 most significant bits padded with 0s.

#### **Current RMS Offset Compensation**

The ADE7878 incorporates a current rms offset compensation register for each phase: AIRMSOS[23:0], BIRMSOS[23:0], CIRMSOS[23:0] and NIRMSOS[23:0]. These are 24-bit signed registers and are used to remove offsets in the current rms calculations. An offset can exist in the rms calculation due to input noises that are integrated in the dc component of I²(t). One LSB of the current rms offset compensation register is equivalent to one LSB of the current rms register. Assuming that the maximum value from the current rms calculation is 4,191,400 with full-scale ac inputs (50 Hz), one LSB of the current rms offset represents 0.024% (1/4191·100) of the rms measurement at 60 dB down from full scale. Calibration of the offset should be done at low current and values at zero input should be ignored.

$$IRMS = IRMS_0 + IRMSOS$$
 (16)

where  $IRMS_0$  is the rms measurement without offset correction.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to the register presented in Figure 17, AIRMSOS, BIRMSOS, CIRMSOS and NIRMSOS 24-bit signed registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Current Mean Absolute Value calculation**

This chapter presents the second approach to estimate the rms values of all phase currents using the mean absolute value (mav) method. This approach is used in PSM1 mode to allow energy accumulation based on current rms values when the missing neutral case demonstrates to be a tamper attack. This data path is active also in PSM0 mode to allow for its gain calibration. The gain is used in the external microprocessor during PSM1 mode. The mav value of the neutral current is not computed using this method.




Figure 44: Current MAV Signal Processing for PSM1 mode

Figure 44 shows the details of the signal processing chain for the may calculation on one of the phases of the current channel. The current channel may value is processed from the samples used in the current channel waveform sampling mode. The samples are passed through a high pass filter to eliminate the eventual dc offsets introduced by the ADCs and the absolute values are computed. The outputs of this block are then filtered to obtain the average. The current may values are unsigned 20-bit values and they are stored in the registers AIMAV[19:0], BIMAV[19:0] and CIMAV[19:0]. The update rate of this may measurement is 8KHz.

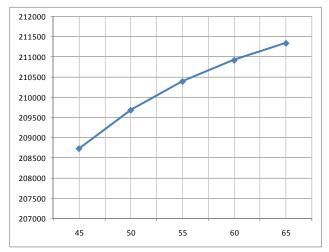


Figure 45. xIMAV[19:0] values at full scale and 45-65Hz line frequencies

The mav values of full scale sinusoidal signals of 50Hz and 60Hz are 209686 and respectively, 210921. As seen in Figure 45, there is a 1.25% variation between the mav estimate at 45Hz and the one at 65Hz for full scale sinusoidal inputs. The accuracy of the current mav is typically 0.5% error from the full-scale input down to 1/200 of the full-scale input. Additionally, this measurement has a bandwidth of 4 kHz. The settling time for the IMAV measurement, that is the time it takes for the mav register to reflect the value at the input to the current channel within 0.5% error is 500msec.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. As presented in Figure 46, AIMAV, BIMAV and CIMAV 20-bit unsigned registers are accessed as 32-bit registers with 12 most significant bits padded with 0s.

,	1 201		19	)
	0000 0000	0000	20 bit unsigned number	

Figure 46. xIMAV registers (x=A,B,C) are transmitted as 32-bit registers

#### **Current MAV Gain and Offset Compensation**

The current rms values stored in AIMAV, BIMAV and CIMAV may be calibrated using gain and offset coefficients corresponding to each phase. It is recommended to calculate

the gains in PSM0 mode by supplying the ADE7878 with nominal currents. The offsets may be estimated by supplying the ADE7878 with low currents, usually equal to the minimum value at which the accuracy is required. Every time the external microcontroller reads AIMAV, BIMAV and CIMAV registers, it uses these coefficients stored in its memory to correct them.

#### **Voltage Channel RMS Calculation**

Figure 47 shows the detail of the signal processing chain for the rms calculation on one of the phases of the voltage channel. The voltage channel rms value is processed from the samples used in the voltage channel. The voltage rms values are signed 24-bit values and they are stored into the registers AVRMS[23:0], BVRMS[23:0] and CVRMS[23:0]. The update rate of the current rms measurement is 8KHz.

With the specified full-scale analog input signal of 0.5 V, the ADC produces an output code that is approximately ±5,928,256. The equivalent rms value of a full-scale sinusoidal signal at 4,191,910 (0x3FF6A6), independent of the line frequency.

The accuracy of the voltage rms is typically 0.1% error from the full-scale input down to 1/1000 of the full-scale input. Additionally, this measurement has a bandwidth of 4 kHz. It is recommended to read the rms registers synchronous to the voltage zero crossings to ensure stability. The  $\overline{IRQ1}$  interrupt can be used to indicate when a zero crossing has occurred (see the Interrupts section).

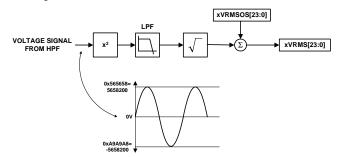


Figure 47. Voltage RMS Signal Processing

Table 12 shows the settling time for the VRMS measurement, which is the time it takes for the rms register to reflect the value at the input to the voltage channel.

Table 12. Settling Time for VRMS Measurement

50Hz Input signals	60Hz Input signals	
530 ms	530 ms	

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the register presented in Figure 18, AVRMS, BVRMS and CVRMS 24-bit signed registers are accessed as 32-bit registers with 8 most significant bits padded with 0s.

### **Voltage RMS Offset Compensation**

The ADE7878 incorporates a voltage rms offset compensation for each phase AVRMSOS[23:0], BVRMSOS[23:0], and CVRMSOS[23:0]. These are 24-bit signed registers used to

remove offsets in the voltage rms calculations. An offset can exist in the rms calculation due to input noises that are integrated in the dc component of  $V^2(t).$  One LSB of the voltage rms offset compensation register is equivalent to one LSB of the voltage rms register. Assuming that the maximum value from the voltage rms calculation is 4,191,400 with full-scale ac inputs (50 Hz), one LSB of the current rms offset represents 0.024% (1/4191  $\cdot$  100 ) of the rms measurement at 60 dB down from full scale. Calibration of the offset should be done at low current and values at zero input should be ignored.

$$VRMS = VRMS_0 + VRMSOS$$
 (17)

where  $VRMS_0$  is the rms measurement without offset correction.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, AVRMSOS, BVRMSOS and CVRMSOS 24-bit registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **ACTIVE POWER CALCULATION**

The ADE7878 computes two types of active powers: one is the total active power and one is the fundamental active power. Total active power considers in its calculation all fundamental and harmonic components of the voltages and currents. Fundamental active power is the power consumed only by the fundamental components of the voltages and currents.

#### **Total Active Power Calculation**

Electrical power is defined as the rate of energy flow from source to load. It is given by the product of the voltage and current waveforms. The resulting waveform is called the instantaneous power signal and it is equal to the rate of energy flow at every instant of time. The unit of power is the watt or joules/sec. If an ac system is supplied by a voltage v(t) and consumes the current i(t) and each of them contains harmonics, then:

$$v(t) = \sum_{k=1}^{\infty} V_k \sqrt{2} \sin(k\omega t + \varphi_k)$$
 (18)

$$i(t) = \sum_{k=1}^{\infty} I_k \sqrt{2} \sin(k\omega t + \gamma_k)$$

where  $V_k$ ,  $I_k$  = rms voltage and current of each harmonic,  $\phi_k$ ,  $\gamma_k$  =phase delays of each harmonic.

The instantaneous power in an ac system is:

$$\begin{split} &p(t) = v(t) \cdot i(t) = \sum_{k=1}^{\infty} V_k^{\phantom{k}} I_k^{\phantom{k}} \cos \left( \phi_k^{\phantom{k}} - \gamma_k^{\phantom{k}} \right) - \sum_{k=1}^{\infty} V_k^{\phantom{k}} I_k^{\phantom{k}} \cos \left( 2k\omega t + \phi_k^{\phantom{k}} - \gamma_k^{\phantom{k}} \right) + \\ &+ \sum_{\substack{k,m=1\\k \neq m}}^{\infty} V_k^{\phantom{k}} I_m^{\phantom{k}} \left\{ \cos \left[ (k-m)\omega t + \phi_k^{\phantom{k}} - \gamma_m^{\phantom{k}} \right] - \cos \left[ (k+m)\omega t + \phi_k^{\phantom{k}} + \gamma_m^{\phantom{k}} \right] \right\} \end{split}$$

(19)

The average power over an integral number of line cycles (n) is given by the expression in Equation (20).

$$P = \frac{1}{nT} \int_{0}^{nT} p(t)dt = \sum_{k=1}^{\infty} V_{k} I_{k} \cos(\varphi_{k} - \gamma_{k})$$
 (20)

where: T is the line cycle period.

P is referred to as the total active or total real power. Note that the total active power is equal to the dc component of the instantaneous power signal p(t) in expression (19), that is,

$$\sum\limits_{k=1}^{\infty}V_{k}I_{k}\cos\!\left(\phi_{k}-\gamma_{k}\right)$$
 . This is the expression used to calculate the total active power in the ADE7878 for each phase.

The expression of fundamental active power is obtained from expression (20) with k=1:

$$FP = V_1 I_1 \cos(\varphi_1 - \gamma_1) \tag{21}$$

Figure 48 shows how the ADE7878 computes the total active power on each phase. First, it multiplies the current and voltage signals in each phase. Then, extracts the dc component of the instantaneous power signal in each phase (A, B and C) using LPF2, the low pass filter.

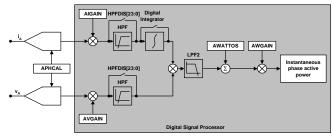


Figure 48. Total Active Power Data Path

If the phase currents and voltages contain only the fundamental component, are in phase (that is  $\phi_1=\gamma_1=0$ ) and they correspond to full scale ADC inputs, then multiplying them results in an instantaneous power signal that has a dc component  $V_1\cdot I_1$  and a sinusoidal component  $V_1\cdot I_1$  cos(2 $\omega t$ ). Figure 49 shows the corresponding waveforms.

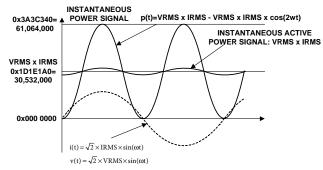


Figure 49. Active Power Calculation

Because LPF2 does not have an ideal brick wall frequency response (see Figure 50), the active power signal has some ripple due to the instantaneous power signal. This ripple is sinusoidal and has a frequency equal to twice the line frequency.

Because the ripple is sinusoidal in nature, it is removed when the active power signal is integrated over time to calculate the energy.

TRE

Figure 50. Frequency Response of the LPF Used to Filter Instantaneous Power in Each Phase

The ADE7878 stores the instantaneous total phase active powers into AWATT[23:0], BWATT[23:0] and CWATT[23:0] registers. Their expression is:

$$xWATT = \sum_{k=1}^{\infty} \frac{U_k}{U_{FS}} \cdot \frac{I_k}{I_{FS}} \cdot \cos(\varphi_k - \gamma_k) \cdot PMAX \cdot \frac{1}{2^4}$$
 (22)

where: x=A, B, C,

U<sub>FS</sub>, I<sub>FS</sub> are the rms values of the phase voltage and current when the ADC inputs are at full scale.

PMAX=33,516,139 is the instantaneous power computed when the ADC inputs are at full scale and in phase.

The xWATT[23:0], x=A, B, C waveform registers may be accessed using various serial ports. Refer to Waveform Sampling Mode chapter for more details.

#### **Fundamental Active power calculation**

The ADE7878 computes the fundamental active power using a proprietary algorithm that requires some initializations function of the frequency of the network and its nominal voltage measured in the voltage channel. The bit 14 (SELFREQ) in COMPMODE[15:0] register must be set according to the frequency of the network in which the ADE7878 is connected. If the network frequency is 50Hz, then this bit should be cleared to 0 (the default value). If the network frequency is 60Hz, then this bit should be set to 1. Also, VLEVEL[23:0] 24-bit signed register should be initialized with a positive value based on the following expression:

$$VLEVEL = \frac{U_{FS}}{U_n} \cdot 491520 \tag{23}$$

where

 $U_{\text{FS}}$  is the rms value of the phase voltages when the ADC inputs are at full scale.

Un is the rms nominal value of the phase voltage.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to the registers presented in Figure 17, VLEVEL[23:0] 24-bit signed register is accessed as a 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

Table 13 presents the settling time for the fundamental active power measurement.

**Table 13.Settling Time for Fundamental Active Power** 

Input signals at 63% FS	Input signals at 100% FS	
TBD ms	TBD ms	

#### **Active Power Gain Calibration**

Note that the average active power result from the LPF2 output in each phase can be scaled by ±100% by writing to the phase's watt gain 24-bit register (AWGAIN[23:0], BWGAIN[23:0], CWGAIN[23:0], AFWGAIN[23:0], BFWGAIN[23:0] or CFWGAIN[23:0]). xWGAIN, x=A,B,C registers are placed in each phase of the total active power data path. xFWGAIN, x=A,B,C registers are placed in each phase of the fundamental active power data path. The watt gain registers are twos complement, signed registers and have a resolution of 2-23/LSB. Equation (24) describes mathematically the function of the watt gain registers.

Average Power Data =

LPF2 Output 
$$\times \left(1 + \frac{\text{Watt Gain Register}}{2^{23}}\right)$$
 (24)

The output is scaled by -50% by writing 0xC00000 to the watt gain registers and increased by +50% by writing 0x400000 to them. These registers can be used to calibrate the active power (or energy) calculation in the ADE7878 for each phase.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, AWGAIN, BWGAIN, CWGAIN, AFWGAIN, BFWGAIN, CFWGAIN 24-bit signed registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Active Power Offset Calibration**

The ADE7878 also incorporates a watt offset 24-bit register on each phase and on each active power. AWATTOS[23:0], BWATTOS[23:0], and CWATTOS[23:0] registers compensate the offsets in the total active power calculations. AFWATTOS[23:0], BFWATTOS[23:0] and CFWATTOS[23:0] registers compensate offsets in the fundamental active power calculations. These are signed twos complement, 24-bit registers that are used to remove offsets in the active power calculations. An offset can exist in the power calculation due to crosstalk between channels on the PCB or in the chip itself. The offset calibration allows the contents of the active power register to be maintained at 0 when no power is being consumed. One LSB in the active power offset register is equivalent to 1 LSB in the active power multiplier output. With full scale current and voltage inputs, the LPF2 output is PMAX=33,516,139. At -80dB down from the full scale (active power scaled down 104 times), one LSB of the active power offset register represents 0.032% of

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, AWATTOS, BWATTOS, CWATTOS, AFWATTOS, BFWATTOS, CFWATTOS 24-bit signed registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Sign of Active Power Calculation**

Note that the average active power is a signed calculation. If the phase difference between the current and voltage waveform is more than 90°, the average power becomes negative. Negative power indicates that energy is being injected back on the grid. The ADE7878 has a sign detection circuitry for active power calculations. It can monitor or the total active powers or the fundamental active powers. As will be seen in the Active Energy Calculation section, the active energy accumulation is performed in two stages. Every time a sign change is detected in the energy accumulation at the end of the first stage, that is after the energy accumulated into the 48 bit accumulator reaches WTHR[47:0] threshold, a dedicated interrupt is triggered. The sign of each phase active power may be read in PHSIGN[15:0] register.

Bit 6 (REVAPSEL) in ACCMODE[7:0] register sets the type of active power being monitored. When REVAPSEL is 0, the default value, the total active power is monitored. When REVAPSEL is 1, the fundamental active power is monitored.

Bits 8, 7, 6 (REVAPC, REVAPB and respectively REVAPA) in STATUS0[31:0] are set when a sign change occurs in the power selected by bit 6 (REVAPSEL) in ACCMODE[7:0] register.

Bits 2, 1, 0 (CWSIGN, BWSIGN and respectively AWSIGN) in PHSIGN[15:0] register are set simultaneously with REVAPC, REVAPB and REVAPA bits. They indicate the sign of the power.

When they are 0, the corresponding power is positive. When they are 1, the corresponding power is negative.

Bit REVAPx of STATUS0[31:0] and bit xWSIGN in PHSIGN[15:0] refer to the active power of phase x, x=A,B or C, the power type being selected by bit 6 (REVAPSEL) in ACCMODE[7:0] register.

Interrupts attached to the bits 8, 7, 6 (REVAPC, REVAPB and respectively REVAPA) in STATUS0[31:0] register may be enabled by setting bits 8, 7, 6 in MASK0[31:0] register. If enabled, the  $\overline{IRQ0}$  pin is set low and the status bit is set to 1 whenever a change of sign occurs. To find the phase that triggered the interrupt, PHSIGN[15:0] register is read immediately after reading STATUS0[31:0]. Then the status bit is cleared and  $\overline{IRQ0}$  pin is set back high by writing STATUS0 register with the corresponding bit set to 1.

#### **Active Energy Calculation**

As previously stated, power is defined as the rate of energy flow. This relationship can be expressed mathematically as

$$Power = \frac{dEnergy}{dt}$$
 (25)

Conversely, *Energy* is given as the integral of power.

$$Energy = \int p(t)dt \tag{26}$$

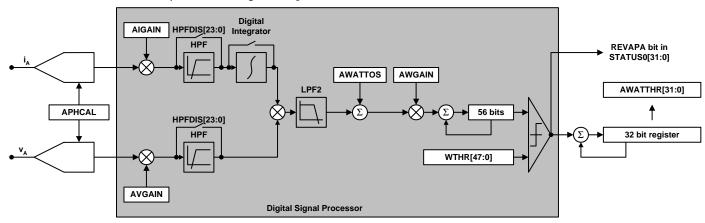


Figure 51. ADE7878 Total Active Energy Accumulation

Both total and fundamental active energy accumulations are signed. Negative energy is subtracted from the active energy contents.

The ADE7878 achieves the integration of the active power signal in two stages (see Figure 51). The process is identical for both total and fundamental active powers. The first stage is done inside the DSP: every 125µsec (8KHz frequency), the instantaneous phase total or fundamental active power is accumulated into an internal 56-bit register. When a threshold is reached, a pulse is generated at processor port and the threshold is subtracted from the internal register. The sign of the energy in this moment is considered the sign of the active power (see Sign of Active Power Calculation section for

details). The second stage is done outside the DSP and consists in accumulating the pulses generated by the processor into internal 32-bit accumulation registers. The content of these registers is transferred to watt-hr registers xWATTHR[31:0] and xFWATTHR[31:0], x=A,B,C when these registers are accessed. AWATTHR[31:0], BWATTHR[31:0] and CWATTHR[31:0] represent the phase total active powers and AFWATTHR[31:0], BFWATTHR[31:0] and CFWATTHR[31:0] represent phase fundamental active powers.

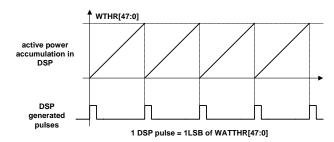


Figure 52. Active Power Accumulation inside DSP

Figure 52 explains this process. The WTHR[47:0] 48-bit signed register contains the threshold. It is introduced by the user and is common for both total and fundamental phase active powers. Its value depends on how much energy is assigned to 1LSB of watt-hour registers. Let's suppose a derivative of wh [10<sup>n</sup> wh], n an integer, is desired as 1LSB of WATTHR. Then WTHR is computed using the following expression:

$$WTHR = \frac{PMAX \cdot f_s \cdot 3600 \cdot 10^n}{U_{FS} \cdot I_{FS}}$$
 (27)

where:

PMAX=33,516,139=0x1FF6A6B is the instantaneous power computed when the ADC inputs are at full scale.

f<sub>s</sub>=8KHz is the frequency with which the DSP computes the instantaneous power.

 $U_{\text{FS}}$ ,  $I_{\text{FS}}$  are the rms values of phase voltages and currents when the ADC inputs are at full scale.

The maximum value that may be written on WTHR[47:0] is  $2^{47}$ -1. The minimum value is 0x0, but it is recommended to write a number equal or greater than PMAX. Negative numbers should never be used.

The WTHR[47:0] is a 48-bit register. As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. As presented in Figure 53, WTHR register is accessed as two 32-bit registers (WTHR1[31:0] and WTHR0[31:0]), each having 8 most significant bits padded with 0s.

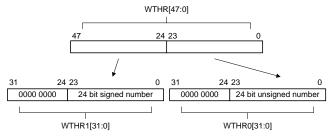


Figure 53. WTHR[47:0] is communicated as two 32-bit registers

This discrete time accumulation or summation is equivalent to integration in continuous time following the description in expression (28).

Energy = 
$$\int p(t)dt = \lim_{T \to 0} \left\{ \sum_{n=0}^{\infty} p(nT) \times T \right\}$$
 (28)

where

*n* is the discrete time sample number. *T* is the sample period.

In the ADE7878, the total phase active powers are accumulated in AWATTHR[31:0], BWATTHR[31:0] and CWATTHR[31:0] 32-bit signed registers. The fundamental phase active powers are accumulated in AFWATTHR[31:0], BFWATTHR[31:0] and CFWATTHR[31:0] 32-bit signed registers. The active energy register content can roll over to full-scale negative (0x80000000) and continue increasing in value when the active power is positive. Conversely, if the active power is negative, the energy register would underflow to full-scale positive (0x7FFFFFFF) and continue decreasing in value.

Bit 0 (AEHF) in STATUS0[31:0] register is set when bit 30 of one of xWATTHR, x=A, B, C registers changes, signifying one of these registers is half full. If the active power is positive, the watt-hr register becomes half full when it increments from 0x3FFF FFFF to 0x4000 0000. If the active power is negative, the watt-hr register becomes half full when it decrements from 0xC000 0000 to 0xBFFF FFFF. Analogously, bit 1 (FAEHF) in STATUS0[31:0] register is set when bit 30 of one of xFWATTHR, x=A, B, C registers changes, signifying one of these registers is half full.

Setting bits 1, 0 in MASK0[31:0] register enable the FAEHF and AEHF interrupts respectively. If enabled, the  $\overline{IRQ0}$  pin is set low and the status bit is set to 1 whenever one of the energy registers xWATTHR (for AEHF interrupt) or xFWATTHR (for FAEHF interrupt), x=A,B,C becomes half full. The status bit is cleared and  $\overline{IRQ0}$  pin is set to logic high by writing STATUS0 register with the corresponding bit set to 1.

Setting bit 6 (RSTREAD) of LCYMODE[7:0] register enables a read-with-reset for all watt-hr accumulation registers, that is, the registers are reset to 0 after a read operation.

#### **Integration Time Under Steady Load**

The discrete time sample period (T) for the accumulation register is  $125\mu s$  (1/8KHz). With full-scale sinusoidal signals on the analog inputs and the watt gain registers set to 0x00000, the average word value from each LPF2 is PMAX=33,516,139=0x1FF6A6B. If the WTHR[47:0] threshold is set at PMAX level, this means the DSP generates a pulse that is added at watt-hr registers every 125  $\mu s$ .

The maximum value that can be stored in the watt-hr accumulation register before it overflows is  $2^{31} - 1$  or 0x7FFFFFFF. The integration time is calculated as

Time = 
$$0x7FFF$$
,  $FFFF \times 125\mu s = 74h33 min 55s$  (29)

#### **Energy Accumulation Modes**

The active power accumulated in each watt-hr accumulation 32-bit register (AWATTHR, BWATTHR, CWATTHR, AFWATTHR, BFWATTHR or CFWATTHR) depends on the

configuration of bits 5, 4 (CONSEL) in ACCMODE[7:0] register. The different configurations are described in Table 14.

Table 14. Inputs to Watt-Hr Accumulation Registers

CONSEL	AWATTHR, AFWATTHR	BWATTHR, BFWATTHR	CWATTHR, CFWATTHR
00	$VA \times IA$	VB × IB	VC × IC
01	$VA \times IA$	0	VC × IC
10	$VA \times IA$	VB×IB	VC × IC
		VB = -VA - VC	
11	$VA \times IA$	$VB \times IB$	VC × IC
		VB = -VA	

Depending on the poly-phase meter service, the appropriate formula should be chosen to calculate the active energy. The American ANSI C12.10 Standard defines the different configurations of the meter. Table 15 describes which mode should be chosen in these different configurations.

**Table 15. Meter Form Configuration** 

ANSI Meter Form		CONSEL
5S/13S	3-Wire Delta	01
6S/14S	4-Wire Wye	10
8S/15S	4-Wire Delta	11
9S/16S	4-Wire Wye	00

Bits 1, 0 (WATTACC[1:0]) in ACCMODE[7:0] register determine how CF frequency output may be generated function of the total and fundamental active powers. While the watt-hr accumulation registers accumulate the active power in a signed format, the frequency output may be generated in signed mode or in absolute mode, function of WATTACC[1:0]. See Energy to Frequency Conversion chapter for details.

#### Line Cycle Active Energy Accumulation Mode

In line cycle energy accumulation mode, the energy accumulation is synchronized to the voltage channel zero crossings so that active energy is accumulated over an integral number of half line cycles. The advantage of summing the active energy over an integer number of line cycles is that the sinusoidal component in the active energy is reduced to 0. This eliminates any ripple in the energy calculation and allows the energy to be accumulated accurately over a shorter time. By using the line cycle energy accumulation mode, the energy calibration can be greatly simplified, and the time required to calibrate the meter can be significantly reduced. In line cycle energy accumulation mode, the ADE7878 transfers the active energy accumulated in the 32-bit internal accumulation registers into xWATHHR[31:0] or xFWATTHR[31:0], x=A,B,C registers after an integral number of line cycles, as shown in Figure 54. The number of half line cycles is specified in the LINECYC[15:0] register.

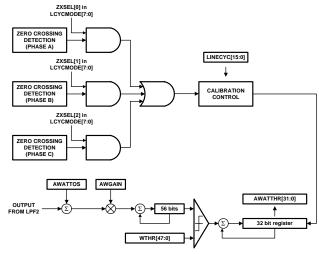


Figure 54. ADE7878 Line Cycle Active Energy Accumulation Mode

The line cycle energy accumulation mode is activated by setting bit 0 (LWATT) in the LCYCMODE[7:0] register. The energy accumulation over an integer number of half line cycles is written to the watt-hr accumulation registers after LINECYC[15:0] number of half line cycles are detected. When using the line cycle accumulation mode, the bit 6 (RSTREAD) of the LCYCMODE[7:0] register should be set to Logic 0 because the read with reset of watt-hr registers is not available in this mode.

Phase A, Phase B, and Phase C zero crossings are, respectively, included when counting the number of half-line cycles by setting bits 5, 4, 3 (ZXSEL) in the LCYCMODE[7:0] register. Any combination of the zero crossings from all three phases can be used for counting the zero crossing. Only one phase should be selected at a time for inclusion in the zero crossings count during calibration.

The number of zero crossings is specified by the LINECYC[15:0] 16-bit unsigned register. The ADE7878 can accumulate active power for up to 65535 combined zero crossings. Note that the internal zero-crossing counter is always active. By setting bit 0 (LWATT) in LCYCMODE[7:0] register, the first energy accumulation result is, therefore, incorrect. Writing to the LINECYC[15:0] register when the LWATT bit is set resets the zero-crossing counter, thus ensuring that the first energy accumulation result is accurate.

At the end of an energy calibration cycle, the bit 5 (LENERGY) in the STATUS0[31:0] register is set. If the corresponding mask bit in the MASK0[31:0] interrupt mask register is enabled, the  $\overline{\mbox{IRQ0}}$  pin also goes active low. The status bit is cleared and  $\overline{\mbox{IRQ0}}$  pin is set back high by writing STATUS0 register with the corresponding bit set to 1.

Because the active power is integrated on an integer number of half-line cycles in this mode, the sinusoidal components are reduced to 0, eliminating any ripple in the energy calculation. Therefore, total energy accumulated using the line-cycle accumulation mode is

$$e = \int_{t}^{t+nT} p(t)dt = nT \sum_{k=1}^{\infty} V_k I_k \cos(\varphi_k - \gamma_k)$$
 (30)

where nT is the accumulation time.

Note that line cycle active energy accumulation uses the same signal path as the active energy accumulation. The LSB size of these two methods is equivalent.

#### **REACTIVE POWER CALCULATION**

The ADE7878 computes two types of reactive powers: one is the total reactive power and one is the fundamental reactive power. Total reactive power integrates all fundamental and harmonic components of the voltages and currents. On the other hand, fundamental reactive power measures the fundamental component of reactive power.

A load that contains a reactive element (inductor or capacitor) produces a phase difference between the applied ac voltage and the resulting current. The power associated with reactive elements is called reactive power, and its unit is VAR. Reactive power is defined as the product of the voltage and current waveforms when all harmonic components of one of these signals are phase shifted by 90°.

Expression (33) gives an expression for the instantaneous reactive power signal in an ac system when the phase of the current channel is shifted by +90°.

$$v(t) = \sum_{k=1}^{\infty} V_k \sqrt{2} \sin(k\omega t + \varphi_k)$$
 (31)

$$i(t) = \sum_{k=1}^{\infty} I_k \sqrt{2} \sin(k\omega t + \gamma_k)$$
 (32)

$$i'(t) = \sum_{k=1}^{\infty} I_k \sqrt{2} \sin \left( k\omega t + \gamma_k + \frac{\pi}{2} \right)$$

i'(t) is the current waveform with all harmonic components phase shifted by 90°.

Then the instantaneous reactive power q(t) can be expressed as

$$q(t) = v(t) \times i'(t) \tag{33}$$

$$\begin{split} &q(t) = \sum_{k=1}^{\infty} V_k I_k \cdot 2 \sin \! \left( k \omega t + \phi_k \right) \cdot \sin \! \left( k \omega t + \gamma_k + \frac{\pi}{2} \right) + \\ &+ \sum_{\substack{k,m=1\\k \neq m}}^{\infty} V_k I_m \cdot 2 \sin \! \left( k \omega t + \phi_k \right) \cdot \sin \! \left( m \omega t + \gamma_m + \frac{\pi}{2} \right) \end{split}$$

Note that q(t) can be rewritten as

$$\begin{split} &q(t) = \sum_{k=1}^{\infty} V_k I_k \left\{ cos \! \left( \phi_k - \gamma_k - \frac{\pi}{2} \right) \! - cos \! \left( 2k\omega t + \phi_k + \gamma_k + \frac{\pi}{2} \right) \! \right\} + \\ &+ \sum_{\substack{k,m=1\\k\neq m}}^{\infty} V_k I_m \left\{ cos \! \left[ (k-m)\omega t + \phi_k - \gamma_k - \frac{\pi}{2} \right] \right\} - \\ &- \sum_{\substack{k,m=1\\k\neq m}}^{\infty} V_k I_m \left[ cos \! \left[ (k+m)\omega t + \phi_k + \gamma_k + \frac{\pi}{2} \right] \right] \end{split}$$

(34)

The average total reactive power over an integral number of line cycles (n) is given by the expression in Equation (35).

$$Q = \frac{1}{nT} \int_{0}^{nT} q(t)dt = \sum_{k=1}^{\infty} V_{k} I_{k} \cos \left( \phi_{k} - \gamma_{k} - \frac{\pi}{2} \right)$$
 (35)

$$Q = \sum_{k=1}^{\infty} V_k I_k \sin(\varphi_k - \gamma_k)$$

where:

*T* is the period of the line cycle.

Q is referred to as the total reactive power. Note that the total reactive power is equal to the dc component of the instantaneous reactive power signal q(t) in Equation (34), that

is, 
$$\sum\limits_{k=1}^{\infty}V_{k}I_{k}$$
 sin( $\!\!\!\left(\phi_{k}-\gamma_{k}\right)\!\!$  . This is the relationship used to

calculate the total reactive power in the ADE7878 for each phase. The instantaneous reactive power signal q(t) is generated by multiplying each harmonic of the voltage signals by the 90° phase-shifted corresponding harmonic of the current in each phase.

The ADE7878 stores the instantaneous total phase reactive powers into AVAR[23:0], BVAR[23:0] and CVAR[23:0] registers. Their expression is:

$$xVAR = \sum_{k=1}^{\infty} \frac{U_k}{U_{FS}} \cdot \frac{I_k}{I_{FS}} \cdot \sin(\varphi_k - \gamma_k) \cdot PMAX \cdot \frac{1}{2^4}$$
 (36)

where:

x=A, B, C

 $U_{FS}$ ,  $I_{FS}$  are the rms values of the phase voltage and current when the ADC inputs are at full scale.

PMAX=33,516,139 is the instantaneous power computed when the ADC inputs are at full scale and in phase.

The xVAR[23:0], x=A, B, C waveform registers may be accessed using various serial ports. Refer to Waveform Sampling Mode chapter for more details.

The expression of fundamental reactive power is obtained from expression (35) with k=1:

$$FQ = V_1 I_1 \cos(\varphi_1 - \gamma_1)$$

The ADE7878 computes the fundamental reactive power using a proprietary algorithm that requires some initializations

function of the frequency of the network and its nominal voltage measured in the voltage channel. These initializations have been introduced in the Active Power Calculation chapter and are common for both fundamental active and reactive powers.

Table 16 presents the settling time for the fundamental reactive power measurement, which is the time it takes the power to reflect the value at the input of the ADE7878.

Table 16.Settling Time for Fundamental Reactive Power

Input signals at 63% FS	Input signals at 100% FS	
TBD ms	TBD ms	

#### **Reactive Power Gain Calibration**

The average reactive power from the LPF output in each phase can be scaled by  $\pm 100\%$  by writing to the phase's VAR gain 24-bit register (AVARGAIN[23:0], BVARGAIN[23:0], CVARGAIN[23:0], AFVARGAIN[23:0], BFVARGAIN[23:0] or CFVARGAIN[23:0]). xVARGAIN, x=A,B,C registers are placed in each phase of the total reactive power data path. xFVARGAIN, x=A,B,C registers are placed in each phase of the fundamental reactive power data path. The VAR gain registers are twos complement, signed registers and have a resolution of  $2^{-23}$ /LSB. The function of the VAR gain registers is expressed by

Average Reactive Power =

LPF2 Output 
$$\times \left(1 + \frac{\text{VAR Gain Register}}{2^{23}}\right)$$
 (37)

The output is scaled by -50% by writing 0xC00000 to the VAR gain registers and increased by +50% by writing 0x400000 to them. These registers can be used to calibrate the reactive power (or energy) gain in the ADE7878 for each phase.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, AVARGAIN, BVARGAIN, CVARGAIN, AFVARGAIN, BFVARGAIN, CFVARGAIN 24-bit signed registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Reactive Power Offset Calibration**

The ADE7878 provides a VAR offset register on each phase and on each reactive power. AVAROS[23:0], BVAROS[23:0], and CVAROS[23:0] registers compensate the offsets in the total reactive power calculations. AFVAROS[23:0], BFVAROS[23:0] and CFVAROS[23:0] registers compensate offsets in the fundamental reactive power calculations. These are signed twos complement, 24-bit registers that are used to remove offsets in the reactive power calculations. An offset can exist in the power calculation due to crosstalk between channels on the PCB or in the chip itself. The offset calibration allows the contents of the reactive power register to be maintained at 0 when no reactive power is being consumed. The offset registers' resolution is the same as the active power offset registers (see the Active Power Offset Calibration section).

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, AVAROS, BVAROS, CVAROS, AFVAROS, BFVAROS, CFVAROS 24-bit signed registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Sign of Reactive Power Calculation**

Note that the reactive power is a signed calculation. Table 17 summarizes the relationship between the phase difference between the voltage and the current and the sign of the resulting VAR calculation.

The ADE7878 has a sign detection circuitry for reactive power calculations. It can monitor or the total reactive powers, or the fundamental reactive powers. As will be seen in the Reactive Energy Calculation section, the reactive energy accumulation is executed in two stages. Every time a sign change is detected in the energy accumulation at the end of the first stage, that is after the energy accumulated into the 48 bit accumulator reaches VARTHR[47:0] threshold, a dedicated interrupt is triggered. The sign of each phase reactive power may be read in PHSIGN[15:0] register.

Bit 7 (REVRPSEL) in ACCMODE[7:0] register sets the type of reactive power being monitored. When REVRPSEL is 0, the default value, the total reactive power is monitored. When REVRPSEL is 1, then the fundamental reactive power is monitored.

Bits 12, 11, 10 (REVRPC, REVRPB and respectively REVRPA) in STATUS0[31:0] are set when a sign change occurs in the power selected by bit 7 (REVRPSEL) in ACCMODE[7:0] register.

Bits 6, 5, 4 (CVARSIGN, BVARSIGN and respectively AVARSIGN) in PHSIGN[15:0] register are set simultaneously with REVRPC, REVRPB and REVRPA bits. They indicate the sign of the power. When they are 0, the corresponding power is positive. When they are 1, the corresponding power is negative.

Bit REVRPx of STATUS0[31:0] and bit xVARSIGN in PHSIGN[15:0] refer to the reactive power of phase x, x=A,B or C, the power type being selected by bit REVRPSEL in ACCMODE[7:0] register.

Setting bits 12, 11, 10 in MASK0[31:0] register enables REVRPC, REVRPB and REVRPA interrupts respectively. If enabled, the  $\overline{\text{IRQ0}}$  pin is set low and the status bit is set to 1 whenever a change of sign occurs. To find the phase that triggered the interrupt, PHSIGN[15:0] register is read immediately after reading STATUS0[31:0]. Then the status bit is cleared and  $\overline{\text{IRQ0}}$  pin is set back high by writing STATUS0 register with the corresponding bit set to 1.

Table 17. Sign of Reactive Power Calculation

Φ¹	Integrator	Sign of Reactive Power
Between 0 to +90	Off	Positive
Between -90 to 0	Off	Negative
Between 0 to +90	On	Positive
Between -90 to 0	On	Negative

 $<sup>^{1}</sup>$   $\Phi$  is defined as the phase angle of the voltage signal minus the current signal; that is,  $\Phi$  is positive if the load is inductive and negative if the load is capacitive.

#### **Reactive Energy Calculation**

Reactive energy is defined as the integral of reactive power.

Reactive Energy = 
$$\int q(t)dt$$
 (34)

Both total and fundamental reactive energy accumulations are signed. Negative energy is subtracted from the reactive energy contents.

Similar to active power, the ADE7878 achieves the integration of the reactive power signal in two stages (see Figure 55). The process is identical for both total and fundamental active powers. The first stage is done inside the DSP: every 125µsec (8KHz frequency), the instantaneous phase total or fundamental reactive power is accumulated into an internal 56bit register. When a threshold is reached, a pulse is generated at processor port and the threshold is subtracted from the internal register. The sign of the energy in this moment is considered the sign of the reactive power (see Sign of Reactive Power Calculation section for details). The second stage is done outside the DSP and consists in accumulating the pulses generated by the processor into internal 32-bit accumulation registers. The content of these registers is transferred to var-hr registers xVARHR[31:0] and xFVARHR[31:0], x=A, B, C when these registers are accessed. AVARHR[31:0], BVARHR[31:0] and CVARHR[31:0] represent the phase total reactive powers and AFWATTHR[31:0], BFWATTHR[31:0] and CFWATTHR[31:0] represent phase fundamental reactive powers.

Figure 52 from the Active Energy Calculation section explains this process. The VARTHR[47:0] 48-bit signed register contains the threshold. It is introduced by the user and is common for both total and fundamental phase reactive powers. Its value depends on how much energy is assigned to 1LSB of var-hour registers. Let's suppose a derivative of varh [10<sup>n</sup> varh], n an integer, is desired as 1LSB of VARHR. Then VARTHR may be computed using the following expression:

$$VARTHR = \frac{PMAX \cdot f_s \cdot 3600 \cdot 10^n}{U_{ES} \cdot I_{ES}}$$

where:

PMAX=33,516,139=0x1FF6A6B, the instantaneous power computed when the ADC inputs are at full scale.

f<sub>s</sub>=8KHz is the frequency with which the DSP computes the instantaneous power.

U<sub>FS</sub>, I<sub>FS</sub> are the rms values of phase voltages and currents when the ADC inputs are at full scale.

The maximum value that may be written on VARTHR[47:0] is  $2^{47}$ -1. The minimum value is 0x0, but it is recommended to write a number equal or greater than PMAX. Negative numbers should never be used.

The VARTHR[47:0] is a 48-bit register. As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the WTHR[47:0] register presented in Figure 53, VARTHR[47:0] is accessed as two 32-bit registers (VARTHR1[31:0] and VARTHR0[31:0]), each having 8 most significant bits padded with 0s.

This discrete time accumulation or summation is equivalent to integration in continuous time following the description in expression (38).

$$Re\ active Energy = \int q(t)dt = \lim_{T \to 0} \left\{ \sum_{n=0}^{\infty} q(nT) \times T \right\}$$
 (38)

where:

*n* is the discrete time sample number. *T* is the sample period.

On the ADE7878, the total phase reactive powers are accumulated in AVARHR[31:0], BVARHR[31:0] and CVARHR[31:0] 32-bit signed registers. The fundamental phase reactive powers are accumulated in AFVARHR[31:0], BFVARHR[31:0] and CFVARHR[31:0] 32-bit signed registers. The reactive energy register content can roll over to full-scale negative (0x80000000) and continue increasing in value when the reactive power is positive. Conversely, if the reactive power is negative, the energy register would underflow to full-scale positive (0x7FFFFFFF) and continue decreasing in value.

Bit 2 (REHF) in STATUS0[31:0] register is set when bit 30 of one of xVARHR, x=A,B,C registers changes, signifying one of these registers is half full. If the reactive power is positive, the var-hr register becomes half full when it increments from 0x3FFF FFFF to 0x4000 0000. If the reactive power is negative, the var-hr register becomes half full when it decrements from 0xC000 0000 to 0xBFFF FFFF. Analogously, bit 3 (FREHF) in STATUS0[31:0] register is set when bit 30 of one of xFVARHR, x=A, B, C registers changes, signifying one of these registers is half full.

Setting bits 3, 2 in MASK0[31:0] register enable the FREHF and REHF interrupts respectively. If enabled, the  $\overline{IRQ0}$  pin is set low and the status bit is set to 1 whenever one of the energy registers xVARHR (for REHF interrupt) or xFVARHR (for FREHF interrupt), x=A, B, C becomes half full. The status bit is cleared and  $\overline{IRQ0}$  pin is set back high by writing STATUS0 register with the corresponding bit set to 1.

Setting bit 6 (RSTREAD) of LCYMODE[7:0] register enables a read-with-reset for all var-hr accumulation registers, that is, the registers are reset to 0 after a read operation.

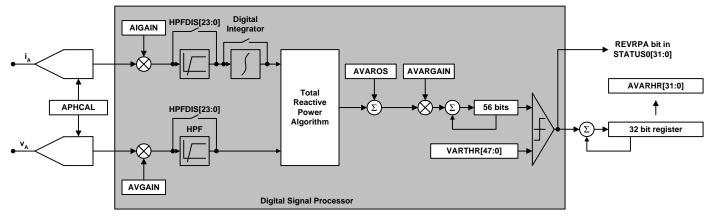


Figure 55. ADE7878 Total Reactive Energy Accumulation

#### **Integration Time Under Steady Load**

The discrete time sample period (T) for the accumulation register is  $125\mu s$  (1/8KHz). With full-scale pure sinusoidal signals on the analog inputs, a  $90^{\circ}$  phase difference between the voltage and the current signal (the largest possible reactive power), the average word value representing the reactive power is PMAX=33,516,139=0x1FF6A6B. If the VARTHR[47:0] threshold is set at PMAX level, this means the DSP generates a pulse that is added at var-hr registers every 125  $\mu s$ .

The maximum value that can be stored in the var-hr accumulation register before it overflows is  $2^{31} - 1$  or 0x7FFFFFFF. The integration time is calculated as

Time = 
$$0x7FFF$$
,  $FFFF \times 125\mu s = 74h33 min 55s$  (39)

#### **Energy Accumulation Modes**

The reactive power accumulated in each var-hr accumulation 32-bit register (AVARHR, BVARHR, CVARHR, AFVARHR, BFVARHR or CFVARHR) depends on the configuration of bits 5, 4 (CONSEL) in the ACCPMODE[7:0] register, in correlation with the watt-hr registers. The different configurations are described in Table 18. Note that IA'/IB'/IC' are the phase-shifted current waveforms.

Table 18. Inputs to VAR-Hr Accumulation Registers

CONSEL[1,0]	AVARHR, AFVARHR	BVARHR, BFVARHR	CVARHR, CFVARHR
00	$VA \times IA'$	VB × IB'	VC × IC'
01	$VA \times IA'$	0	$VC \times IC'$
10	VA x IA'	$VB \times IB'$	VC x IC'
		VB=-VA-VC	
11	VA x IA'	$VB \times IB'$	VC × IC′
		VB=-VA	

Bits 3, 2 (VARACC[1:0]) in ACCMODE[7:0] register determine how CF frequency output may be generated function of the total and fundamental active powers. While the var-hr accumulation registers accumulate the reactive power in a signed format, the frequency output may be generated in signed mode or in sign adjusted mode, function of VARACC[1:0]. See Energy to Frequency Conversion chapter for details.

#### Line Cycle Reactive Energy Accumulation Mode

As mentioned in Line Cycle Active Energy Accumulation Mode section, in line cycle energy accumulation mode, the energy accumulation can be synchronized to the voltage channel zero crossings so that reactive energy can be accumulated over an integral number of half line cycles. In this mode, the ADE7878 transfers the reactive energy accumulated in the 32-bit internal accumulation registers into xVARHR[31:0] or xFVARHR[31:0], x=A,B,C registers after an integral number of line cycles, as shown in Figure 56. The number of half line cycles is specified in the LINECYC[15:0] register.

The line cycle reactive energy accumulation mode is activated by setting bit 1 (LVAR) in the LCYCMODE[7:0] register. The total reactive energy accumulated over an integer number of ahlf line cycles or zero crossings is accumulated in the var-hr accumulation registers after the LINECYC number of zero crossings is detected. When using the line cycle accumulation mode, bit 6 (RSTREAD) of the LCYCMODE[7:0] register should be set to Logic 0 because the read with reset of var-hr registers is not available in this mode.

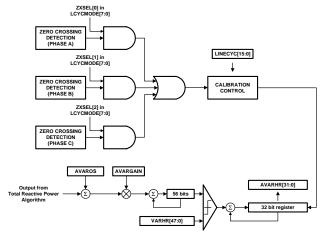


Figure 56. ADE7878 Line Cycle Reactive Energy Accumulation Mode

Phase A, Phase B, and Phase C zero crossings are, respectively, included when counting the number of half-line cycles by setting bits 5, 4, 3 (ZXSEL) in the LCYCMODE[7:0] register. Any combination of the zero crossings from all three phases can

be used for counting the zero crossing. Only one phase should be selected at a time for inclusion in the zero crossings count during calibration.

For details on setting LINECYC[15:0] register and the interrupt LENERGY associated with the line cycle accumulation mode, see Line Cycle Active Energy Accumulation Mode section.

#### APPARENT POWER CALCULATION

Apparent power is defined as the maximum power that can be delivered to a load. One way to obtain the apparent power is by multiplying the voltage rms value by the current rms value:

$$S = VRMS \cdot IRMS \tag{40}$$

where S is the apparent power and VRMS and IRMS are the rms voltage and current, respectively. It is also called the arithmetic apparent power.

The ADE7878 computes the arithmetic apparent power on each phase. Figure 57 illustrates the signal processing in each phase for the calculation of the apparent power in the ADE7878. As VRMS and IRMS contain all harmonic information, the apparent power computed by the ADE7878 is a total apparent power. The ADE7878 does not compute a fundamental apparent power because it does not measure the rms values of the fundamental voltages and currents.

The ADE7878 stores the instantaneous phase apparent powers into AVA[23:0], BVA[23:0] and CVA[23:0] registers. Their expression is:

$$xVA = \frac{U}{U_{FS}} \cdot \frac{I}{I_{FS}} \cdot PMAX \cdot \frac{1}{2^4}$$
 (41)

where:

x=A, B, C

U, I are the rms values of the phase voltage and current.

U<sub>FS</sub>, I<sub>FS</sub> are the rms values of the phase voltage and current when the ADC inputs are at full scale.

PMAX=33,516,139 is the instantaneous power computed when the ADC inputs are at full scale and in phase.

The xVA[23:0], x=A, B, C waveform registers may be accessed using various serial ports. Refer to Waveform Sampling Mode chapter for more details.

The ADE7878 may compute the apparent power in an alternative way by multiplying the phase rms current by an rms voltage introduced externally. See Apparent Power Calculation using VNOM section for details.

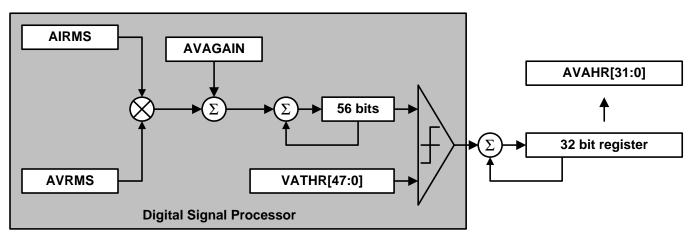


Figure 57. Apparent Power data flow and Apparent Energy Accumulation

#### **Apparent Power Gain Calibration**

The average apparent power result in each phase can be scaled by  $\pm 100\%$  by writing to the phase's VAGAIN 24-bit register (AVAGAIN[23:0], BVAGAIN[23:0] or CVAG AIN[23:0]). The VAGAIN registers are twos complement, signed registers and have a resolution of  $2^{-23}/LSB$ . The function of the VA gain registers is expressed mathematically as

Average Apparent Power =

$$VRMS \times IRMS \times \left(1 + \frac{VAGAIN Register}{2^{23}}\right)$$
 (42)

The output is scaled by -50% by writing 0xC00000 to the VA gain registers and increased by +50% by writing 0x400000 to them. These registers can be used to calibrate the apparent power (or energy) calculation in the ADE7878 for each phase.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, AVAGAIN, BVAGAIN, CVAGAIN 24-bit registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

#### **Apparent Power Offset Calibration**

Each rms measurement includes an offset compensation register to calibrate and eliminate the dc component in the rms value (see the Root Mean Square Measurement section). The voltage and current rms values are then multiplied together in the apparent power signal processing. As no additional offsets are created in the multiplication of the rms values, there is no specific offset compensation in the apparent power signal processing. The offset compensation of the apparent power measurement in each phase should be done by calibrating each individual rms measurement.

#### **Apparent Power Calculation using VNOM**

The ADE7878 may compute the apparent power multiplying the phase rms current by an rms voltage introduced externally in VNOM[23:0] 24-bit signed register. When one of bits 13, 12, 11 (VNOMCEN, VNOMBEN, VNOMAEN) in COMPMODE[15:0] register is set to 1, the apparent power in the corresponding phase (phase x for VNOMxEN, x=A,B,C) is computed in this way. When bits VNOMxEN are cleared to 0, the default value, then the arithmetic apparent power is computed.

VNOM[23:0] register contains a number determined by U, the desired rms voltage and  $\,U_{FS}$ , the rms value of the phase voltage when the ADC inputs are at full scale:

$$VNOM = \frac{U}{U_{FS}} \cdot 4{,}191{,}400 \tag{43}$$

Usually U is the nominal phase rms voltage.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the register presented in Figure 18, VNOM 24-bit signed register is accessed as a 32-bit register with 8 most significant bits padded with 0s.

#### **Apparent Energy Calculation**

Apparent energy is defined as the integral of apparent power.

$$ApparentEnergy = \int s(t)dt \tag{44}$$

Similar to active and reactive powers, the ADE7878 achieves the integration of the apparent power signal in two stages (see Figure 57). The first stage is done inside the DSP: every 125µsec (8KHz frequency), the instantaneous phase apparent power is accumulated into an internal 56-bit register. When a threshold is reached, a pulse is generated at processor port and the threshold is subtracted from the internal register. The second stage is done outside the DSP and consists in accumulating the pulses generated by the processor into internal 32-bit accumulation registers. The content of these registers is transferred to va-hr registers xVAHR[31:0], x=A, B, C when these registers are accessed.

Figure 52 from the Active Energy Calculation section explains this process. The VATHR[47:0] 48-bit register contains the

threshold. Its value depends on how much energy is assigned to 1LSB of VA-hour registers. Let's suppose a derivative of VAh [10<sup>n</sup> VAh], n an integer, is desired as 1LSB of VAHR. Then VATHR may be computed using the following expression:

$$VATHR = \frac{PMAX \cdot f_s \cdot 3600 \cdot 10^n}{U_{FS} \cdot I_{FS}}$$

where:

PMAX=33,516,139=0x1FF6A6B, the instantaneous power computed when the ADC inputs are at full scale.

f<sub>s</sub>=8KHz is the frequency with which the DSP computes the instantaneous power.

 $U_{\text{FS}}$ ,  $I_{\text{FS}}$  are the rms values of phase voltages and currents when the ADC inputs are at full scale.

The VATHR[47:0] is a 48-bit register. As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. Similar to the WTHR[47:0] register presented in Figure 53, VATHR[47:0] is accessed as two 32-bit registers (VATHR1[31:0] and VATHR0[31:0]), each having 8 most significant bits padded with 0s.

This discrete time accumulation or summation is equivalent to integration in continuous time following the description in expression (45).

ApparentEnergy = 
$$\int s(t)dt = \lim_{T\to 0} \left\{ \sum_{n=0}^{\infty} s(nT) \times T \right\}$$
 (45)

where:

n is the discrete time sample number. T is the sample period.

In the ADE7878, the phase apparent powers are accumulated in AVAHR[31:0], BVAHR[31:0] and CVAHR[31:0] 32-bit signed registers. The apparent energy register content can roll over to full-scale negative (0x80000000) and continue increasing in value when the apparent power is positive. Conversely, if because of offset compensation in rms data path, the apparent power is negative, the energy register would underflow to full-scale positive (0x7FFFFFFF) and continue decreasing in value.

Bit 4 (VAEHF) in STATUS0[31:0] register is set when bit 30 of one of xVAHR, x=A, B, C registers changes, signifying one of these registers is half full. As the apparent power is always positive and xVAHR, x=A, B, C registers are signed, the VA-hr registers become half full when they increment from 0x3FFFFFFF to 0x4000 0000. Interrupts attached to bit VAEHF in STATUS0[31:0] register may be enabled by setting bit 4 in MASK0[31:0] register. If enabled, the IRQ0 pin is set low and the status bit is set to 1 whenever one of the energy registers xVAHR, x=A, B, C becomes half full. The status bit is cleared and IRQ0 pin is set back high by writing STATUS0 register with the corresponding bit set to 1.

Setting bit 6 (RSTREAD) of LCYMODE[7:0] register enables a read-with-reset for all va-hr accumulation registers, that is, the registers are reset to 0 after a read operation.

#### **Integration Time Under Steady Load**

The discrete time sample period (T) for the accumulation register is  $125\mu s$  (1/8 KHz). With full-scale pure sinusoidal signals on the analog inputs, the average word value representing the apparent power is PMAX. If the VATHR threshold is set at PMAX level, this means the DSP generates a pulse that is added at VA-hr registers every 125  $\mu s$ .

The maximum value that can be stored in the va-hr accumulation register before it overflows is  $2^{31} - 1$  or 0x7FFFFFFF. The integration time is calculated as

Time = 0x7FFF,  $FFFF \times 125\mu s = 74h33 min 55s$  (46)

#### **Energy Accumulation Mode**

The apparent power accumulated in each VA-hr accumulation register (AVAHR[31:0], BVAHR[31:0] or CVAHR[31:0]) depends on the configuration of bits 5,4 (CONSEL) in the ACCMODE[7:0] register. The different configurations are described in Table 19.

Table 19. Inputs to VA-Hr Accumulation Registers

CONSEL[1,0]	AVAHR	BVAHR	CVAHR
00	AVRMS × AIRMS	BVRMS × BIRMS	CVRMS × CIRMS
01	AVRMS × AIRMS	0	CVRMS × CIRMS
10	AVRMS × AIRMS	BVRMS × BIRMS VB=-VA-VC	CVRMS × CIRMS
11	AVRMS × AIRMS	BVRMS × BIRMS VB=-VA	CVRMS × CIRMS

#### **Line Cycle Apparent Energy Accumulation Mode**

As mentioned in Line Cycle Active Energy Accumulation Mode section, in line cycle energy accumulation mode, the energy accumulation can be synchronized to the voltage channel zero crossings so that apparent energy can be accumulated over an integral number of half line cycles. In this mode, the ADE7878 transfers the apparent energy accumulated in the 32-bit internal accumulation registers into xVAHR[31:0], x=A,B,C registers after an integral number of line cycles, as shown in Figure 58. The number of half line cycles is specified in the LINECYC[15:0] register.

The line cycle apparent energy accumulation mode is activated by setting bit 2 (LVA) in the LCYCMODE[7:0] register. The apparent energy accumulated over an integer number of zero crossings is written to the VA-hr accumulation registers after the LINECYC number of zero crossings is detected. When using the line cycle accumulation mode, bit 6 (RSTREAD) of the LCYCMODE[7:0] register should be set to Logic 0 because the read with reset of VA-hr registers is not available in this mode.

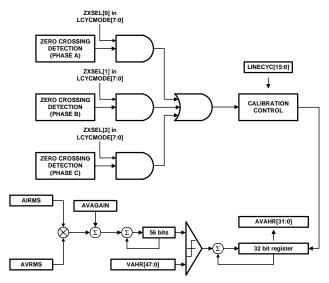


Figure 58. ADE7878 Line Cycle Apparent Energy Accumulation Mode

Phase A, Phase B, and Phase C zero crossings are, respectively, included when counting the number of half-line cycles by setting bits 5,4,3 (ZXSEL) in the LCYCMODE[7:0] register. Any combination of the zero crossings from all three phases can be used for counting the zero crossing. Only one phase should be selected at a time for inclusion in the zero crossings count during calibration.

For details on setting LINECYC[15:0] register and the interrupt LENERGY associated with the line cycle accumulation mode, see Line Cycle Active Energy Accumulation Mode section.

#### **WAVEFORM SAMPLING MODE**

The waveform samples of the current and voltage waveform, the active, reactive, and apparent power multiplier outputs are stored every 125µsec (8KHz rate) into 24-bit signed registers that may be accessed through various serial ports of the ADE7878. Table 20 presents the list of the registers and their description.

Table 20. Waveform registers list

Register	Pagistar Description Bouiston Description			
Register	Description	Register	Description	
IAWV	Phase A current	BWATT	Phase B active	
			power	
IBWV	Phase B current	CWATT	Phase C active	
			power	
ICWV	Phase C current	AVAR	Phase A reactive	
			power	
INWV	Neutral current	BVAR	Phase B reactive	
			power	
VAWV	Phase A voltage	CVAR	Phase C reactive	
			power	
VBWV	Phase B voltage	AVA	Phase A apparent	
			power	
VCWV	Phase C voltage	BVA	Phase B apparent	
			power	
AWATT	Phase A active	CVA	Phase C apparent	
	power		power	

The bit 17 (DREADY) in STATUS0[31:0] register can be used to signal when the registers mentioned in Table 20 may be read using I<sup>2</sup>C or SPI serial ports. An interrupt attached to the flag may be enabled by setting bit 17 (DREADY) in MASK0[31:0] register. See Digital Signal Processor chapter for more details on bit DREADY.

The ADE7878 contains a High Speed Data Capture (HSDC) port that is specially designed to provide fast access to the waveform sample registers. Read HSDC Interface section for more details.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words. All registers listed in Table 20 are transmitted signed extended from 24 to 32 bits (see Figure 19).

#### CFxSEL bits in CFMODE Instantaneous phase A active VAR power TERMSELx bits in ۷A COMPMODE REVPSUMx bit of STATUS0[31:0] Instantaneous WATT phase B active power **FWATT** CF<sub>x</sub> pulse Freq Divider output **FVAR** WTHR[47:0] Instantaneous **CFxDEN** phase C active power **Digital Signal Processor**

Figure 59. ADE7878 Energy to Frequency Conversion

The DSP computes the instantaneous values of all phase powers: total active, fundamental active, total reactive, fundamental reactive and apparent. The process in which the energy is sign accumulated in various hr registers (watt-hr, var-hr and VA-hr) has already been described in Energy Calculation chapters. In the energy to frequency conversion process, the instantaneous powers are used to generate signals at frequency output pins CF1, CF2 and CF3.

One digital to frequency converter is used for every CF pin. Every converter sums certain phase powers and generates a signal proportional to the sum. Two sets of bits decide what powers are converted.

First, bits 2, 1, 0 (TERMSEL1[2:0]), 5, 4, 3 (TERMSEL2[2:0]) and 8, 7, 6 (TERMSEL3[2:0]) of COMPMODE[15:0] register decide which phases or which combination of phases are added. TERMSEL1 bits refer to CF1 pin, TERMSEL2 bits refer to CF2 pin and TERMSEL3 bits refer to CF3 pin. TERMSELx[0] bits, x=1, 2, 3 manage phase A. When set to 1, phase A power is included in the sum of powers at CFx converter. When cleared to 0, phase A power is not included. TERMSELx[1] bits manage phase B, TERMSELx[2] bits manage phase C. Setting all

#### **ENERGY TO FREQUENCY CONVERSION**

The ADE7878 provides 3 frequency output pins: CF1, CF2 and CF3.

CF3 pin is multiplexed with HSCLK pin of HSDC interface. When HSDC is enabled, the CF3 functionality is disabled at the pin. CF1 and CF2 pins are always available. After initial calibration at manufacturing, the manufacturer or end customer verifies the energy meter calibration. One convenient way to verify the meter calibration is to provide an output frequency proportional to the active, reactive or apparent powers under steady load conditions. This output frequency can provide a simple, single-wire, optically isolated interface to external calibration equipment. Figure 59 illustrates the energy-to-frequency conversion in the ADE7878.

TERMSELx bits to 1 means all 3 phase powers are added at CFx converter. Clearing all TERMSELx bits to 0 means no phase power is added and no CF pulse is generated.

Second, bits 2, 1, 0 (CF1SEL[2:0]), 5, 4, 3 (CF2SEL[2:0]) and 8, 7, 6 (CF3SEL[2:0]) in CFMODE[15:0] register decide what type power is used at the inputs of CF1, CF2 and respective CF3 converters.

Table 21 shows the values that CFxSEL may have: total active, fundamental active, total reactive, fundamental reactive or apparent powers.

By default, TERMSELx bits are all 1 and CF1SEL bits are 000, CF2SEL bits are 001 and CF3SEL bits are 010. This means that by default, the CF1 digital to frequency converter produces signals proportional to the sum of all 3 phase total active powers, CF2 produces signals proportional to total reactive powers and CF3 produces signals proportional to apparent powers.

CFxSEL	Description	Registers latched when CFxLATCH=1
000	CFx signal proportional to the sum of total phase active powers	AWATTHR, BWATTHR, CWATTHR
001	CFx signal proportional to the sum of total phase reactive powers	AVARHR, BVARHR, CVARHR
010	CFx signal proportional to the sum of phase apparent powers	AVAHR, BVAHR, CVAHR
011	CFx signal proportional to the sum of fundamental phase active powers	AFWATTHR, BFWATTHR, CFWATTHR
100	CFx signal proportional to the sum of fundamental phase reactive powers	AFVARHR, BFVARHR, CFVARHR
101	Reserved	
110	Reserved	
111	Reserved	

Similar to the energy accumulation process, the energy to frequency conversion is done in two stages. In the first stage, the instantaneous phase powers obtained from the DSP at 8KHz rate are shifted left 7 bits and then accumulated into a 55 bit register at 1MHz rate. When a threshold is reached, a pulse is generated and the threshold is subtracted from the internal register. The sign of the energy in this moment is considered the sign of the sum of phase powers (see Sign of sum of phase powers in CFx data path section for details). The threshold is the same threshold used in various active, reactive and appearent energy accumulators in DSP, WTHR[47:0], VARTHR[47:0] or VATHR[47:0], but this time it is shifted left 7 bits. The advantage of accumulating the instantaneous powers at 1MHz rate is that the ripple at CFx pins is greatly diminished. The second stage consists in a frequency divider by CFxDEN[15:0], x=1, 2, 3, 16-bit unsigned registers. The values of CFxDEN depend on the meter constant (MC), measured in impulses/kwh and how much energy is assigned to 1LSB of various energy registers: WATT-hr, VAR-hr, etc. Let's suppose a derivative of wh, [10<sup>n</sup> wh], n a positive or negative integer, is desired as 1LSB of WATTHR. Then CFxDEN is:

$$CFxDEN = \frac{10^3}{MC[imp/kwh] \cdot 10^n}$$
 (47)

The derivative of wh must be chosen in such a way to obtain a CFxDEN greater than 1. Fractional results cannot be accommodated by the frequency converter, so the result of the division has to be rounded to the nearest integer. If CFxDEN is set equal to 0, then the ADE7878 considers it as equal to 1.

The pulse output for all digital to frequency converters stays low for 80ms if the pulse period is larger than 160ms (6.25Hz). If the pulse period is smaller than 160ms, the duty cycle of the pulse output is 50%. The pulse output is active low and should be preferably connected to an LED as shown in Figure 60.

Bits 11, 10, 9 (CF3DIS, CF2DIS and CF1DIS) of CFMODE[15:0] register decide if the frequency converter output is generated at CF3, CF2 or CF1 pins. When bit CFxDIS, x=1, 2, 3 is set to 1, the default value, the CFx pin is disabled and the pin stays high. When bit CFxDIS is cleared to 0, the correspondent CFx pin output generates an active low signal.

Bits 16, 15, 14 (CF3, CF2, CF1) in interrupt mask register MASK0[31:0] manage CF3, CF2 and CF1 related interrupts. When CFx, x=1, 2, 3 bits are set, whenever a high to low transition at corresponding frequency converter output occurs, an interrupt  $\overline{\text{IRQ0}}$  is triggered and a status bit in STATUS0[31:0] register is set to 1. The interrupt is available even if the CFx output is not enabled by CFxDIS bits in CFMODE[15:0].

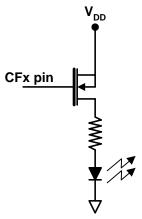


Figure 60. CF pin recommended connection

#### Synchronizing energy registers with CFx outputs

The ADE7878 contains a feature that allows synchronizing the content of phase energy accumulation registers with the generation of a CFx pulse. When a high to low transition at one frequency converter output occurs, the content of all internal phase energy registers that relate to the power being output at CFx pin is latched into hr registers and then is reset to 0. See

Table 21 for the list of registers that are latched based on CFxSEL[2:0] bits in CFMODE[15:0] register. All 3 phase registers are latched independent of TERMSELx bits of COMPMODE[15:0] register. The process is shown in Figure 61 for CF1SEL[2:0]=010 (apparent powers contribute at CF1 pin) and CFCYC=2.

CFCYC[7:0] 8-bit unsigned register contains the number of high to low transitions at frequency converter output between two consecutive latches. Writing a new value into CFCYC[7:0]

register during a high to low transition at any CFx pin should be avoided.




Figure 61. Synchronizing AVAHR and BVAHR with CF1

Bits 14, 13, 12 (CF3LATCH, CF2LATCH and CF1LATCH) of CFMODE[15:0] register enable this process when set to 1. When cleared to 0, the default state, no latch occurs. The process is available even if the CFx output is not enabled by CFxDIS bits in CFMODE[15:0].

#### CF outputs for various accumulation modes

The bits 1, 0 (WATTACC[1:0]) in ACCMODE[7:0] register determine the accumulation modes of the total and fundamental active powers when signals proportional to the active powers are chosen at CFx pins (bits CFxSEL[2:0], x=1,2,3 in CFMODE[15:0] register are equal to 000 or to 011). When WATTACC[1:0]=00, the default value, the active powers are sign accumulated before entering the energy to frequency converter. Figure 62 presents the way signed active power accumulation works. Note that in this mode, the CF pulses are perfectly synchronized with the active energy accumulated in watt-hr registers because the powers are sign accumulated in both data paths.

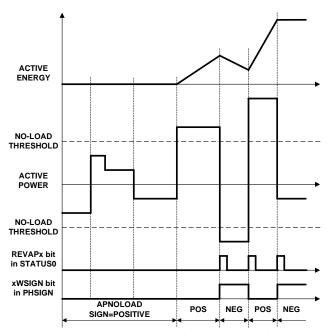


Figure 62. Active power signed accumulation mode

When WATTACC[1:0]=11, the active powers are accumulated in absolute mode. When the powers are negative, they change sign and are accumulated together with the positive power. Figure 63 presents the way absolute active power accumulation works. Note that in this mode, the watt-hr registers continue to accumulate active powers in signed mode, even if the CF pulses are generated based on the absolute accumulation mode.

The bits 3, 2 (VARACC[1:0]) in ACCMODE[7:0] register determine the accumulation modes of the total and fundamental reactive powers when signals proportional to the reactive powers are chosen at CFx pins (bits CFxSEL[2:0], x=1, 2, 3 in CFMODE[15:0] register are equal to 001 or to 100). When VARACC[1:0]=00, the default value, the reactive powers are sign accumulated before entering the energy to frequency converter. Figure 64 presents the way signed reactive power accumulation works. Note that in this mode, the CF pulses are perfectly synchronized with the reactive energy accumulated in var-hr registers because the powers are sign accumulated in both data paths.

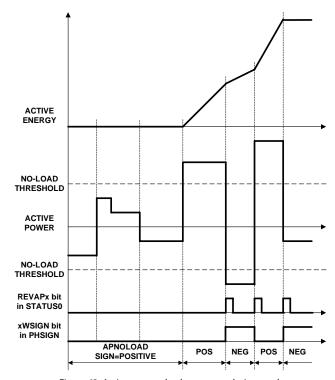


Figure 63. Active power absolute accumulation mode

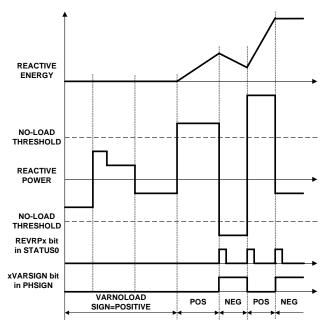


Figure 64. Reactive power signed accumulation mode

When VARACC[1:0]=10, the reactive powers are accumulated depending on the sign of corresponding active power. If the active power is positive, the reactive power is accumulated as is. If the active power is negative, the sign of the reactive power is changed for accumulation. Figure 65 presents the way the sign adjusted reactive power accumulation mode works. Note that in this mode, the var-hr registers continue to accumulate reactive powers in signed mode, even if the CF pulses are generated based on the sign adjusted accumulation mode.

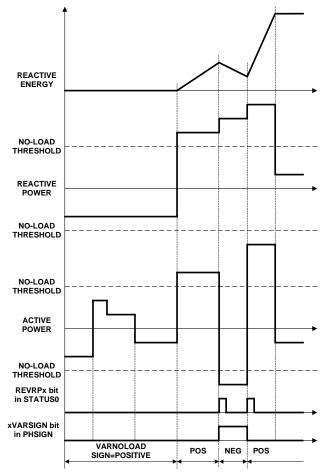


Figure 65. Reactive power accumulation in sign adjusted mode

#### Sign of sum of phase powers in CFx data path

The ADE7878 has a sign detection circuitry for the sum of phase powers that are used in CFx, x=1, 2, 3 data path. As seen in the beginning of Energy to Frequency Conversion chapter, the energy accumulation in CFx data path is executed in two stages. Every time a sign change is detected in the energy accumulation at the end of the first stage, that is after the energy accumulated into the 55 bit accumulator reaches one of WTHR[47:0], VARTHR[47:0 or VATHR[47:0] thresholds, a dedicated interrupt may be triggered synchronously with the corresponding CF pulse. The sign of each sum may be read in PHSIGN[15:0] register.

Bits 18, 13, 9 (REVPSUM3, REVPSUM2, and respectively REVPSUM1) of STATUS0[31:0] register are set to 1 when a sign change of the sum of powers in CF3, CF2 or CF1 data paths occurs. To correlate these events with the pulses generated at CFx pins, after a sign change occurs, bits REVPSUM3, REVPSUM2 and REVPSUM1 are set in the same moment in which a high to low transition at CF3, CF2 and respectively CF1 pin occurs.

Bits 8, 7, 3 (SUM3SIGN, SUM2SIGN and respectively SUM1SIGN) of PHSIGN[15:0] register are set in the same moment with bits REVPSUM3, REVPSUM2 and REVPSUM1

and indicate the sign of the sum of phase powers. When cleared to 0, the sum is positive. When set to 1, the sum is negative.

Interrupts attached to the bits 18, 13, 9 (REVPSUM3, REVPSUM2, and respectively REVPSUM1) in STATUS0[31:0] register may be enabled by setting bits 18, 13, 9 in MASK0[31:0] register. If enabled, the  $\overline{IRQ0}$  pin is set low and the status bit is set to 1 whenever a change of sign occurs. To find the phase that triggered the interrupt, PHSIGN[15:0] register is read immediately after reading STATUS0[31:0]. Then the status bit is cleared and  $\overline{IRQ0}$  pin is set back high by writing STATUS0 register with the corresponding bit set to 1.

#### **NO-LOAD CONDITION**

The no-load condition is defined in metering equipment standards as occurring when the voltage is applied to the meter and no current flows in the current circuit. To eliminate any creep effects in the meter, the ADE7878 contains three separate no-load detection circuits: one related to the total active and reactive powers, one related to the fundamental active and reactive powers and one related to the apparent powers.

# No-load detection based on total active and reactive powers

This no-load condition is triggered when the absolute values of both phase total active and reactive powers are less than or equal to positive thresholds indicated in APNOLOAD[23:0] and respective VARNOLOAD[23:0] signed 24-bit registers. In this case, the total active and reactive energies of that phase are not accumulated and no CF pulses are generated based on these energies. APNOLOAD[23:0] represents the positive no-load level of active power relative to PMAX, the maximum active power obtained when full scale voltages and currents are provided at ADC inputs. VARNOLOAD[23:0] represents the positive no-load level of reactive power relative to PMAX. The expression used to compute APNOLOAD[23:0] signed 24-bit value is:

$$APNOLOAD = \frac{U_n}{U_{FS}} \cdot \frac{I_{noload}}{I_{FS}} \cdot PMAX$$
 (48)

where: PMAX=33,516,139=0x1FF6A6B, the instantaneous power computed when the ADC inputs are at full scale

 $U_{\text{FS}}$ ,  $I_{\text{FS}}$ , the rms values of phase voltages and currents when the ADC inputs are at full scale.

U<sub>n</sub>, the nominal rms value of phase voltage.

 $I_{\rm noload},$  the minimum rms value of phase current the meter starts measuring.

VARNOLOAD[23:0] contains usually the same value as APNOLOAD[23:0]. When APNOLOAD and VARNOLOAD are set to negative values, the no-load detection circuit is disabled.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits.

APNOLOAD and VARNOLOAD 24-bit signed registers are accessed as 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits. See Figure 17 for details.

Bit 0 (NLOAD) in STATUS1[31:0] register is set when this no-load condition in one of the three phases is triggered. Bits 2, 1, 0 (NLPHASE[2:0]) in PHNOLOAD[15:0] register indicate the state of all phases relative to no-load condition and are set simultaneously with bit NLOAD in STATUS1[31:0]. NLPHASE[0] indicates the state of phase A , NLPHASE[1] the state of phase B, NLPHASE[2] the state of phase C. When bit NLPHASE[x], x=0, 1, 2 is cleared to 0, it means the phase is out of no-load condition. When set to 1, it means the phase is in no-load condition.

An interrupt attached to the bit 0 (NLOAD) in STATUS1[31:0] may be enabled by setting bit 0 in MASK1[31:0] register. If enabled, the  $\overline{1RQ1}$  pin is set low and the status bit is set to 1 whenever one of three phases enters or exits this no-load condition. To find the phase that triggered the interrupt, PHNOLOAD[15:0] register is read immediately after reading STATUS1[31:0]. Then the status bit is cleared and  $\overline{1RQ1}$  pin is set back high by writing STATUS1 register with the corresponding bit set to 1.

# No-load detection based on fundamental active and reactive powers

This no-load condition is triggered when the absolute values of both phase fundamental active and reactive powers are less than or equal to APNOLOAD[23:0] and respective VARNOLOAD[23:0] positive thresholds. In this case, the fundamental active and reactive energies of that phase are not accumulated and no CF pulses are generated based on these energies. APNOLOAD and VARNOLOAD are the same noload thresholds set for the total active and reactive powers. When APNOLOAD and VARNOLOAD are set to negative values, this no load detection circuit is disabled.

Bit 1 (FNLOAD) in STATUS1[31:0] register is set when this no-load condition in one of the three phases is triggered. Bits 5, 4, 3 (FNLPHASE[2:0]) in PHNOLOAD[15:0] register indicate the state of all phases relative to no-load condition and are set simultaneously with bit FNLOAD in STATUS1[31:0]. FNLPHASE[0] indicates the state of phase A , FNLPHASE[1] the state of phase B, FNLPHASE[2] the state of phase C. When bit FNLPHASE[x], x=0, 1, 2 is cleared to 0, it means the phase is out of no-load condition. When set to 1, it means the phase is in no-load condition.

An interrupt attached to the bit 1 (FNLOAD) in STATUS1[31:0] may be enabled by setting bit 1 in MASK1[31:0] register. If enabled, the  $\overline{IRQ1}$  pin is set low and the status bit is set to 1 whenever one of three phases enters or exits this no-load condition. To find the phase that triggered the interrupt, PHNOLOAD[15:0] register is read immediately after reading STATUS1[31:0]. Then the status bit is cleared and

IRQ1 pin is set back high by writing STATUS1 register with the corresponding bit set to 1.

#### No-load detection based on apparent power

This no-load condition is triggered when the absolute value of phase apparent power is less than or equal to the threshold indicated in VANOLOAD[23:0] 24-bit signed register. In this case, the apparent energy of that phase is not accumulated and no CF pulses are generated based on this energy. VANOLOAD represents the positive no-load level of apparent power relative to PMAX, the maximum apparent power obtained when full scale voltages and currents are provided at ADC inputs. The expression used to compute VANOLOAD[23:0] signed 24-bit value is:

$$VANOLOAD = \frac{U_n}{U_{ES}} \cdot \frac{I_{noload}}{I_{ES}} \cdot PMAX$$

where: PMAX=33,516,139=0x1FF6A6B, the instantaneous apparent power computed when the ADC inputs are at full scale

 $U_{\text{FS}}$ ,  $I_{\text{FS}}$ , the rms values of phase voltages and currents when the ADC inputs are at full scale.

Un, the nominal rms value of phase voltage.

 $I_{\rm noload},$  the minimum rms value of phase current the meter starts measuring.

When VANOLOAD[23:0] is set to negative values, the no load detection circuit is disabled.

As previously stated, the serial ports of the ADE7878 work on 32, 16 or 8-bit words and the DSP works on 28 bits. Similar to registers presented in Figure 17, VANOLOAD 24-bit signed register is accessed as a 32-bit registers with 4 most significant bits padded with 0s and sign extended to 28 bits.

Bit 2 (VANLOAD) in STATUS1[31:0] register is set when this no-load condition in one of the three phases is triggered. Bits 8, 7, 6 (VANLPHASE[2:0]) in PHNOLOAD[15:0] register indicate the state of all phases relative to no-load condition and are set simultaneously with bit VANLOAD in STATUS1[31:0].

VANLPHASE[0] indicates the state of phase A,

VANLPHASE[1] the state of phase B, VANLPHASE[2] the state of phase C. When bit VANLPHASE[x], x=0, 1, 2 is cleared to 0, it means the phase is out of no-load condition. When set to 1, it means the phase is in no-load condition.

An interrupt attached to the bit 2 (VANLOAD) in STATUS1[31:0] may be enabled by setting bit 2 in

MASK1[31:0] register. If enabled, the  $\overline{IRQ1}$  pin is set low and the status bit is set to 1 whenever one of three phases enters or exits this no-load condition. To find the phase that triggered the interrupt, PHNOLOAD[15:0] register is read immediately after reading STATUS1[31:0]. Then the status bit is cleared and  $\overline{IRQ1}$  pin is set back high by writing STATUS1 register with the corresponding bit set to 1.

#### **CHECKSUM REGISTER**

The ADE7878 has a checksum 32-bit register CHECKSUM[31:0] that ensures certain very important configuration registers maintain their desired value during normal power mode PSM0.

The registers covered by this register are MASK0[31:0], MASK1[31:0], COMPMODE[15:0], GAIN[15:0], CFMODE[15:0], CF1DEN[15:0], CF2DEN[15:0], CF3DEN[15:0], CONFIG[15:0], MMODE[7:0], ACCMODE[7:0], LCYCMODE[7:0], HSDC\_CFG[7:0] and other six 8-bit reserved internal registers that always have default values. The ADE7878 computes the cyclic redundancy check (CRC) based on the IEEE802.3 standard. The registers are introduced one by one into a linear feedback shift register (LFSR) based generator starting with the less significant bit (as presented in Figure 66). The 32-bit result is written in CHECKSUM[31:0] register. After power up or a hardware/software reset, the CRC is computed on the default values of the registers. The result is 0x9AE5E8B1.

Figure 67 presents how LFSR works. Bits  $a_0$ ,  $a_1$ ,...,  $a_{255}$  represent the bits from the list of registers presented above.  $a_0$  is the less significant bit of the first internal register to enter LFSR,  $a_{255}$  is the most significant bit of MASK0[31:0] register, the last register to enter LFSR. The equations that govern LFSR are presented below:

 $b_i(0)$  =1, i=0, 1, 2,..., 31, the initial state of the bits that form the CRC.  $b_0$  is the less significant bit,  $b_{31}$  is the most significant.

 $g_i$ , i=0,1,2,...,31 are the coefficients of the generating polynomial defined by IEEE802.3 standard:

$$G(x) = x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^{8} + x^{7} + x^{5} + x^{4} + x^{2} + x + 1$$
(49)

$$g_0 = g_1 = g_2 = g_4 = g_5 = g_7 = 1$$
  
 $g_8 = g_{10} = g_{11} = g_{12} = g_{16} = g_{22} = g_{26} = 1$  (50)

All the other gi coefficients are equal to 0.

$$FB(j) = a_{j-1} \oplus b_{31}(j-1)$$
 (51)

$$\mathbf{b}_{0}(\mathbf{j}) = \mathbf{FB}(\mathbf{j}) \cdot \mathbf{g}_{0} \tag{52}$$

$$b_i(j) = FB(j) \cdot g_i \oplus b_{i-1}(j-1), i = 1,2,3,...,31$$
 (53)

The operations  $\oplus$  and  $\cdot$  represent the logic XOR and AND. The equations (51), (52) and (53) have to be repeated for j=1, 2,..., 256. The value written into CHECKSUM[31:0] register contains the bits  $b_i(256)$ , i=0,1,...,31. The value of the CRC after the bits from the reserved internal register have passed through LFSR is 0x154232C6. It is obtained at step j=48.

Two different approaches may be followed in using the CHECKSUM register. One is to compute the CRC based on the relations (49) - (53) and then compare the value against the

CHECKSUM register. Another is to periodically read the CHECKSUM[31:0] register. If two consecutive readings differ, then it may be safely assumed that one of the registers has changed value and therefore, the ADE7878 has changed

configuration. The recommended response is to initiate a hardware/software reset that sets the values of all registers to the default, including the reserved ones, and then reinitialize the configuration registers.




Figure 66. CHECKSUM[31:0] register calculation

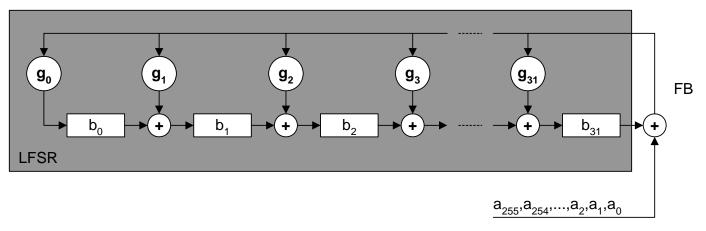


Figure 67.LFSR generator used in CHECKSUM[31:0] register calculation

#### **INTERRUPTS**

The ADE7878 has two interrupt pins, IRQ0 and IRQ1. Each of them is managed by a 32-bit interrupt mask register, MASK0[31:0], respective MASK1[31:0]. To enable an interrupt, a bit in MASKx[31:0] register has to be set to 1. To disable it, the bit has to be cleared to 0. Two 32-bit status registers, STATUS0[31:0] and STATUS1[31:0] are associated with the interrupts. When an interrupt event occurs in the ADE7878, the corresponding flag in the interrupt status register is set to a Logic 1 (see Table 31 and Table 32). If the mask bit for this interrupt in the interrupt mask register is Logic 1, then the IRQx logic output goes active low. The flag bits in the interrupt status register are set irrespective of the state of the mask bits. To determine the source of the interrupt, the MCU should perform a read of corresponding STATUSx register and identify which bit is 1. To erase the flag in the status register, STATUSx should be written back with the flag set to 1. Practically, after an interrupt pin goes low, the status register is read and the source of the interrupt is identified. Then, the status register is written back without any change to cancel the status flag. The  $\overline{IRQx}$  pin remains low until the status flag is cancelled.

By default, all interrupts are disabled. RSTDONE interrupt is an exception. This interrupt can never be masked (disabled) and therefore bit 15 (RSTDONE) in MASK1[31:0] register does not have any functionality.  $\overline{1RQ1}$  pin always goes low and bit 15 (RSTDONE) in STATUS1[31:0] is set to 1 whenever a power up or a hardware/software reset process ends. To cancel the status

flag, STATUS1[31:0] register has to be written with bit 15(RSTDONE) set to 1.

Certain interrupts are used in conjunction with other status registers: bits 0 (NLOAD), 1 (FNLOAD) and 2 (VANLOAD) in MASK1[31:0] work in conjunction with status bits in PHNOLAD[15:0]. Bits 16, (SAG), 17 (OI) and 18 (OV) in MASK1[31:0] work with status bits in PHSTATUS[15:0]. Bits 23 (PKI) and 24 (PKV) in MASK1[31:0] work with status bits in IPEAK[31:0] and respectively, VPEAK[31:0]. Bits 6, 7, 8 (REVAPx, x=A, B, C), 10, 11, 12 (REVRPx) and 9, 13, 18 (REVPSUMx) in MASK0[31:0] work with status bits in PHSIGN[15:0]. When STATUSx[31:0] register is read and one of these bits is set to 1, the status register associated with the bit is immediately read to identify the phase that triggered the interrupt and only now STATUSx[31:0] is written back with the bit set to 1.

#### Using the Interrupts with an MCU

Figure 68 shows a timing diagram that illustrates a suggested implementation of the ADE7878 interrupt management using an MCU. At time  $t_1$ ,  $\overline{IRQx}$  pin goes active low indicating that one or more interrupt events have occurred in the ADE7878. The  $\overline{IRQx}$  pin should be tied to a negative-edge-triggered external interrupt on the MCU. On detection of the negative edge, the MCU should be configured to start executing its interrupt service routine (ISR). On entering the ISR, all interrupts should be disabled using the global interrupt mask bit. At this point, the MCU external interrupt flag can be cleared to capture interrupt events that occur during the current ISR. When the MCU interrupt flag is cleared, a read from

STATUSx, the interrupt status register is carried out. The interrupt status register content is used to determine the source of the interrupt(s) and hence the appropriate action to be taken. Then, the same STATUSx content is written back into the ADE7878 to clear the status flag(s) and reset  $\overline{IRQx}$  line to logic high (t<sub>2</sub>). If a subsequent interrupt event occurs during the ISR (t<sub>3</sub>) that event is recorded by the MCU external interrupt flag being set again.

On returning from the ISR, the global interrupt mask bit is cleared (same instruction cycle) and the external interrupt flag uses the MCU to jump to its ISR once again. This ensures that the MCU does not miss any external interrupts.

Figure 69 shows a recommended timing diagram when status bits in STATUSx registers work in conjunction with bits in other registers. Same as above, when  $\overline{IRQx}$  pin goes active low, STATUSx register is read and if one of these bits is 1, then a second status register is read immediately to identify the phase that triggered the interrupt. The name PHx in the figure denotes one of PHSTATUS, IPEAK, VPEAK or PHSIGN registers. Then STATUSx is written back to clear the status flag(s).

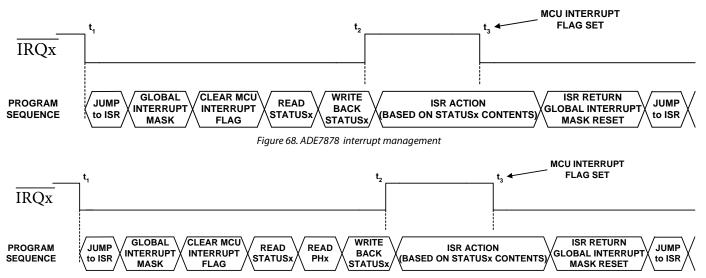


Figure 69. ADE7878 interrupt management when PHSTATUS, IPEAK, VPEAK or PHSIGN registers are involved

#### **SERIAL INTERFACES**

The ADE7878 has three serial port interfaces: one fully licensed I<sup>2</sup>C interface, one Serial Peripheral Interface (SPI) and one High Speed Data Capture Port (HSDC). As the SPI pins are multiplexed with some of the pins of I<sup>2</sup>C and HSDC ports, the ADE7878 accepts two configurations: one using SPI port only and one using I<sup>2</sup>C port in conjunction with HSDC port.

#### Serial interface choice

After reset, the HSDC port is always disabled. The choice between I²C and SPI port is done by manipulating the  $\overline{SS}$  pin after power up or after a hardware reset. If  $\overline{SS}$  pin is kept high, then the ADE7878 will use the I²C port until a new hardware reset is executed. If  $\overline{SS}$  pin is toggled high low 3 times after power up or after a hardware reset, then the ADE7878 will use the SPI port until a new hardware reset is executed. This manipulation of the  $\overline{SS}$  pin can be accomplished in two ways: one way is to use the  $\overline{SS}$  pin of the master device (i.e. the microcontroller) as a regular I/O pin and toggle it 3 times. Another way is to execute 3 SPI write operations to a location in the address space that is not allocated to a specific ADE7878 register (for example 0xEBFF). These writes allow the  $\overline{SS}$  pin to

toggle 3 times. See SPI Write Operation section for details on the write protocol involved.

After the serial port choice is done, it needs to be locked, so the active port remains in use until a hardware reset is executed in PSM0 normal mode or until a power down. If  $I^2C$  is the active serial port, bit 1 (I2C\_LOCK) of CONFIG2[7:0] must be set to 1 to lock it in. From this moment on, the ADE7878 ignores spurious togglings of the  $\overline{SS}$  pin and an eventual switch into using SPI port is no longer possible. If SPI is the active serial port, any write to CONFIG2[7:0] registers locks the port. From this moment on, a switch into using  $I^2C$  port is no longer possible.

Once locked, the serial port choice is maintained when the ADE7878 changes PSMx, x=0, 1, 2, 3 power modes.

The functionality of the ADE7878 is accessible via several onchip registers. The contents of these registers can be updated or read using the I<sup>2</sup>C or SPI interfaces. HSDC port provides the state of up to 16 registers representing instantaneous values of phase voltages and currents, neutral current, active, reactive and apparent powers.

#### I<sup>2</sup>C Compatible Interface

The ADE7878 supports a fully licensed I<sup>2</sup>C interface. The I<sup>2</sup>C interface is implemented as a full hardware slave. SDA is the

data I/O pin, and SCL is the serial clock. These two pins are shared with the MOSI and SCLK pins of the on-chip SPI interface. The maximum serial clock frequency supported by this interface is 400KHz.

The two pins used for data transfer, SDA and SCL are configured in a Wired-AND format that allows arbitration in a multi-master system.

The transfer sequence of an I<sup>2</sup>C system consists of a master device initiating a transfer by generating a START condition while the bus is idle. The master transmits the address of the slave device and the direction of the data transfer in the initial address transfer. If the slave acknowledges, then the data transfer is initiated. This continues until the master issues a STOP condition and the bus becomes idle.

#### I<sup>2</sup>C Write Operation

The write operation using I<sup>2</sup>C interface of the ADE7878 initiates when the master generates a START condition and consists in one byte representing the address of the ADE7878 followed by the 16-bit address of the target register and by the value of the register.

The most significant 7 bits of the address byte constitute the address of the ADE7878 and they are equal to b#0111000. Bit 0 of the address byte is READ/ WRITE bit. Because this is a write operation, it has to cleared to 0, so the first byte of the write operation is 0x70. After every byte is received, the ADE7878 generates an acknowledge. As registers may have 8, 16 or 32 bits, after the last bit of the register is transmitted and the ADE7878 acknowledges the transfer, the master generates a STOP condition. The addresses and the register content are

sent with the most significant bit first. See Figure 70 for details of the I<sup>2</sup>C write operation.

#### I<sup>2</sup>C Read Operation

The read operation using the I<sup>2</sup>C interface of the ADE7878 is done in two stages. The first stage sets the pointer to the address of the register. The second stage reads the content of the register.

As seen in Figure 71, the first stage initiates when the master generates a START condition and consists in one byte representing the address of the ADE7878 followed by the 16-bit address of the target register. The ADE7878 acknowledges every byte received. The address byte is similar to the address byte of a write operation and is equal to 0x70 (See I2C Write Operation section for details). After the last byte of the register address has been sent and it has been acknowledged by the ADE7878, the second stage begins with the master generating a new START condition followed by an address byte. The most significant 7 bits of this address byte constitute the address of the ADE7878 and they are equal to b#0111000. Bit 0 of the address byte is READ/ WRITE bit. Because this is a read operation, it has to be set to 1, so the first byte of the read operation is 0x71. After this byte is received, the ADE7878 generates an acknowledge. Then the ADE7878 sends the value of the register and after every 8 bits are received, the master generates an acknowledge. All the bytes are sent with the most significant bit first. As registers may have 8, 16 or 32 bits, after the last bit of the register is received, the master does not acknowledge the transfer, but does generate a STOP condition.

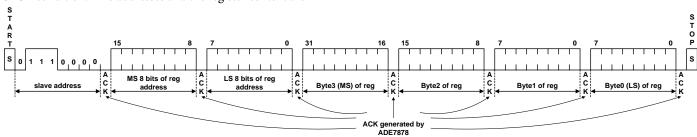


Figure 70. I<sup>2</sup>C Write Operation of a 32 bit register

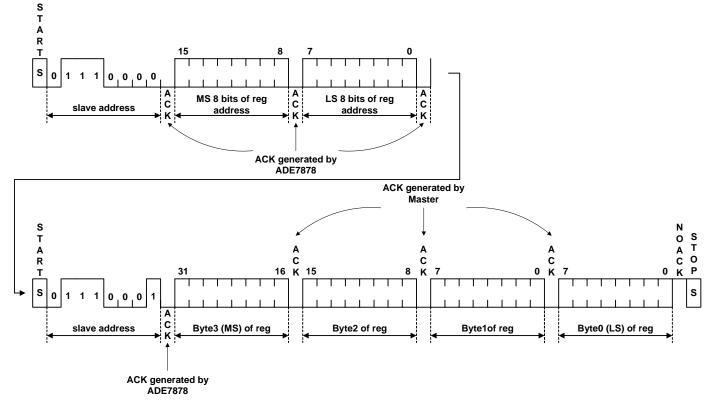


Figure 71. I<sup>2</sup>C Read Operation of a 32-bit register

#### SPI Compatible Interface

The Serial Peripheral Interface (SPI) of the ADE7878 is always a slave of the communication and consists in four pins: SCLK, MOSI, MISO and  $\overline{SS}$ . The serial clock for a data transfer is applied at the SCLK logic input. This logic input has a Schmitt trigger input structure that allows slow rising (and falling) clock edges to be used. All data transfer operations are synchronized to the serial clock. Data is shifted into the ADE7878 at the MOSI logic input on the falling edge of SCLK. Data is shifted out of the ADE7878 at the MISO logic output on a rising edge of SCLK. The most significant bit of the word is shifted in and out first. The maximum serial clock frequency supported by this interface is 2.5MHz. MISO stays in high impedance when no data is transmitted from the ADE7878. Figure 72 presents details of the connection between ADE7878 SPI and a master device containing an SPI interface.

The  $\overline{SS}$  logic input is the chip select input. This input is used when multiple devices share the serial bus. The  $\overline{SS}$  input should be driven low for the entire data transfer operation. Bringing  $\overline{SS}$  high during a data transfer operation aborts the transfer and places the serial bus in a high impedance state. A new transfer can then be initiated by bringing the  $\overline{SS}$  logic input back low. However, because aborting a data transfer before completion leaves the accessed register in a state that cannot be guaranteed, every time a register is written, its value should be verified by reading it back.

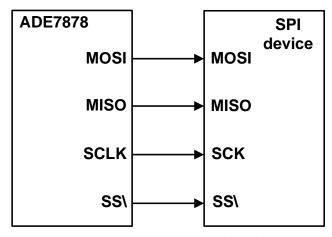


Figure 72. Connecting ADE7878 SPI with an SPI device

The protocol is similar to the protocol used in I<sup>2</sup>C interface.

#### **SPI Read Operation**

The read operation using the SPI interface of the ADE7878 initiates when the master sets  $\overline{SS}$  pin low and begins sending one byte representing the address of the ADE7878 on the MOSI line. The master sets data on the MOSI line starting with the first high to low transition of SCLK. The SPI of the ADE7878 samples data on the low to high transitions of SCLK. The most significant 7 bits of the address byte can have any value, but as a good programming practice, they should be different from b#0111000, the 7 bits used in the I²C protocol. Bit 0 (READ/ $\overline{WRITE}$ ) of the address byte must be 1 for a read

operation. Next, the master sends the 16-bit address of the register that is read. After the ADE7878 receives the last bit of address of the register on a low to high transition of SCLK, it begins to transmit its content on the MISO line before the next SCLK high to low transition occurs, so the master can sample the data on this SCLK transition. After the master receives the

last bit, it sets  $\overline{SS}$  and SCLK lines high and the communication ends. The data lines MOSI and MISO go in high impedance state.

See Figure 73 for details of the SPI read operation.

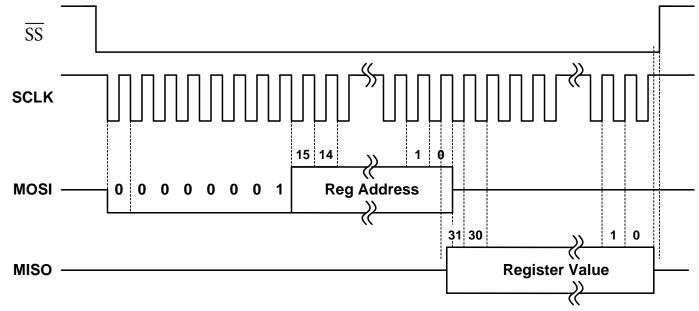


Figure 73. SPI read operation of a 32-bit register

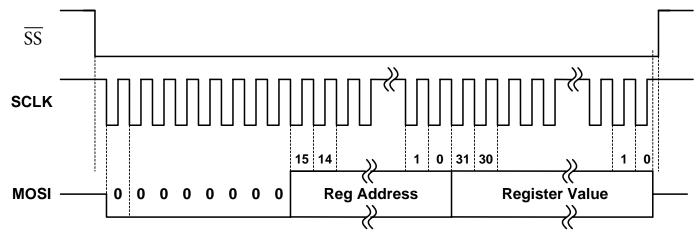


Figure 74. SPI Write operation of a 32-bit register

#### **SPI Write Operation**

The write operation using the SPI interface of the ADE7878 initiates when the master sets  $\overline{SS}$  pin low and begins sending one byte representing the address of the ADE7878 on the MOSI line. The master sets data on the MOSI line starting with the first high to low transition of SCLK. The SPI of the ADE7878 samples data on the low to high transitions of SCLK. The most significant 7 bits of the address byte can have any value, but as a good programming practice, they should be different from b#0111000, the 7 bits used in the I²C protocol. Bit 0 (READ/  $\overline{WRITE}$ ) of the address byte must be 0 for a write operation. Next, the master sends the 16-bit address of the

register that is written and the 32, 16 or 8-bit value of that register without losing any SCLK cycle. After the last bit is transmitted, the master sets  $\overline{SS}$  and SCLK lines high at the end of SCLK cycle and the communication ends. The data lines MOSI and MISO go in high impedance state.

See Figure 74 for details of the SPI write operation.

#### **HSDC** Interface

The High Speed Data Capture (HSDC) interface is disabled after default. It can be used only if the ADE7878 is configured with I<sup>2</sup>C interface. The SPI interface cannot be used in conjunction with HSDC. Bit 6 (HSDCEN) in CONFIG[15:0] register activates HSDC when set to 1. If bit HSDCEN is cleared

to 0, the default value, the HSDC interface is disabled. Setting bit HSDCEN to 1 when SPI is in usage does not have any effect.

HSDC is an interface that is used to send to an external device, usually a microprocessor or a DSP, up to sixteen 32-bit words. The words represent the instantaneous values of the phase currents and voltages, neutral current, active, reactive and apparent powers. The registers being transmitted are: IAWV[23:0], IBWV[23:0], ICWV[23:0], INWV[23:0], VAWV[23:0], VBWV[23:0], VCWV[23:0], AWATT[23:0], BWATT[23:0], CWATT[23:0], AVAR[23:0], BVAR[23:0], CVAR[23:0], AVA[23:0], BVA[23:0], AVAR[23:0], AVAR[23:0], BVAR[23:0], AVAR[23:0], BVAR[23:0], AVAR[23:0], AVAR

HSDC is always a master of the communication and consists in 3 pins: HSA, HSD and HSCLK. HSA represents the select signal. It stays active low when a word is transmitted and is usually connected to the select pin of the slave. HSD is used to send data to the slave and is usually connected to the data input pin of the slave. HSCLK is the serial clock line. It is generated by the ADE7878 and is usually connected to the serial clock input of the slave. Figure 75 and Figure 76 present details of connections between ADE7878 HSDC and slave devices containing SPI and SPORT interfaces.

The HSDC communication is managed by the HSDC\_CFG[7:0] register (see Table 22). It is recommended to set HSDC\_CFG register to the desired value before enabling the port using bit 6 (HSDCEN) in CONFIG[15:0] register. In this way, the state of various pins belonging to HSDC port do not take levels inconsistent with the desired HSDC behaviour. After a hardware reset or after power up, the pins MISO/HSD and  $\overline{\text{SS}}$  /HSA are set high.

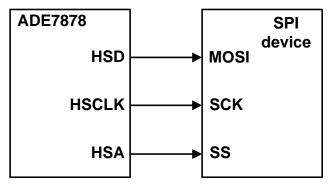


Figure 75. Connecting ADE7878 HSDC with an SPI

Table 22. HSDC\_CFG register

Bit Location	Bit Mnemonic	Default Value	Description
0	HCLK	0	-0: HSCLK is 8MHz
			-1: HSCLK is 4MHz
1	HSIZE	0	-0: HSDC transmits the 32bit registers in 32bit packages, most significant bit first.
			-1: HSDC transmits the 32bit registers in 8bit packages, most significant bit first.
2	HGAP	0	-0: no gap is introduced between packages.
			-1: a gap of 7 HCLK cycles is introduced between packages.

Bit 0 (HCLK) in HSDC\_CFG[7:0] register determines the serial clock frequency of the HSDC communication. When HCLK is 0, the default value, then the clock frequency is 8MHz. When HCLK is 1, the clock frequency is 4MHz. A bit of data is transmitted for every HSCLK high to low transition. The slave device that receives data from HSDC samples HSD line on the low to high transition of HSCLK.

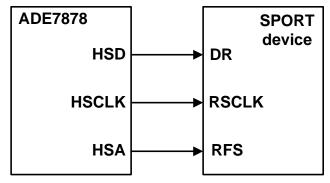


Figure 76. Connecting ADE7878 with a SPORT

The words may be transmitted as 32-bit packages or as 8-bit packages. When bit 1 (HSIZE) in HSDC\_CFG[7:0] register is 0, the default value, the words are transmitted as 32-bit packages. When bit HSIZE is 1, the registers are transmitted as 8-bit packages. HSDC interface transmits the words with MSB first.

Bit 2 (HGAP) introduces a gap of 7 HSCLK cycles between packages when is set to 1. When bit HGAP is cleared to 0, the default value, no gap is introduced between packages and the communication time is shortest. In this case, HSIZE does not have any influence on the communication and a bit is put on HSD line every HSCLK high to low transition.

Bits 4,3 (HXFER[1:0]) decide how many words are transmitted. When HXFER[1:0] is 00, the default value, then all sixteen words are transmitted. When HXFER[1:0] is 01, then only the words representing the instantaneous values of phase and neutral currents and phase voltages are transmitted in the following order: IAWV, VAWV, IBWV, VBWV, ICWV, VCWV and INWV. When HXFER[1:0] is 01, then only the instantaneous values of phase powers are transmitted in the following order: AVA, BVA, CVA, AWATT, BWATT, CWATT, AVAR, BVAR and CVAR. The value 11 for HXFER[1:0] is reserved and writing it is equivalent to writing 00, the default value.

Bit Location	Bit Mnemonic	Default Value	Description
4,3	HXFER[1:0]	00	-00=HSDC transmits all 16 registers shown in Table 26. ADE7878 billable registers
			-01= HSDC transmits 7 instantaneous values of currents and voltages
			-10= HSDC transmits 9 instantaneous values of phase powers
			-11=reserved. If set, the ADE7878 behaves as if HXFER[1:0]=00.
5	HSAPOL	0	-0: HSACTIVE output pin is active LOW.
			-1: HSACTIVE output pin is active HIGH
7,6		00	Reserved. These bits do not manage any functionality.

Bit 5 (HSAPOL) determines the polarity of HSA pin during the communication. When HSAPOL is 0, the default value, the HSA pin is active low during the communication. This means that HSA stays high when no communication is in progress. When the communication starts, HSA goes low and stays low until the communication ends. Then it goes back high. When HSAPOL is 1, the HSA pin is active high during the communication. This means that HSA stays low when no communication is in progress. When the communication starts, HSA goes high and stays high until the communication ends. Then it goes back low.

Bits 7,6 of HSDC\_CFG are reserved. Any value written into these bits does not have any consequence on HSDC behavior.

Figure 77 shows the HSDC transfer protocol for HGAP=0, HXFER[1:0]=00 and HSAPOL=0. Note that the HSDC interface sets a bit on HSD line every HSCLK high to low transition and the value of bit HSIZE is irrelevant.

Figure 78 shows the HSDC transfer protocol for HSIZE=0, HGAP=1, HXFER[1:0]=00 and HSAPOL=0. Note that HSDC interface introduces a 7 HSCLK cycles gap between every 32-bit word

Figure 79 shows the HSDC transfer protocol for HSIZE=1, HGAP=1, HXFER[1:0]=00 and HSAPOL=0. Note that HSDC interface introduces a 7 HSCLK cycles gap between every 8-bit word.

transfer time is less than 125usec (8KHz), the waveform sample registers update rate. This means the HSDC port transmits data every sampling cycle. For settings in which the transfer time is greater than 125usec, the HSDC port transmits data only in the first of two consecutive 8KHz sampling cycles. This means it transmits registers at an effective rate of 4KHz.

Table 23. Communication times for various HSDC settings

HXFER[1:0]	HGAP	HSIZE	HCLK	Comm Time [µsec]
00	0	*	0	64
00	0	*	1	128
00	1	0	0	77.125
00	1	0	1	154.25
00	1	1	0	119.25
00	1	1	1	238.25
01	0	*	0	28
01	0	*	1	56
01	1	0	0	33.25
01	1	0	1	66.5
01	1	1	0	51.625
01	1	1	1	103.25
10	0	*	0	36
10	0	*	1	72
10	1	0	0	43
10	1	0	1	86
10	1	1	0	66.625
10	1	1	1	133.25

Table 23 presents the time it takes to execute an HSDC data transfer for all HSDC CFG[7:0] settings. For some settings, the

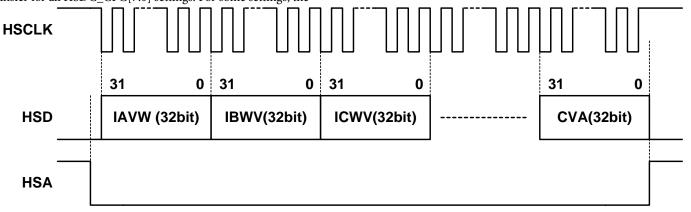


Figure 77. HSDC communication for HGAP=0, HXFER[1:0]=00 and HSAPOL=0. HSIZE is irrelevant

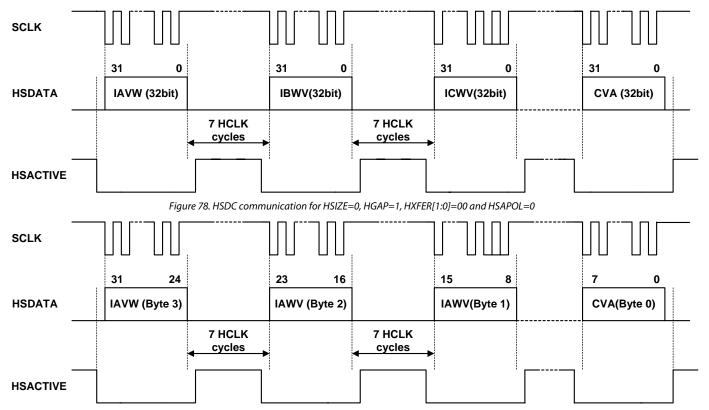


Figure 79. HSDC communication for HSIZE=1, HGAP=1, HXFER[1:0]=00 and HSAPOL=0

## **REGISTERS LIST**

Table 24. ADE7878 Registers List located in DSP data memory RAM

1 4010 24. 11	DETOTO REGIST	LIS LIST		DSF data men			
			Bit	Bit Length during		Default	
Address	Name	R/W <sup>1</sup>	Length	Comm <sup>2</sup>	Type <sup>3</sup>	Value	Description
0x4380	AIGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A current gain adjust
0x4381	AVGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A voltage gain adjust
0x4382	BIGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B current gain adjust
0x4383	BVGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B voltage gain adjust
0x4384	CIGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C current gain adjust
0x4385	CVGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C voltage gain adjust
0x4386	NIGAIN	R/W	24	32 ZPSE	S	0x000000	Neutral current gain adjust
0x4380 0x4387	AIRMSOS	R/W	24	32 ZPSE	S	0x000000	Phase A current rms offset
0x4387 0x4388	AVRMSOS	R/W	24	32 ZPSE	S	0x000000	Phase A voltage rms offset
0x4389	BIRMSOS	R/W	24	32 ZPSE	S	0x000000	Phase B current rms offset
			24				Phase B voltage rms offset
0x438A	BVRMSOS	R/W		32 ZPSE	S	0x000000	_
0x438B	CIRMSOS	R/W	24	32 ZPSE	S	0x000000	Phase C current rms offset
0x438C	CVRMSOS	R/W	24	32 ZPSE	S	0x000000	Phase C voltage rms offset
0x438D	NIRMSOS	R/W	24	32 ZPSE	S	0x000000	Neutral current rms offset
0x438E	AVAGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A apparent power gain adjust
0x438F	BVAGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B apparent power gain adjust
0x4390	CVAGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C apparent power gain adjust
0x4391	AWGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A total active power gain adjust
0x4392	AWATTOS	R/W	24	32 ZPSE	S	0x000000	Phase A total active power offset adjust
0x4393	BWGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B total active power gain adjust
0x4394	BWATTOS	R/W	24	32 ZPSE	S	0x000000	Phase B total active power offset adjust
0x4395	CWGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C total active power gain adjust
0x4396	CWATTOS	R/W	24	32 ZPSE	S	0x000000	Phase C total active power offset adjust
0x4397	AVARGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A total reactive power gain adjust
0x4398	AVAROS	R/W	24	32 ZPSE	S	0x000000	Phase A total reactive power offset adjust
0x4399	BVARGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B total reactive power gain adjust
0x439A	BVAROS	R/W	24	32 ZPSE	S	0x000000	Phase B total reactive power offset adjust
0x439B	CVARGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C total reactive power gain adjust
0x439C	CVAROS	R/W	24	32 ZPSE	S	0x000000	Phase C total reactive power offset adjust
0x439D	AFWGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A fundamental active power gain adjust
0x439E	AFWATTOS	R/W	24	32 ZPSE	S	0x000000	Phase A fundamental active power offset adjust
0x439F	BFWGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B fundamental active power gain adjust
0x43A0	BFWATTOS	R/W	24	32 ZPSE	S	0x000000	Phase B fundamental active power offset adjust
0x43A1	CFWGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C fundamental active power gain adjust
0x43A2	CFWATTOS	R/W	24	32 ZPSE	S	0x000000	Phase C fundamental active power offset adjust
0x43A3	AFVARGAIN	R/W	24	32 ZPSE	S	0x000000	Phase A fundamental reactive power gain adjust
0x43A4	AFVAROS	R/W	24	32 ZPSE	S	0x000000	Phase A fundamental reactive power offset adjust
0x43A5	BFVARGAIN	R/W	24	32 ZPSE	S	0x000000	Phase B fundamental reactive power gain adjust
0x43A6	BFVAROS	R/W	24	32 ZPSE	S	0x000000	Phase B fundamental reactive power offset adjust
0x43A7	CFVARGAIN	R/W	24	32 ZPSE	S	0x000000	Phase C fundamental reactive power gain adjust
0x43A8	CFVAROS	R/W	24	32 ZPSE	S	0x000000	Phase C fundamental reactive power offset adjust
0x43A9	VATHR1	R/W	24	32 ZP	U	0x000000	Most significant 24 bits of VATHR[47:0] threshold
OX 15715	<b>V</b> /((1)(1)	1000	- '	32 21		CXCCCCC	used in phase apparent power data path.
0x43AA	VATHR0	R/W	24	32 ZP	U	0x000000	Less significant 24 bits of VATHR[47:0] threshold used in phase apparent power data path.
0x43AB	WTHR1	R/W	24	32 ZP	U	0x000000	Most significant 24 bits of WTHR[47:0] threshold used in phase total/fundamental active power data path.
0x43AC	WTHR0	R/W	24	32 ZP	U	0x000000	Less significant 24 bits of WTHR[47:0] threshold

				Bit Length			
			Bit	during		Default	
Address	Name	R/W <sup>1</sup>	Length	Comm <sup>2</sup>	Type <sup>3</sup>	Value	Description
							used in phase total/fundamental active power data path.
0x43AD	VARTHR1	R/W	24	32 ZP	U	0x000000	Most significant 24 bits of VARTHR[47:0] threshold used in phase total/fundamental reactive power data path.
0x43AE	VARTHR0	R/W	24	32 ZP	U	0x000000	Less significant 24 bits of VARTHR[47:0] threshold used in phase total/fundamental reactive power data path.
0x43AF	reserved					0x000000	This memory location should be kept at 0x000000 for proper operation
0x43B0	VANOLOAD	R/W	24	32 ZPSE	S	0x0000000	No-load threshold in the apparent power data path
0x43B1	APNOLOAD	R/W	24	32 ZPSE	S	0x0000000	No-load threshold in the total/fundamental active power data path
0x43B2	VARNOLOAD	R/W	24	32 ZPSE	S	0x0000000	No-load threshold in the total/fundamental reactive power data path
0x43B3	VLEVEL	R/W	24	32 ZPSE	S	0x0000000	Register used in the algorithm that computes the fundamental active and reactive powers
0x43B4	reserved					0x000000	This memory location should not be written for proper operation
0x43B5	DICOEFF	R/W	24	32 ZPSE	S	0x0000000	Register used in the digital integrator algorithm. If the integrator is turned on, it must be set at 0xFF8000
0x43B6	HPFDIS	R/W	24	32 ZP	U	0x000000	Disables/enables the HPF in the current data path (see Table 28)
0x43B7	reserved					0x000000	This memory location should be kept at 0x000000 for proper operation
0x43B8	ISUMLVL	R/W	24	32 ZPSE	S	0x0000000	Threshold used in the comparison between the sum of phase currents and the neutral current
0x43B9- 0x43BE	reserved					0x000000	These memory locations should be kept at 0x000000 for proper operation
0x43BF	ISUM	R	28	32 ZP	S	NA	Sum of IAVW, IBVW and ICVW registers
0x43C0	AIRMS	R	24	32 ZP	S	NA	Phase A current rms value
0x43C1	AVRMS	R	24	32 ZP	S	NA	Phase A voltage rms value
0x43C2	BIRMS	R	24	32 ZP	S	NA	Phase B current rms value
0x43C3	BVRMS	R	24	32 ZP	S	NA	Phase B voltage rms value
0x43C4	CIRMS	R	24	32 ZP	S	NA	Phase C current rms value
0x43C5	CVRMS	R	24	32 ZP	S	NA	Phase C voltage rms value
0x43C6	NIRMS	R	24	32 ZP	S	NA	Neutral current rms value
0x43C7- 0x43FF	reserved					0x000000	These memory locations should not be written for proper operation

<sup>&</sup>lt;sup>1</sup> R=read W=write

w=write

23 Z PSE=24-bit signed register that is transmitted as a 32-bit word with 4 most significant bits padded with 0s and sign extended to 28bits

32 ZP=28 or 24-bit signed or unsigned register that is transmitted as a 32-bit word with 4 or respectively 8 most significant bits padded with 0s

3 U=unsigned register

S=signed register in two's complement format

Table 25. Internal DSP memory RAM registers

Address	Name	R/W¹	Bit Length	Bit Length during Comm	Type <sup>2</sup>	Default Value	Description
0xE203	reserved	R/W	16	16	U	0x0000	This memory location should not be written for proper operation DSP stops execution.
0xE228	RUN	R/W	16	16	U	0x0000	RUN register starts and stops the DSP. See Digital Signal Processor chapter for more details.

<sup>&</sup>lt;sup>1</sup> R=read

<sup>&</sup>lt;sup>2</sup> U=unsigned register S=signed register in two's complement format

Table 26. ADE7878 billable registers

			Bit	Bit Length during		Default	
Address	Name	R/W <sup>1</sup>	Length	Comm	Type <sup>2</sup>	Value	Description
0xE400	AWATTHR	R	32	32	S	0x00000000	Phase A total active energy accumulation
0xE401	BWATTHR	R	32	32	S	0x00000000	Phase B total active energy accumulation
0xE402	CWATTHR	R	32	32	S	0x00000000	Phase C total active energy accumulation
0xE403	AFWATTHR	R	32	32	S	0x00000000	Phase A fundamental active energy accumulation
0xE404	BFWATTHR	R	32	32	S	0x00000000	Phase B fundamental active energy accumulation
0xE405	CFWATTHR	R	32	32	S	0x00000000	Phase C fundamental active energy accumulation
0xE406	AVARHR	R	32	32	S	0x00000000	Phase A total reactive energy accumulation
0xE407	BVARHR	R	32	32	S	0x00000000	Phase B total reactive energy accumulation
0xE408	CVARHR	R	32	32	S	0x00000000	Phase C total reactive energy accumulation
0xE409	AFVARHR	R	32	32	S	0x00000000	Phase A fundamental reactive energy accumulation
0xE40A	BFVARHR	R	32	32	S	0x00000000	Phase B fundamental reactive energy accumulation
0xE40B	CFVARHR	R	32	32	S	0x00000000	Phase C fundamental reactive energy accumulation
0xE40C	AVAHR	R	32	32	S	0x00000000	Phase A apparent energy accumulation
0xE40D	BVAHR	R	32	32	S	0x00000000	Phase B apparent energy accumulation
0xE40E	CVAHR	R	32	32	S	0x00000000	Phase C apparent energy accumulation

<sup>&</sup>lt;sup>1</sup> R=read W=write <sup>2</sup> U=unsigned register S=signed register in two's complement format

Table 27. Configuration and power quality registers

14010 27.1	Jonnguration a	Ina pon	quanty			T	
			Bit	Bit Length		Default	
Address	Name	R/W <sup>1</sup>	Length	during comm²	Type <sup>3</sup>	Value	Description
0xE500	IPEAK	R	32	32	U	NA	Current peak register. See Figure 36 and Table 29 for
0xE501	VPEAK	R	32	32	U	NA	details about its composition.  Voltage peak register. See Figure 36 and Table 30 for
0.5500	CTATUS			20	l		details about its composition.
0xE502	STATUS0	R	32	32	U	NA	Interrupt status register 0. (See Table 31)
0xE503	STATUS1	R	32	32	U	NA	Interrupt status register 1. (See Table 32)
0xE504	AIMAV	R	20	32 ZP	U	NA	Phase A current rms computed during PSM1 mode
0xE505	BIMAV	R	20	32 ZP	U	NA	Phase B current rms computed during PSM1 mode
0xE506	CIMAV	R	20	32 ZP	U	NA	Phase C current rms computed during PSM1 mode
0xE507	OILVL	R/W	24	32 ZP	U	0xFFFFFF	Overcurrent threshold
0xE508	OVLVL	R/W	24	32 ZP	U	0xFFFFFF	Overvoltage threshold
0xE509	SAGLVL	R/W	24	32 ZP	U	0x000000	Voltage sag level threshold
0xE50A	MASK0	R/W	32	32	U	0x00000000	Interrupt enable register 0. (See Table 33)
0xE50B	MASK1	R/W	32	32	U	0x00000000	Interrupt enable register 1. (See Table 34)
0xE50C	IAWV	R	24	32 SE	S	NA	Instantaneous value of phase A current
0xE50D	IBWV	R	24	32 SE	S	NA	Instantaneous value of phase B current
0xE50E	ICWV	R	24	32 SE	S	NA	Instantaneous value of phase C current
0xE50F	INWV	R	24	32 SE	S	NA	Instantaneous value of neutral current
0xE510	VAWV	R	24	32 SE	S	NA	Instantaneous value of phase A voltage
0xE511	VBWV	R	24	32 SE	S	NA	Instantaneous value of phase B voltage
0xE512	VCWV	R	24	32 SE	S	NA	Instantaneous value of phase C voltage
0xE513	AWATT	R	24	32 SE	S	NA	Instantaneous value of phase A total active power
0xE514	BWATT	R	24	32 SE	S	NA	Instantaneous value of phase B total active power
0xE515	CWATT	R	24	32 SE	S	NA	Instantaneous value of phase B total active power
0xE516	AVAR	R	24	32 SE	S	NA	Instantaneous value of phase A total reactive power
0xE517	BVAR	R	24	32 SE	S	NA	Instantaneous value of phase B total reactive power
0xE518	CVAR	R	24	32 SE	S	NA	Instantaneous value of phase B total reactive power
0xE519	AVA	R	24	32 SE	S	NA	Instantaneous value of phase A apparent power
0xE51A	BVA	R	24	32 SE	S	NA	Instantaneous value of phase Bapparent power
0xE51B	CVA	R	24	32 SE	S	NA	Instantaneous value of phase B apparent power
0xE51F	CHECKSUM	R	32	32	U	0x9AE5E8B1	Checksum verification. See Checksum Register section for details
0xE520	VNOM	R/W	24	32 ZP	S	0x000000	Nominal phase voltage rms used in the alternative computation of the apparent power
0xE521- 0xE52E	reserved						These addresses should not be written for proper operation
0xE600	PHSTATUS	R	16	16	U	NA	Phase peak register. (See Table 35)
0xE601	ANGLE0	R	16	16	U	NA	Time delay 0. See Time Interval Between Phases section for details
0xE602	ANGLE1	R	16	16	U	NA	Time delay 1. See Time Interval Between Phases section for details
0xE603	ANGLE2	R	16	16	U	NA	Time delay 2. See Time Interval Between Phases section for details
0xE604- 0xE606	reserved						These addresses should not be written for proper operation
0xE607	PERIOD	R	16	16	U	NA	Network line period
0xE608	PHNOLOAD	R	16	16	U	NA	Phase no-load register. (See Table 36)
0xE609-	reserved						These addresses should not be written for proper
0xE60B							operation
0xE60C	LINECYC	R/W	16	16	U	0xFFFF	Line cycle accumulation mode count
0xE60D	ZXTOUT	R/W	16	16	U	0xFFFF	Zero crossing timeout count
0xE60E	COMPMODE	R/W	16	16	U	0x01FF	Computation mode register. (See Table 37)

			Bit	Bit Length during		Default	
Address	Name	R/W <sup>1</sup>	Length	comm <sup>2</sup>	Type <sup>3</sup>	Value	Description
0xE60F	GAIN	R/W	16	16	U	0x0000	PGA gains at ADC inputs. (See Table 38)
0xE610	CFMODE	R/W	16	16	U	0x0E88	CFx, x=1,2,3 configuration register. (See Table 39)
0xE611	CF1DEN	R/W	16	16	U	0x0000	CF1 denominator
0xE612	CF2DEN	R/W	16	16	U	0x0000	CF2 denominator
0xE613	CF3DEN	R/W	16	16	U	0x0000	CF3 denominator
0xE614	APHCAL	R/W	10	16 ZP	U	0x0000	Phase calibration of phase A. (See Table 40)
0xE615	BPHCAL	R/W	10	16 ZP	U	0x0000	Phase calibration of phase B. (See Table 40)
0xE616	CPHCAL	R/W	10	16 ZP	U	0x0000	Phase calibration of phase C. (See Table 40)
0xE617	PHSIGN	R	16	16	U	NA	Power sign register. (See Table 41)
0xE618	CONFIG	R/W	16	16	U	0x0000	ADE7878 configuration register. (See Table 42)
0xE700	MMODE	R/W	8	8	U	0x16	Measurement mode register. (See Table 43)
0xE701	ACCMODE	R/W	8	8	U	0x00	Accumulation mode register. (SeeTable 44)
0xE702	LCYCMODE	R/W	8	8	U	0x78	Line accumulation mode behavior. (See Table 45)
0xE703	PEAKCYC	R/W	8	8	U	0x00	Peak detection half line cycles
0xE704	SAGCYC	R/W	8	8	U	0x00	Sag detection half line cycles
0xE705	CFCYC	R/W	8	8	U	0x01	Number of CF pulses between two consecutive energy latches. See Synchronizing energy registers with CFx outputs section
0xE706	HSDC_CFG	R/W	8	8	U	0x00	HSDC configuration register. (See Table 46)
0xEBFF	reserved						This address may be used in manipulating the
							SS pin when SPI is chosen as the active port. (See Serial Interfaces chapter for details)
0xEC00	LPOILVL	R/W	8	8	U	0x07	Overcurrent threshold used during PSM2 mode. (See Table 47)
0xEC01	CONFIG2	R/W	8	8	U	0x00	Configuration register used during PSM1 mode. (See Table 48)

<sup>1</sup> R=read

<sup>&</sup>lt;sup>2</sup> 32 ZP=24 or 20-bit signed or unsigned register that is transmitted as a 32-bit word with 8 or respectively 12 most significant bits padded with 0s

<sup>32</sup> SE=24-bit signed register that is transmitted as a 32-bit word sign extended to 32 bits
16 ZP=10-bit unsigned register that is transmitted as a 16-bit word with 6 most significant bits padded with 0s

 $<sup>^{3}</sup>$  U=unsigned register

S=signed register in two's complement format

#### Table 28. HPFDIS register (address 0x43B6)

Bit	Bit	Default	Description
Location	Mnemonic	value	
23:0		00000000	When HPFDIS=0x00000000, then all high pass filters in voltage and current channels are enabled. When the register is set to any non zero value, all high pass filters are disabled.

#### Table 29. IPEAK register (address 0xE500)

<b>Bit Location</b>	Bit Mnemonic	Default value	Description
23-0	IPEAKVAL[23:0]	0	These bits contain the peak value determined in the current channel.
24	IPPHASE[0]	0	When this bit is set to 1, phase A current generated IPEAKVAL[23:0] value.
25	IPPHASE[1]	0	When this bit is set to 1, phase B current generated IPEAKVAL[23:0] value.
26	IPPHASE[2]	0	When this bit is set to 1, phase C current generated IPEAKVAL[23:0] value.
31-27		00000	These bits are always 0.

### Table 30. VPEAK register (address 0xE501)

Bit Location	Bit Mnemonic	Default value	Description
23-0	VPEAKVAL[23:0]	0	These bits contain the peak value determined in the voltage channel.
24	VPPHASE[0]	0	When this bit is set to 1, phase A voltage generated VPEAKVAL[23:0] value.
25	VPPHASE[1]	0	When this bit is set to 1, phase B voltage generated VPEAKVAL[23:0] value.
26	VPPHASE[2]	0	When this bit is set to 1, phase C voltage generated VPEAKVAL[23:0] value.
31-27		00000	These bits are always 0.

#### Table 31. STATUS0 register (address 0xE502)

Bit	Bit	Default	
Location	Mnemonic	value	Description
0	AEHF	0	When this bit is set to 1, it indicates that bit 30 of any one of the total active energy registers AWATTHR, BWATTHR, CWATTHR has changed.
1	FAEHF	0	When this bit is set to 1, it indicates that bit 30 of any one of the fundamental active energy registers AFWATTHR, BFWATTHR, CFWATTHR has changed.
2	REHF	0	When this bit is set to 1, it indicates that bit 30 of any one of the total reactive energy registers AVARHR, BVARHR, CVARHR has changed.
3	FREHF	0	When this bit is set to 1, it indicates that bit 30 of any one of the fundamental reactive energy registers AFVARHR, BFVARHR, CFVARHR has changed.
4	VAEHF	0	When this bit is set to 1, it indicates that bit 30 of any one of the apparent energy registers AVAHR, BVAHR, CVAHR has changed.
5	LENERGY	0	When this bit is set to 1, in line energy accumulation mode, it indicates the end of an integration over an integer number of half line cycles set in LINECYC[15:0] register.
6	REVAPA	0	When this bit is set to 1, it indicates that the phase A active power identified by bit 6 (REVAPSEL) in ACCMODE[7:0] register (total or fundamental) has changed sign. The sign itself is indicated in bit 0 (AWSIGN) of PHSIGN[15:0] register (see Table 41).
7	REVAPB	0	When this bit is set to 1, it indicates that the phase B active power identified by bit 6 (REVAPSEL) in ACCMODE[7:0] register (total or fundamental) has changed sign. The sign itself is indicated in bit 1 (BWSIGN) of PHSIGN[15:0] register (see Table 41).
8	REVAPC	0	When this bit is set to 1, it indicates that the phase C active power identified by bit 6 (REVAPSEL) in ACCMODE[7:0] register (total or fundamental) has changed sign. The sign itself is indicated in bit 2 (CWSIGN) of PHSIGN[15:0] register (see Table 41).
9	REVPSUM1	0	When this bit is set to 1, it indicates that the sum of all phase powers in the CF1 data path has changed sign. The sign itself is indicated in bit 3 (SUM1SIGN) of PHSIGN[15:0] register (see Table 41).
10	REVRPA	0	When this bit is set to 1, it indicates that the phase A reactive power identified by bit 7 (REVRPSEL) in ACCMODE[7:0] register (total or fundamental) has changed sign. The sign itself is indicated in bit 4 (AVARSIGN) of PHSIGN[15:0] register (see Table 41).
11	REVRPB	0	When this bit is set to 1, it indicates that the phase B reactive power identified by bit 7 (REVRPSEL) in ACCMODE[7:0] register (total or fundamental) has changed sign. The sign itself is indicated in bit 5 (BVARSIGN) of PHSIGN[15:0] register (see Table 41).
12	REVRPC	0	When this bit is set to 1, it indicates that the phase C reactive power identified by bit 7 (REVRPSEL) in ACCMODE[7:0] register (total or fundamental) has changed sign. The sign itself is indicated in bit 6 (CVARSIGN) of PHSIGN[15:0] register (see Table 41).

Bit Location	Bit Mnemonic	Default value	Description
13	REVPSUM2	0	When this bit is set to 1, it indicates that the sum of all phase powers in the CF2 data path has changed sign. The sign itself is indicated in bit 7 (SUM2SIGN) of PHSIGN[15:0] register (see Table 41).
14	CF1		When this bit is set to 1, it indicates a high to low transition has occurred at CF1 pin, that is an active low pulse has been generated. The bit is set even if the CF1 output is disabled by setting bit 9 (CF1DIS) to 1 in CFMODE[15:0] register. The type of the powers used at CF1 pin is determined by bits 2-0 (CF1SEL) in CFMODE[15:0] register (see Table 39).
15	CF2		When this bit is set to 1, it indicates a high to low transition has occurred at CF2 pin, that is an active low pulse has been generated. The bit is set even if the CF2 output is disabled by setting bit 10 (CF2DIS) to 1 in CFMODE[15:0] register. The type of the powers used at CF2 pin is determined by bits 5-3 (CF2SEL) in CFMODE[15:0] register (see Table 39).
16	CF3		When this bit is set to 1, it indicates a high to low transition has occurred at CF3 pin, that is an active low pulse has been generated. The bit is set even if the CF3 output is disabled by setting bit 11 (CF3DIS) to 1 in CFMODE[15:0] register. The type of the powers used at CF3 pin is determined by bits 8-6 (CF3SEL) in CFMODE[15:0] register (see Table 39).
17	DREADY	0	When this bit is set to 1, it indicates that all periodical (at 8KHz rate) DSP computations have finished.
18	REVPSUM3	0	When this bit is set to 1, it indicates that the sum of all phase powers in the CF3 data path has changed sign. The sign itself is indicated in bit 8 (SUM3SIGN) of PHSIGN[15:0] register (see Table 41).
31-19		0 0000 0000 0000	These bits are always 0.

Table 32. STATUS1 register (address 0xE503)

Bit	Bit	Default	Paradian.
Location	Mnemonic	value	Description
0	NLOAD	0	When this bit is set to 1, it indicates that at least one phase entered no-load condition based on total active and reactive powers. The phase is indicated in bits 2-0 (NLPHASE) in PHNOLOAD[15:0] register (see Table 36).
1	FNLOAD		When this bit is set to 1, it indicates that at least one phase entered no-load condition based on fundamental active and reactive powers. The phase is indicated in bits 5-3 (FNLPHASE) in PHNOLOAD[15:0] register (see Table 36).
2	VANLOAD	0	When this bit is set to 1, it indicates that at least one phase entered no-load condition based on apparent power. The phase is indicated in bits 8-6 (VANLPHASE) in PHNOLOAD[15:0] register (see Table 36).
3	ZXTOVA	0	When this bit is set to 1, it indicates a zero crossing on phase A voltage is missing.
4	ZXTOVB	0	When this bit is set to 1, it indicates a zero crossing on phase B voltage is missing.
5	ZXTOVC	0	When this bit is set to 1, it indicates a zero crossing on phase C voltage is missing.
6	ZXTOIA	0	When this bit is set to 1, it indicates a zero crossing on phase A current is missing.
7	ZXTOIB	0	When this bit is set to 1, it indicates a zero crossing on phase B current is missing.
8	ZXTOIC	0	When this bit is set to 1, it indicates a zero crossing on phase C current is missing.
9	ZXVA	0	When this bit is set to 1, it indicates a zero crossing has been detected on phase A voltage.
10	ZXVB	0	When this bit is set to 1, it indicates a zero crossing has been detected on phase B voltage.
11	ZXVC	0	When this bit is set to 1, it indicates a zero crossing has been detected on phase C voltage.
12	ZXIA	0	When this bit is set to 1, it indicates a zero crossing has been detected on phase A current.
13	ZXIB	0	When this bit is set to 1, it indicates a zero crossing has been detected on phase B current.
14	ZXIC	0	When this bit is set to 1, it indicates a zero crossing has been detected on phase C current.
15	RSTDONE	1	In case of a software reset command, bit 7 (SWRST) set to 1 in CONFIG[15:0] register, or a transition from PSM1, PSM2 or PSM3 to PSM0, or a hardware reset, this bit is set to 1 at the end of the transition
			process and after all registers changed value to default. $\overline{IRQ1}$ pin goes low to signal this moment
			because this interrupt cannot be disabled.
16	SAG	0	When this bit is set to 1, it indicates a SAG event has occurred on one of the phases indicated by bits 14-12 (VSPHASE) in PHSTATUS[15:0] register (see Table 35).
17	OI	0	When this bit is set to 1, it indicates an overcurrent event has occurred on one of the phases indicated by bits 5-3 (OIPHASE) in PHSTATUS[15:0] register (see Table 35).
18	OV	0	When this bit is set to 1, it indicates an overcurrent event has occurred on one of the phases indicated by bits 11-9 (OVPHASE) in PHSTATUS[15:0] register (see Table 35).
19	SEQERR	0	When this bit is set to 1, it indicates a negative to positive zero crossing on phase A voltage was not

Bit Location	Bit Mnemonic	Default value	Description
Location	Wilelionic	value	followed by a negative to positive zero crossing on phase B voltage, but by a negative to positive zero crossing on phase C voltage.
20	MISMTCH	0	When this bit is set to 1, it indicates abs(ISUM-INVW) is greater than the value indicated in ISUMLVL [23:0]register.
21	Reserved	1	
22	Reserved	0	
23	PKI	0	When this bit is set to 1, it indicates that the period used to detect the peak value in the current channel has ended. IPEAK[31:0] register contains the peak value and the phase where the peak has been detected (see Table 29).
24	PKV	0	When this bit is set to 1, it indicates that the period used to detect the peak value in the voltage channel has ended. VPEAK[31:0] register contains the peak value and the phase where the peak has been detected (see Table 30).
31:25		000 0000	These bits are always 0.

Table 33. MASK0 register (address 0xE50A)

Bit	MASKO regist Bit	Default	
Location	Mnemonic	value	Description
0	AEHF	0	When this bit is set to 1, it enables an interrupt when bit 30 of any one of the total active energy registers AWATTHR, BWATTHR, CWATTHR changes.
1	FAEHF	0	When this bit is set to 1, it enables an interrupt when bit 30 of any one of the fundamental active energy registers AFWATTHR, BFWATTHR, CFWATTHR changes.
2	REHF	0	When this bit is set to 1, it enables an interrupt when bit 30 of any one of the total reactive energy registers AVARHR, BVARHR, CVARHR changes.
3	FREHF	0	When this bit is set to 1, it enables an interrupt when bit 30 of any one of the fundamental reactive energy registers AFVARHR, BFVARHR, CFVARHR changes.
4	VAEHF	0	When this bit is set to 1, it enables an interrupt when bit 30 of any one of the apparent energy registers AVAHR, BVAHR, CVAHR changes.
5	LENERGY	0	When this bit is set to 1, in line energy accumulation mode, it enables an interrupt at the end of an integration over an integer number of half line cycles set in LINECYC[15:0] register.
6	REVAPA	0	When this bit is set to 1, it enables an interrupt when the phase A active power identified by bit 6 (REVAPSEL) in ACCMODE[7:0] register (total or fundamental) changes sign.
7	REVAPB	0	When this bit is set to 1, it enables an interrupt when the phase B active power identified by bit 6 (REVAPSEL) in ACCMODE[7:0] register (total or fundamental) changes sign.
8	REVAPC	0	When this bit is set to 1, it indicates that the phase C active power identified by bit 6 (REVAPSEL) in ACCMODE[7:0] register (total or fundamental) changes sign.
9	REVPSUM1	0	When this bit is set to 1, it enables an interrupt when the sum of all phase powers in the CF1 data path changes sign.
10	REVRPA	0	When this bit is set to 1, it enables an interrupt when the phase A reactive power identified by bit 7 (REVRPSEL) in ACCMODE[7:0] register (total or fundamental) changes sign.
11	REVRPB	0	When this bit is set to 1, it enables an interrupt when the phase B reactive power identified by bit 7 (REVRPSEL) in ACCMODE[7:0] register (total or fundamental) changes sign.
12	REVRPC	0	When this bit is set to 1, it indicates that the phase C reactive power identified by bit 7 (REVRPSEL) in ACCMODE[7:0] register (total or fundamental) changes sign.
13	REVPSUM2	0	When this bit is set to 1, it enables an interrupt when the sum of all phase powers in the CF2 data path changes sign.
14	CF1		When this bit is set to 1, it enables an interrupt when a high to low transition occurs at CF1 pin, that is an active low pulse is generated. The interrupt may be enabled even if the CF1 output is disabled by setting bit 9 (CF1DIS) to 1 in CFMODE[15:0] register. The type of the powers used at CF1 pin is determined by bits 2-0 (CF1SEL) in CFMODE[15:0] register (see Table 39).
15	CF2		When this bit is set to 1, it enables an interrupt when a high to low transition occurs at CF2 pin, that is an active low pulse is generated. The interrupt may be enabled even if the CF2 output is disabled by setting bit 10 (CF2DIS) to 1 in CFMODE[15:0] register. The type of the powers used at CF2 pin is determined by bits 5-3 (CF2SEL) in CFMODE[15:0] register (see Table 39).
16	CF3		When this bit is set to 1, it enables an interrupt when a high to low transition occurs at CF3 pin, that is an active low pulse is generated. The interrupt may be enabled even if the CF3 output is disabled

Bit	Bit	Default	
Location	Mnemonic	value	Description
			by setting bit 11 (CF3DIS) to 1 in CFMODE[15:0] register. The type of the powers used at CF3 pin is determined by bits 8-6 (CF3SEL) in CFMODE[15:0] register (see Table 39).
17	DREADY	0	When this bit is set to 1, it enables an interrupt when all periodical (at 8KHz rate) DSP computations finish.
18	REVPSUM3	0	When this bit is set to 1, it enables an interrupt when the sum of all phase powers in the CF3 data path changes sign.
31-18		00 0000 0000 0000	Reserved. These bits do not manage any functionality.

Table 34. MASK1 register (address 0xE50B)

Bit	Bit	Default	
Location	Mnemonic	value	Description
0	NLOAD	0	When this bit is set to 1, it enables an interrupt when at least one phase enters no-load condition based on total active and reactive powers.
1	FNLOAD		When this bit is set to 1, it enables an interrupt when at least one phase enters no-load condition based on fundamental active and reactive powers.
2	VANLOAD	0	When this bit is set to 1, it enables an interrupt when at least one phase enters no-load condition based on apparent power.
3	ZXTOVA	0	When this bit is set to 1, it enables an interrupt when a zero crossing on phase A voltage misses.
4	ZXTOVB	0	When this bit is set to 1, it enables an interrupt when a zero crossing on phase B voltage misses.
5	ZXTOVC	0	When this bit is set to 1, it enables an interrupt when a zero crossing on phase C voltage misses.
6	ZXTOIA	0	When this bit is set to 1, it enables an interrupt when a zero crossing on phase A current misses.
7	ZXTOIB	0	When this bit is set to 1, it enables an interrupt when a zero crossing on phase B current is missing.
8	ZXTOIC	0	When this bit is set to 1, it enables an interrupt when a zero crossing on phase C current is missing.
9	ZXVA	0	When this bit is set to 1, it enables an interrupt when a zero crossing is detected on phase A voltage.
10	ZXVB	0	When this bit is set to 1, it enables an interrupt when a zero crossing is detected on phase B voltage.
11	ZXVC	0	When this bit is set to 1, it enables an interrupt when a zero crossing is detected on phase C voltage.
12	ZXIA	0	When this bit is set to 1, it enables an interrupt when a zero crossing is detected on phase A current.
13	ZXIB	0	When this bit is set to 1, it enables an interrupt when a zero crossing is detected on phase B current.
14	ZXIC	0	When this bit is set to 1, it enables an interrupt when a zero crossing is detected on phase C current.
15	RSTDONE	0	Because the RSTDONE interrupt cannot be disabled, this bit does not have any functionality attached. It can be set to 1 or cleared to 0 without having any effect.
16	SAG	0	When this bit is set to 1, it enables an interrupt when a SAG event occurs on one of the phases indicated by bits 14-12 (VSPHASE) in PHSTATUS[15:0] register (see Table 35).
17	OI	0	When this bit is set to 1, it enables an interrupt when an overcurrent event occurs on one of the phases indicated by bits 5-3 (OIPHASE) in PHSTATUS[15:0] register (see Table 35).
18	OV	0	When this bit is set to 1, it enables an interrupt when an overcurrent event occurs on one of the phases indicated by bits 11-9 (OVPHASE) in PHSTATUS[15:0] register (see Table 35).
19	SEQERR	0	When this bit is set to 1, it enables an interrupt when a negative to positive zero crossing on phase A voltage is not followed by a negative to positive zero crossing on phase B voltage, but by a negative to positive zero crossing on phase C voltage.
20	MISMTCH	0	When this bit is set to 1, it enables an interrupt when abs(ISUM-INVW) is greater than the value indicated in ISUMLVL [23:0]register.
22,21		00	Reserved. These bits do not manage any functionality.
23	PKI	0	When this bit is set to 1, it enables an interrupt when the period used to detect the peak value in the current channel has ended.
24	PKV	0	When this bit is set to 1, it enables an interrupt when the period used to detect the peak value in the voltage channel has ended.
31:25		000 0000	Reserved. These bits do not manage any functionality.

Table 35. PHSTATUS register (address 0xE600)

Bit Location	Bit Mnemonic	Default value	Description
2-0		000	These bits are always 0.
3	OIPHASE[0]	0	When this bit is set to 1, phase A current generated bit 17 (OI) in STATUS1[31:0]

# **Preliminary Technical Data**

Bit Location	Bit Mnemonic	Default value	Description
4	OIPHASE[1]	0	When this bit is set to 1, phase B current generated bit 17 (OI) in STATUS1[31:0]
5	OIPHASE[1]	0	When this bit is set to 1, phase C current generated bit 17 (OI) in STATUS1[31:0]
8-6		000	These bits are always 0.
9	OVPHASE[0]	0	When this bit is set to 1, phase A voltage generated bit 18 (OV) in STATUS1[31:0]
10	OVPHASE[1]	0	When this bit is set to 1, phase B voltage generated bit 18 (OV) in STATUS1[31:0]
11	OVPHASE[2]	0	When this bit is set to 1, phase C voltage generated bit 18 (OV) in STATUS1[31:0]
12	VSPHASE[0]	0	When this bit is set to 1, phase A voltage generated bit 16 (SAG) in STATUS1[31:0]
13	VSPHASE[1]	0	When this bit is set to 1, phase B voltage generated 16 (SAG) in STATUS1[31:0]
14	VSPHASE[2]	0	When this bit is set to 1, phase C voltage generated 16 (SAG) in STATUS1[31:0]
15		0	This bit is always 0.

#### Table 36. PHNOLOAD register (address 0xE608)

Bit Location	Bit Mnemonic	Default value	Description
0	NLPHASE[0]	0	<ul> <li>-0: phase A is out of no-load condition based on total active/reactive powers.</li> <li>-1: phase A is in no load condition based on total active/reactive powers. Bit set together with bit 0 (NLOAD) in STATUS1[31:0].</li> </ul>
1	NLPHASE[1]	0	<ul> <li>-0: phase B is out of no-load condition based on total active/reactive powers.</li> <li>-1: phase B is in no load condition based on total active/reactive powers. Bit set together with bit 0 (NLOAD) in STATUS1[31:0].</li> </ul>
2	NLPHASE[2]	0	<ul> <li>-0: phase C is out of no-load condition based on total active/reactive powers.</li> <li>-1: phase C is in no load condition based on total active/reactive powers. Bit set together with bit 0 (NLOAD) in STATUS1[31:0].</li> </ul>
3	FNLPHASE[0]	0	-0: phase A is out of no-load condition based on fundamental active/reactive powers1: phase A is in no load condition based on fundamental active/reactive powers. Bit set together with bit 1 (FNLOAD) in STATUS1[31:0].
4	FNLPHASE[1]	0	-0: phase B is out of no-load condition based on fundamental active/reactive powers1: phase B is in no load condition based on fundamental active/reactive powers. Bit set together with bit 1 (FNLOAD) in STATUS1[31:0].
5	FNLPHASE[2]	0	-0: phase C is out of no-load condition based on fundamental active/reactive powers1: phase C is in no load condition based on fundamental active/reactive powers. Bit set together with bit 1 (FNLOAD) in STATUS1[31:0].
6	VANLPHASE[0]	0	<ul> <li>-0: phase A is out of no-load condition based on apparent power.</li> <li>-1: phase A is in no load condition based on apparent power. Bit set together with bit 2 (VANLOAD) in STATUS1[31:0].</li> </ul>
7	VANLPHASE[1]	0	-0: phase B is out of no-load condition based on apparent power1: phase B is in no load condition based on apparent power. Bit set together with bit 2 (VANLOAD) in STATUS1[31:0].
8	VANLPHASE[2]	0	-0: phase C is out of no-load condition based on apparent power1: phase C is in no load condition based on apparent power. Bit set together with bit 2 (VANLOAD) in STATUS1[31:0].
15-9		000 0000	These bits are always 0.

Table 37. COMPMODE register (address 0xE60E)

Bit	Bit	Default	
Location	Mnemonic	value	Description
0	TERMSEL1[0]	1	Setting all TERMSEL1[2:0] to 1 signifies the sum of all 3 phases is included in CF1 output Phase A is included in CF1 outputs calculations
	TERMSEL1[1]	1	Phase B is included in CF1 outputs calculations
2	TERMSEL1[2]	1	Phase C is included in CF1 outputs calculations
3	TERMSEL2[0]	1	Setting all TERMSEL2[2:0] to 1 signifies the sum of all 3 phases is included in CF2 output Phase A is included in CF2 outputs calculations
4	TERMSEL2[1]	1	Phase B is included in CF2 outputs calculations

Bit Location	Bit Mnemonic	Default value	Description
5	TERMSEL2[2]	1	Phase C is included in CF2 outputs calculations
6	TERMSEL3[0]	1	Setting all TERMSEL3[2:0] to 1 signifies the sum of all 3 phases is included in CF3 output Phase A is included in CF3 outputs calculations
7	TERMSEL3[1]	1	Phase B is included in CF3 outputs calculations
8	TERMSEL3[2]	1	Phase C is included in CF3 outputs calculations
10,9	ANGLESEL[1:0]	00	-00:the angles between phase voltages and phase currents are measured -01: the angles between phase voltages are measured -10: the angles between phase currents are measured -11: no angles are measured
11	VNOMAEN	0	When this bit is 0, the apparent power on phase A is computed regularly. When this bit is 1, the apparent power on phase A is computed using VNOM[23:0] register instead of regular measured rms phase voltage.
12	VNOMBEN	0	When this bit is 0, the apparent power on phase B is computed regularly. When this bit is 1, the apparent power on phase B is computed using VNOM[23:0] register instead of regular measured rms phase voltage.
13	VNOMCEN	0	When this bit is 0, the apparent power on phase C is computed regularly. When this bit is 1, the apparent power on phase C is computed using VNOM[23:0] register instead of regular measured rms phase voltage.
14	SELFREQ	0	When the ADE7878 is connected to 50Hz networks, this bit should be cleared to 0 (default value). When the ADE7878 is connected to 60Hz networks, this bit should be set to 1.
15		0	Reserved. This bit does not manage any functionality.

Table 38: GAIN register (address 0xE60F)

Bit	Mnemonic	Default	Description
2 to 0	PGA1[2:0]	000	Phase currents gain selection
			-000: gain=1
			-001: gain=2
			-010: gain=4
			-011: gain=8
			-100: gain=16
			-101, 110, 111: reserved. When set, the ADE7878 behaves like PGA1 [2:0]=000
5 to 3	PGA2[2:0]	000	Neutral current gain selection
			-000: gain=1
			-001: gain=2
			-010: gain=4
			-011: gain=8
			-100: gain=16
			-101, 110, 111: reserved. When set, the ADE7878 behaves like PGA2 [2:0]=000
8 to 6	PGA3[2:0]	000	Phase voltages gain selection
			-000: gain=1
			-001: gain=2
			-010: gain=4
			-011: gain=8
			-100: gain=16
			-101, 110, 111: reserved. When set, the ADE7878 behaves like PGA3 [2:0]=000
15 to 9		000 0000	Reserved. These bits do not manage any functionality.

Table 39. CFMODE register (address 0xE610)

Bit	Bit	Default	Description
Location	Mnemonic	value	
2-0	CF1SEL[2:0]	000	-000: CF1 frequency proportional to the sum of total active powers on each phase identified by bits 2-0 (TERMSEL1) in COMPMODE[15:0] register001: CF1 frequency proportional to the sum of total reactive powers on each phase identified by bits 2-0 (TERMSEL1) in COMPMODE[15:0] register010: CF1 frequency proportional to the sum of apparent powers on each phase identified by bits

Bit	Bit	Default	Description	
Location	Mnemonic	value		
			2-0 (TERMSEL1) in COMPMODE[15:0] register.  -011: CF1 frequency proportional to the sum of fundamental active powers on each phase identified by bits 2-0 (TERMSEL1) in COMPMODE[15:0] register.  -100: CF1 frequency proportional to the sum of fundamental reactive powers on each phase identified by bits 2-0 (TERMSEL1) in COMPMODE[15:0] register.  -101,110,111: reserved. When set, the ADE7878 behaves like CF1SEL [2:0]=000.	
5-3	CF2SEL[2:0]	000	-000: CF2 frequency proportional to the sum of total active powers on each phase identified by bits 5:3 (TERMSEL2) in COMPMODE[15:0] register.	
			-001: CF2 frequency proportional to the sum of total reactive powers on each phase identified by bits 5:3 (TERMSEL2) in COMPMODE[15:0] register.	
			-010: CF2 frequency proportional to the sum of apparent powers on each phase identified by bits 5:3 (TERMSEL2) in COMPMODE[15:0] register.	
			-011: CF2 frequency proportional to the sum of fundamental active powers on each phase identified by bits 5:3 (TERMSEL2) in COMPMODE[15:0] register.	
			-100: CF2 frequency proportional to the sum of fundamental reactive powers on each phase identified by bits 5:3 (TERMSEL2) in COMPMODE[15:0] register.	
			-101,110,111: reserved. When set, the ADE7878 behaves like CF2SEL [2:0]=000.	
8-6	CF3SEL[2:0]	000	-000: CF3 frequency proportional to the sum of total active powers on each phase identified by bits 8:6 (TERMSEL3) in COMPMODE[15:0] register.	
			-001: CF3 frequency proportional to the sum of total reactive powers on each phase identified by bits 8:6 (TERMSEL3) in COMPMODE[15:0] register.	
			-010: CF3 frequency proportional to the sum of apparent powers on each phase identified by bits 8:6 (TERMSEL3) in COMPMODE[15:0] register.	
			-011: CF3 frequency proportional to the sum of fundamental active powers on each phase identified by bits 8:6 (TERMSEL3) in COMPMODE[15:0] register.	
			-100: CF3 frequency proportional to the sum of fundamental reactive powers on each phase identified by bits 8:6 (TERMSEL3) in COMPMODE[15:0] register.	
			-101,110,111: reserved. When set, the ADE7878 behaves like CF3SEL [2:0]=000.	
9	CF1DIS	1	When this bit is set to 1, the CF1 output is disabled. The respective digital to frequency converter remains enabled even if CF1DIS=1. When set to 0, the CF1 output is enabled.	
10	CF2DIS	1	When this bit is set to 1, the CF2 output is disabled. The respective digital to frequency converter remains enabled even if CF2DIS=1. When set to 0, the CF2 output is enabled.	
11	CF3DIS	1	When this bit is set to 1, the CF3 output is disabled. The respective digital to frequency converemains enabled even if CF3DIS=1. When set to 0, the CF3 output is enabled.	
12	CF1LATCH	0	When this bit is set to 1, the content of the corresponding energy registers is latched when a CF1 pulse is generated. See Synchronizing energy registers with CFx outputs section.	
13	CF2LATCH	0	When this bit is set to 1, the content of the corresponding energy registers is latched when a CF2 pulse is generated. See Synchronizing energy registers with CFx outputs section.	
14	CF3LATCH	0	When this bit is set to 1, the content of the corresponding energy registers is latched when a CF3 pulse is generated. See Synchronizing energy registers with CFx outputs section.	
15		0	Reserved. This bit does not manage any functionality.	

Table 40. APHCAL, BPHCAL, CPHCAL registers (addresses 0xE614, 0xE615, 0xE616)

Bit Location	Bit Mnemonic	Default value	Description	
Location	Millelilollic	value		
4-0	XPHCAL[4:0]	00000	These bits introduce a delay equal to XPHCAL cycles, i.e. a number between 0 and 31	
6-5	YPHCAL[1:0]	00	These bits introduce a delay equal to YPHCAL*32+XPHCAL. If current channel compensation (VPHCAL=0), YPHCAL can have any value between 0 and 3. If voltage channel compensation (VPHCAL=1), YPHCAL can be maximum 1 and any number above it is considered equal to 1.	
8-7	ZPHCAL[1:0]	00	The number of cycles introduced as delay only for current channel is equal to ZPHCAL*128+ YPHCAL*32+XPHCAL. For current channel compensation, ZPHCAL can be maximum 2. ZPHCAL bits are always considered 0 for voltage channel compensation.	
9	VPHCAL	0	-0: current channel compensation	
			-1: voltage channel compensation	
15-10		000000	Reserved. These bits do not manage any functionality.	

Table 41. PHSIGN register (address 0xE617)

Bit	Bit	Default	
Location	Mnemonic	value	Description
0	AWSIGN	0	-0: if the active power identified by bit 6 (REVAPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase A is positive.
			-1: if the active power identified by bit 6 (REVAPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase A is negative.
1	BWSIGN	0	-0: if the active power identified by bit 6 (REVAPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase B is positive.
			-1: if the active power identified by bit 6 (REVAPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase B is negative.
2	CWSIGN	0	-0: if the active power identified by bit 6 (REVAPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase C is positive.
			-1: if the active power identified by bit 6 (REVAPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase C is negative.
3	SUM1SIGN	0	-0: if the sum of all phase powers in the CF1 data path is positive.
			-1: if the sum of all phase powers in the CF1 data path is negative.
			Phase powers in the CF1 data path are identified by bits 2,1,0 (TERMSEL1) of COMPMODE[15:0] register and by bits 2,1,0 (CF1SEL) of CFMODE[15:0] register.
4	AVARSIGN	0	-0: if the reactive power identified by bit 7 (REVRPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase A is positive.
			-1: if the reactive power identified by bit 7 (REVRPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase A is negative.
5	BVARSIGN	0	-0: if the reactive power identified by bit 7 (REVRPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase B is positive.
			-1: if the reactive power identified by bit 7 (REVRPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase B is negative.
6	CVARSIGN	0	-0: if the reactive power identified by bit 7 (REVRPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase C is positive.
			-1: if the reactive power identified by bit 7 (REVRPSEL) bit in ACCMODE[7:0] register (total of fundamental) on phase C is negative.
7	SUM2SIGN	0	-0: if the sum of all phase powers in the CF2 data path is positive.
			-1: if the sum of all phase powers in the CF2 data path is negative.
			Phase powers in the CF2 data path are identified by bits 5,4,3 (TERMSEL2) of COMPMODE[15:0] register and by bits 5,4,3 (CF2SEL) of CFMODE[15:0] register.
8	SUM3SIGN	0	-0: if the sum of all phase powers in the CF3 data path is positive.
			-1: if the sum of all phase powers in the CF3 data path is negative.
			Phase powers in the CF3 data path are identified by bits 8,7,6 (TERMSEL3) of COMPMODE[15:0] register and by bits 8,7,6 (CF3SEL) of CFMODE[15:0] register.
15-9		000 0000	These bits are always 0.

Table 42. CONFIG register (address 0xE618)

Bit Location	Bit Mnemonic	Default value	Description	
0	INTEN	0	Integrator Enable. When this bit is set to 1, the internal digital integrator is enabled for use in meters utilizing Rogowski Coils on all 3 phase and neutral current inputs. When this bit is cleared to 0, the internal digital integrator is disabled.	
2,1			Reserved. These bits do not manage any functionality.	
3	SWAP	0	When this bit is set to 1, the voltage channel outputs are swapped with the current channel outputs. Thus, the current channel information will be present in the voltage channel registers and vice versa.	
4	MOD1SHORT	0	When this bit is set to 1, the voltage channel ADCs behave as if the voltage inputs were put to ground.	
5	MOD2SHORT	0	When this bit is set to 1, the current channel ADCs behave as if the voltage inputs were put to ground.	
6	HSDCEN	0	When this bit is set to 1, the HSDC serial port is enabled and HSCLK functionality is chosen at CF3/HSCLK pin. When this bit is cleared to 0, HSDC is disabled and CF3 functionality is chosen at CF3/HSCLK pin.	

Bit Location	Bit Mnemonic	Default value	Description
7	SWRST	0	When this bit is set to 1, a software reset is initiated.
9,8	VTOIA[1:0]	00	These bits decide what phase voltage is considered together with phase A current in the power path:  00=phase A voltage  01=phase B voltage  10=phase C voltage
			11=reserved. When set, the ADE7878 behaves like VTOIA [1:0]=00
11,10	VTOIB[1:0]	00	These bits decide what phase voltage is considered together with phase B current in the power path:  00=phase B voltage  01=phase C voltage  10=phase A voltage  11=reserved. When set, the ADE7878 behaves like VTOIB [1:0]=00
13,12	VTOIC[1:0]	00	These bits decide what phase voltage is considered together with phase C current in the power path:  00=phase C voltage  01=phase A voltage  10=phase B voltage  11=reserved. When set, the ADE7878 behaves like VTOIC [1:0]=00
14		0	Reserved. This bit does not manage any functionality.
15		0	Reserved. This bit does not manage any functionality.

#### Table 43. MMODE register (address 0xE700)

Bit Location	Bit Mnemonic	Default value	Description		
1,0	PERSEL[1:0]	00	-00: Phase A selected as source of the voltage line period measurement		
			-01: Phase B selected as source of the voltage line period measurement		
			-10: Phase C selected as source of the voltage line period measurement		
			-11:Reserved. When set, the ADE7878 behaves like PERSEL[1:0]=00		
2	PEAKSEL[0]	1	PEAKSEL[2:0] bits can all be set to 1 simultaneously to allow peak detection on all 3 phases simultaneously. If more than one PEAKSEL[2:0] bits are set to 1, then the peak measurement period indicated in PEAKCYC[7:0] register decreases accordingly because zero crossings are detected on more than one phase.		
			When this bit is set to 1, phase A is selected for the voltage and current peak registers		
3	PEAKSEL[1]	1	When this bit is set to 1, phase B is selected for the voltage and current peak registers		
4	PEAKSEL[2]	1	When this bit is set to 1, phase C is selected for the voltage and current peak registers		
7-5		000	Reserved. These bits do not manage any functionality.		

Table 44. ACCMODE Register (Address 0xE701)

Bit	Bit	Default	
Location	Mnemonic	value	Description
1,0	WATTACC[1:0]	00	-00: signed accumulation mode of the total and fundamental active powers
			-01: reserved. When set, the ADE7878 behaves like WATTACC[1:0]=00
			-10: reserved. When set, the ADE7878 behaves like WATTACC[1:0]=00
			-11: absolute accumulation mode of the total and fundamental active powers
3,2	VARACC[1:0]	00	-00: signed accumulation of the total and fundamental reactive powers
			-01: reserved. When set, the ADE7878 behaves like VARACC[1:0]=00
			-10:the total and fundamental reactive power are accumulated depending on the sign of the total and respective fundamental active power:
			-if the active power is positive, the reactive power is accumulated as is
			-if the active power is negative, the reactive power is accumulated with reversed sign
			-11: reserved. When set, the ADE7878 behaves like VARACC[1:0]=00
5,4	CONSEL[1:0]	00	These bits are used to select the inputs to the energy accumulation registers:
			-00: 3 phase 4 wires with 3 voltage sensors

Bit Location	Bit Mnemonic	Default value	Description					
Location	winemonic	value	•	res delta connection				
			·	-10: 3 phase 4 wires with 2 voltage sensors				
			·	-11: 3 phase 4 wires delta connection				
			Energy					
			Registers					
			AWATTHR, AFWATTHR	VA x IA	VA x IA	VA x IA	VA x IA	
			BWATTHR, BFWATTHR	VB x IB	0	VB=-VA-VC VB x IB	VB=-VA VB x IB	
			CWATTHR, CFWATTHR	VC x IC	VC x IC	VC x IC	VC x IC	
			AVARHR, AFVARHR	VA x IA'	VA x IA'	VA x IA'	VA x IA'	
			BVARHR, BFVARHR	VB x IB'	0	VB=-VA-VC VB x IB'	VB=-VA VB x IB'	
			CVARHR, CFVARHR	VC x IC'	VC x IC'	VC x IC'	VC x IC'	
			AVAHR	VA <sub>RMS</sub> x IA <sub>RMS</sub>	VA <sub>RMS</sub> x IA <sub>RMS</sub>	VA <sub>RMS</sub> x IA <sub>RMS</sub>	VA <sub>RMS</sub> x IA <sub>RMS</sub>	
			BVAHR	VB <sub>RMS</sub> x IB <sub>RMS</sub>	0	VB <sub>RMS</sub> x IB <sub>RMS</sub>	VB <sub>RMS</sub> x IB <sub>RMS</sub>	
			CVAHR	VC <sub>RMS</sub> x IC <sub>RMS</sub>	VC <sub>RMS</sub> x IC <sub>RMS</sub>	VC <sub>RMS</sub> x IC <sub>RMS</sub>	VC <sub>RMS</sub> x IC <sub>RMS</sub>	
6	REVAPSEL	0	-0: The total activ	e power on phase A	is used to trigger bit	6 (REVAPA) in STATUS	50[31:0].	
				e power on phase B	55			
				e power on phase C				
				ntal active power on I				
				ntal active power on				
_				ntal active power on				
7	REVRPSEL	0		tive power on phase				
				tive power on phase				
				tive power on phase				
				ntal reactive power o				
				ntal reactive power ontal reactive power o	•			
			The fundamen	itai reactive power o	ii piiase C is used to	ingger bit 12 (KEVKP	C) III 3 [AT U3U[3 1:U].	

Table 45. LCYCMODE register (address 0xE702)

Bit	Bit	Default	Description
Location	Mnemonic	value	
0	LWATT	0	-0: the watt-hour accumulation registers (AWATTHR, BWATTHR, CWATTHR, AFWATTHR, BFWATTHR, CFWATTHR) are placed in regular accumulation mode.
			-1: the watt-hour accumulation registers (AWATTHR, BWATTHR, CWATTHR, AFWATTHR, BFWATTHR, CFWATTHR) are placed into line-cycle accumulation mode.
1	LVAR	0	-0: the var-hour accumulation registers (AVARHR, BVARHR, CVARHR, AFVARHR, BFVARHR, CFVARHR) are placed in regular accumulation mode.
			-1: the var-hour accumulation registers (AVARHR, BVARHR, CVARHR, AFVARHR, BFVARHR, CFVARHR) are placed into line-cycle accumulation mode.
2	LVA	0	-0: the va-hour accumulation registers (AVAHR, BVAHR, CVAHR) are placed in regular accumulation mode.
			-1: the va-hour accumulation registers (AVAHR, BVAHR, CVAHR) are placed into line-cycle accumulation mode.
3	ZXSEL[0]	1	<ul> <li>-0: phase A is not selected for zero crossings counts in the line cycle accumulation mode.</li> <li>-1: phase A is selected for zero crossings counts in the line cycle accumulation mode. If more than one phase is selected for zero crossing detection, the accumulation time is shorten accordingly</li> </ul>
4	ZXSEL[1]	1	-0: phase B is not selected for zero crossings counts in the line cycle accumulation mode1: phase B is selected for zero crossings counts in the line cycle accumulation mode.
5	ZXSEL[2]	1	-0: phase C is not selected for zero crossings counts in the line cycle accumulation mode1: phase C is selected for zero crossings counts in the line cycle accumulation mode.
6	RSTREAD	1	-0: Read-with-reset of all energy registers is disabled. This bit should be cleared to 0 when bits 2,1,0

# **Preliminary Technical Data**

Bit Location	Bit Mnemonic	Default value	Description
			(LWATT, LVAR, LVA) are set to 11: Read-with-reset of all xWATTHR, xFWATTHR, xVARHR, xFVARHR, xVAHR registers (x=A,B,C) is enabled. This means a read of those registers resets them to 0.
7		0	Reserved. This bit does not manage any functionality.

#### Table 46. HSDC\_CFG register (address 0xE706)

Bit Location	Bit Mnemonic	Default value	Description
0	HCLK	0	-0: HSCLK is 8MHz
			-1: HSCLK is 4MHz
1	HSIZE	0	-0: HSDC transmits the 32bit registers in 32bit packages, most significant bit first.
			-1: HSDC transmits the 32bit registers in 8bit packages, most significant bit first.
2	HGAP	0	-0: no gap is introduced between packages.
			-1: a gap of 7 HCLK cycles is introduced between packages.
4,3	HXFER[1:0]	00	-00=HSDC transmits all 16 registers shown in Billable registers List
			-01= HSDC transmits 7 instantaneous values of currents and voltages
			-10= HSDC transmits 9 instantaneous values of phase powers
			-11=reserved. If set, the ADE7878 behaves as if HXFER[1:0]=00.
5	HSAPOL	0	-0: HSACTIVE output pin is active LOW.
			-1: HSACTIVE output pin is active HIGH
7,6		00	Reserved. These bits do not manage any functionality.

#### Table 47. LPOILVL register (address 0xEC00)

Bit Location	Bit Mnemonic	Default value	Description
2-0	LPOIL[2:0]	111	Threshold is put at a value corresponding to full scale multiplied by LPOIL/8
7-3	LPLINE[4:0]	000	The measurement period is (LPLINE+1)/50 seconds

#### Table 48. CONFIG2 register (address 0xEC01)

Bit Location	Bit Mnemonic	Default value	Description	
0 EXTREFEN		0	When this bit is 0, signifies the internal voltage reference is used in the ADCs. When this bit is 1, an external reference is connected to the pin 17 REF in/out	
1	I2C_LOCK	0	When this bit is 0, the $\overline{SS}$ /HSA pin can be toggled 3 times to activate the SPI port. If I <sup>2</sup> C is the active serial port, this bit must be set to 1 to lock it in. From this moment on, spurious togglings of	
			the $\overline{SS}$ pin and an eventual switch into using SPI port is no longer possible. If SPI is the active serial port, any write to CONFIG2[7:0] register locks the port. From this moment on, a switch into using I <sup>2</sup> C port is no longer possible.	
			Once locked, the serial port choice is maintained when the ADE7878 changes PSMx, x=0,1,2,3 power modes.	
7-2		0	Reserved. These bits do not manage any functionality.	

## **OUTLINE DIMENSIONS**

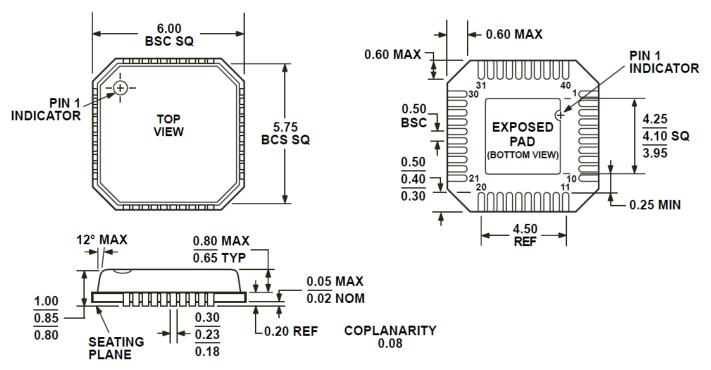


Figure 80. 40LFCSP (6 x 6 mm), CP-40-1 Dimensions shown in millimeters

#### **ORDERING GUIDE**

Model	Temperature Range	Package Description	Package Option
ADE7878ACPZ	−40°C to +85°C	40-Lead LFCSP	CP-40-1
ADE7878ACPZ-RL	−40°C to +85°C	40-Lead LFCSP, Reel	CP-40-1
EVAL-ADE7878EBZ		ADE7878 evaluation board	
ADE7878ACPZ-REF		ADE7878 Reference Design	

**Preliminary Technical Data** 

**ADE7878** 

# NOTES

**Preliminary Technical Data** 

# NOTES

Prelimii	ary	Tech	nical	Data
----------	-----	------	-------	------

## **NOTES**